

TOSHIBA

Toshiba 24D154 DG Series Online Manual

Led backlight lcd satellite tv

1	
Table Of Contents	
2	
3	
4	
5	
6	
7	
8	
9	
10	
11	
12	
13	
14	
15	
16	
17	

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55

--

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links



TOSHIBA
ONLINE MANUAL

Leading Innovation >>>

24D154*DG / 24W154*DG

LED Backlight LCD Satellite TV

During the life of your TV firmware updates will be made available to

ensure that your TV maintains optimum performance.

You can download the latest version of firmware from

Some features listed in this document are limited due to local legislation and may not be available in all countries.

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba 24D154 DG Series

[Satellite TV System Toshiba 55L544 DG Series Online Manual](#)

Led backlight lcd satellite tv (60 pages)

[Satellite TV System Toshiba 32L344*DG Quick Start Manual](#)

Led backlight lcd satellite tv (26 pages)

Summary of Contents for Toshiba 24D154 DG Series

Page 1 During the life of your TV firmware updates will be made available to ensure that your TV maintains optimum performance. You can download the latest version of firmware from www.toshiba-om.net/firmware.php Some features listed in this document are limited due to local legislation and may not be available in all countries.

[Page 2: Table Of Contents](#)

Contents Safety Precautions4 Guide22 Air Circulation 4 Viewing Info Banner 22 Heat Damage.....4 Electronic Programme Guide.....22 Mains Supply4 Language Selection23 Warning 4 Language Settings23 Do 4 Preferred

Page 3 Contents Setting Sleep Timer 31 Mode.....45 Setting Programme Timers 31 DVD Mode46 Adding a Timer.....31 Handling Discs46 Editing a Timer31 Cleaning Discs46 Deleting a Timer.....31 DVD - Features46 Recording Configuration

[Page 4: Safety Precautions](#)

Safety Precautions This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken to obtain the best results and for safety to be assured. Please read the points below for your own safety. They are of a general nature, intended to help with all electronic consumer products.

[Page 5: Installation And Important Information](#)

Furthermore, under no circumstances shall Toshiba be liable for any consequential loss and/or damage including but not limited to the following, loss of profit, interruption of business, the loss of recorded data whether caused during normal operation or misuse of the product.

[Page 6: Important Safety Information](#)

Important safety information • Any function related to the digital television (with the DVB logo) is available only within the country or area where such signals are transmitted. Verify with the salesperson if it is possible to receive a DVB - T/C/S/S2 signal in the area where you live.

[Page 7: Fitting Or Removing The Stand](#)

Fitting or Removing the stand Fitting or Removing the stand (1) Carefully lay the front of the unit face down on a flat, cushioned surface with the stand hanging over the edge. (2) To fit the stand use the screws supplied. (3) Remove the screws fixing the stand (4) After the screws are removed, hold the TV and pull out the stand by applying a firm outwards pull from the TV to remove the stand.

[Page 8: The Remote Control \(Tv - Dvd\)](#)

The Remote Control (TV - DVD) Simple at-a-glance reference of the remote control. Standby 15. Rapid reverse Standby Rapid reverse 16. Programme recording Numeric buttons Numeric buttons 17. Pause / Timeshift recording TV-AV / Channel list / Switches Pause among broadcast types 18.

[Page 9: Connecting External Equipment](#)

Connecting External Equipment Before connecting any external equipment, remove the mains plug from the wall socket. (*) Number of these inputs may change according to the model of your TV. Before running first time installation, any connected devices Note: Although this TV is able to connect to HDMI equipment, need to be set to standby mode.

[Page 10: Connecting An Hdmi ® Or Dvi Device To The Hdmi Input](#)

Connecting an HDMI or DVI Device to the HDMI Input ® The HDMI inputs on your TV receive digital audio and To Connect a DVI Device uncompressed digital video from an HDMI source device Connect an HDMI-to-DVI cable (HDMI type A connector) to or uncompressed digital video from a DVI (Digital Visual the HDMI input socket and audio cables to the AUDIO inputs Interface) source device.

[Page 11: Connecting A Computer](#)

Connecting a Computer Connecting a USB Memory To Connect a Computer To Connect a USB Flash Drive • You can connect a USB Flash Drive to your TV by using With either an RGB/PC or an HDMI connection, you can watch the USB input/inputs on the TV.

[Page 12: Power Save Mode](#)

Power Save Mode Environmental Information This television is designed to be environment friendly. You not only help to save the environment but also you can save money by reducing electricity bills thanks to the energy efficiency feauture of this TV. To reduce energy consumption, you should take the following steps: You can use Power Save Mode setting, located in the Picture Settings menu.

[Page 13: Controlling The Tv](#)

Controlling the TV A wide variety of external equipment can be connected via the sockets located on the side and back of the TV. Whilst all the necessary adjustments and controls for the TV are made using the remote control, the menu wheel on the left side of the TV may be used for some functions.

[Page 14: Initial Installation](#)

Initial Installation Before switching on the TV, put your decoder and media recorder to Standby if they are connected and ensure the aerial/cable and/or Satellite dish is connected to your TV. To set up the TV, use the buttons on the remote control as detailed on The Remote Control page.

[Page 15](#) Initial Installation - continued You can select Network, Frequency, Network Note: You can press MENU button to cancel. ID and Search Step from this screen. For 11. If you select Satellite option from the Search Type highlighting lines you see, use Up or Down button. screen, Antenna Type menu will be displayed.

[Page 16](#) Initial Installation - continued SatcoDX Preset List: When you start a search a message will appear asking whether you want to load preset list or not. This function is correct for countries Germany and Austria. For other countries select No and channel order will be applied if applicable.

[Page 17: Auto Tuning](#)

Auto Tuning button to cancel the process. In such a case, located Auto Tuning channels are stored. As new services are broadcast, it will be necessary to Note: Menu list of available features may change depending retune the television in order to view them. on the model.

[Page 18: Manual Tuning, Analogue Fine Tuning](#)

Manual Tuning, Analogue Fine Tuning The television can be tuned-in manually using Manual Search feature. Digital Aerial Manual Search Analogue Manual Search The feature is available for service engineers or The television can be tuned-in manually. For example: can be used for direct channel entry if the multiplex if the television cannot be connected to a media channel is known.

[Page 19: Analogue Fine Tune](#)

Manual Tuning, Analogue Fine Tuning - continue The television can be tuned-in manually using Manual Search feature. • After selecting search type as Satellite, you can set the desired options and press OK button to search. In satellite manual scan, you can enter frequency, polarisation, symbol rate values and change network channel scan and satellite options by using left/right buttons or numeric buttons on the remote.

[Page 20: General Operation](#)

General Operation Stereo and Bilingual Transmissions Standby Notifications If the TV switches off while in No Signal mode, the If stereo or dual language broadcasts are transmitted, the word Stereo or Dual will appear on the screen each time following on-screen message will be displayed on the positions are changed, disappearing after a few seconds.

[Page 21: Channel List, Sorting Programmes, Programme Locking](#)

Channel List, Sorting Programmes, Programme Locking You can view stored channels and sort them by using the Channel List feature. Viewing Channel List Deleting a Channel You can press GREEN button to tag/untag all The channel order may be changed to suit your channels;...

[Page 22: Guide](#)

Viewing Info Banner, Electronic Programme Guide Viewing Info Banner • Press YELLOW button for zooming to a programme. • Press BLUE button to display filtering options. • Press "INFO - " button. The information screen will appear giving details of the channel and •...

[Page 23: Language Selection](#)

Language Selection Language Settings Using this menu you can adjust the preferred language settings. Some features may not be available. • Press MENU button and select Settings by using Left or Right button. • Select Language and press OK to view this menu. Select the desired language by using Left or Right button.

[Page 24: Digital Settings - Parental Control, Menu Lock, Set Pin](#)

Digital Settings - Parental Control, Menu Lock, Set PIN You can view or set parental preferences of your TV. Viewing Parental Control Menu Note: Maturity Lock is not available in all countries. Child Lock Press MENU button and select the Settings by using Left or Right button.

[Page 25: Configuring Picture Settings](#)

Configuring Picture Settings You can configure picture settings of your TV by using Picture Settings menu. Configuring Picture Settings Colour You can use different picture settings in detail. You Sets the colour value, adjusting the colours. Press Left or Right button to adjust the colour. can customize current picture mode settings as desired.

[Page 26: Reset](#)

Configuring Picture Settings - continued Picture Zoom: Sets the picture size to Auto, Full, 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Press Left or Right button to change the setting. Film Mode (optional): Films are recorded at a different number of frames per second to normal television programmes.

[Page 27: Changing Picture Format](#)

Changing Picture Format Press "SCREEN - " button repeatedly to select between Auto(*), Full(**), 16:9, Subtitle, 14:9, 14:9 Zoom, 4:3 or Cinema. Using the special functions to change the size of the displayed image (i.e. changing the height/width ratio) for the purposes of public display or commercial gain may infringe on copyright laws.

[Page 28: Configuring Pc Picture Settings](#)

Configuring PC Picture Settings PC Picture Settings (*) Dot Clock (*) While in VGA/PC mode, some items in Picture Dot Clock adjustment corrects the interference menu will be unavailable. Instead, VGA mode settings that appear as vertical banding in dot intensive will be added to the Picture Settings while in VGA/ presentations like spreadsheets or paragraphs or PC mode.

[Page 29: Configuring Sound Settings](#)

Configuring Sound Settings You can configure sound settings of your TV by using Sound Settings menu. Configuring Sound Settings Balance (Only for speaker) Sound settings can be configured according to your This setting is used for emphasizing left or right speaker personal preferences.

[Page 30: Settings Menu Operation, Conditional Access](#)

Settings Menu Operation, Conditional Access Configuring Your TV's Settings IMPORTANT: Insert or remove the CAM only when the TV is SWITCHED OFF. Detailed settings can be configured to suit your • In order to watch certain digital channels, a conditional personal preferences.

[Page 31: Setting Timers](#)

Setting Timers Timers Playback: Controls the permission for the playback of the programme that will be recorded. There are three To view Timers menu, press MENU button and options available, Use parental settings, Disallowed select Settings by using Left or Right button. Press and Allowed.

[Page 32: Recording Configuration](#)

Recording Configuration This feature is not available in all countries. For the countries where this feature is available a USB connected storage device will be required. Recording Configuration IMPORTANT: Note 1: ALL the data stored on the USB storage You can configure recording preferences using this device will be lost and then the disk format will be menu.

[Page 33: Setting Date/Time](#)

Setting Date/Time Source Settings Configuring Date/Time Settings Configuring Source Settings You can configure date/time preferences by using You can enable or disable selected source options. The TV will not switch to the disabled source options when the this menu screen. "SOURCE - "...

[Page 34: Configuring Satellite Settings](#)

Satellite Settings Configuring Satellite Settings Select Satellite settings in the Settings menu to configure satellite settings. Press OK button. Satellite List: To view the list of available satellites select this option. You can add, delete or edit the satellites in the list. Antenna Installation: You can change antenna settings and start a new satellite scan.

[Page 35: Other Controls](#)

Other Controls Configuring Other Settings - General Blue Background You can configure the settings of your TV. Select If the signal is weak or absent, the TV will automatically Settings from main menu and press OK to view the change to a blue screen. To enable this, set Blue Settings menu.

[Page 36: Audio Description](#)

Other Controls - continued Audio Description Power Up Mode Audio description refers to an additional narration This setting configures the power up mode preference. track for blind and visually impaired viewers of visual Standby: The TV always powers up in Standby mode. media, including television and movies.

[Page 37: Usb Record Feature](#)

USB Record Feature This feature is not available in all countries. For the countries where this feature is available a USB connected storage device will be required. This feature allows you to record and play back About the USB Record Feature digital broadcast contents stored on a USB storage •...

[Page 38: Using Media Browser](#)

To display Media Browser window, press the " " Toshiba cannot and does not grant such permission. button on the remote control. The Media Browser menu is also accessible from the main menu. Press •...

[Page 39: Playing Mp3 Files](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device. Playing MP3 Files Viewing JPEG Files To play mp3 files from a USB memory, you can use To view photo files from a USB Memory, you can use this menu screen.

[Page 40: Slideshow Feature](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device. Slideshow Feature Red button: Sort files by name. Play (button): Start to play all files listed beginning You can use this feature to display all images with the selected one.

[Page 41: Recordings Library](#)

Using Media Browser - continued This TV allows you to enjoy photo, music or video files stored on a USB device. Recordings Library Resume (button): Resumes the recording. Details (INFO - button): Displays information on You can play back, edit or delete previously recorded the selected recording.

[Page 42: Analogue Only Text Services](#)

- For further information on your particular text system(s), see the broadcast text index page or, consult your local Toshiba dealer. Below is a guide to the functions of the remote control text buttons. Accessing Sub-Pages If a text page has sub-pages, press Left/Right buttons or enter the sub-page number 0001, 0002, 0003 etc.

[Page 43: Appendix A: Pc Input Typical Display Modes](#)

Appendix A: PC Input Typical Appendix B: AV and HDMI Signal Display Modes Compatibility (Input Signal Types) The following table is an illustration of some of the Source Supported Signals Available typical video display modes. Some, due to the display PAL 50/60 native resolution, are scaled automatically to enable correct image to be displayed.

[Page 44: Appendix C: Pin Information](#)

Appendix C: PIN Information Before connecting any external equipment, turn off all main power switches. If there is no switch, remove the mains plug from the wall socket. Signal information for Mini D-sub 15 pin connector Pin No. Signal name Pin No.

[Page 45: Mode](#)

Appendix D: Supported File Formats for USB Mode Media Extension Format Notes Video .mpg, MPEG1-2 MPEG1: 768x576 @ 30P, MPEG2:1920x1080 @ 30P .mpeg .vob MPEG2 .mp4 MPEG4, Xvid, H.264 .mkv H.264, 1920x1080 @ 30P MPEG4,VC-1 .avi MPEG2, MPEG4, Xvid, H.264 .flv H.264/VP6/ H.264/VP6: 1920x1080 @ 30P...

[Page 46: Dvd Mode](#)

DVD Mode If your television has a built-in DVD module. The following instructions are for correct operation of the integrated DVD unit. • Multi-Audio (up to 8) support (according to disc Warning: Risk of exposure to radiation from • content). class 1/class 3b visible and invisible laser beams.

[Page 47: How To Watch A Dvd](#)

DVD Mode General Operation How to watch a DVD Notes on DVD Playback Note: DVD mode cannot be accessed unless a DVD is a. No sound will be heard during Rapid advance or inserted or a DVD control button is pressed. Rapid reverse.

[Page 48: Dvd Mode Configuration](#)

DVD Mode General Operation DVD Mode Configuration Preferences 1. While in DVD source, press "MYBUTTON1 - " These are the DVD mode preferences. Menu contents button to access DVD Setup menu. This is only detailed below: possible if there is no playback. Default If you choose Reset and press OK, the factory-presets are loaded.

[Page 49: The Dvd Picture Quality Is Poor](#)

DVD Mode Troubleshooting & Tips The DVD picture quality is poor protection technology must be authorized by Rovi Corporation, and is intended for home and other 1. Make sure the DVD disc surface is not damaged limited viewing uses only unless otherwise authorized (no

scratches, fingerprints etc.).

[Page 50: Appendix E: Dvd Mode Supported File Formats](#)

Appendix E: DVD Mode Supported file formats
Format Supported File Media Extension
(Maximum resolution/Bit rate etc.)
Video Audio MPEG Layer MPEG1 .mpg/ .dat/ 1/2/3 .vob
MPEG2 MPEG2 Movie XviD/ 3ivx PCM/MP3 XviD Version up to: 1.1.2 MPEG4 PCM/MP3 .avi MS ISO
PCM/MP3 Support SP and ASP MPEG4...

[Page 51](#) DVD Mode You can operate DVD, movie CD, music or picture CD's content by using the buttons on your remote control. Below are the main functions of commonly used remote control buttons. Buttons on Movie Picture the Remote Music Playback Playback Playback Playback...

[Page 52: Specifications And Accessories](#)

Specifications and Accessories
Broadcast Systems/Channels DVB-T MPEG2, DVB-T MPEG4 HD
DVB-C MPEG2, DVB-C MPEG4 DVB-S / S2 MPEG2, DVB-S / S2 MPEG4 HD Video Input PAL, SECAM, NTSC 4.43 Stereo Nicam External Connections 1-SCART 1 Input 21-pin SCART RGB, A/V 2-SCART-S (via SCART 1) Input 21-pin SCART...

[Page 53: License Information](#)

For more detailed information about the collection and recycling programmes available in your country, please visit our website (www.toshiba.eu/recycling) or contact your local city office or the shop where you purchased the product. Disposal of batteries and/or accumulators The crossed out wheeled dust bin symbol indicates that batteries and/or accumulators must be collected and disposed of separately from household waste.

[Page 54: Q & A Section](#)

Q & A Section Question Answer Check if the TV is not in standby mode Why is there no sound or picture? Check the mains plug and all mains connections Check if the volume has not been turned off or sound mute has Why is there a picture but no sound? not been selected Why does the sound come only from...

[Page 55](#) Restriction of Chemicals), entered into force on 1 June 2007, with phased deadlines to 2018. Toshiba will meet all REACH requirements and is committed to provide our customers with information about the presence in our articles of substances included on the candidate list according to REACH regulation.

This manual is also suitable for:

[24w154 dg series](#)