

Connecting A Digital Audiosystem; Connecting An Audiosystem - Toshiba REGZA 26HL67 Owner's Manual

Integrated high definition lcd television

1
2
3
4
5
6
Table Of Contents
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66



-


[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

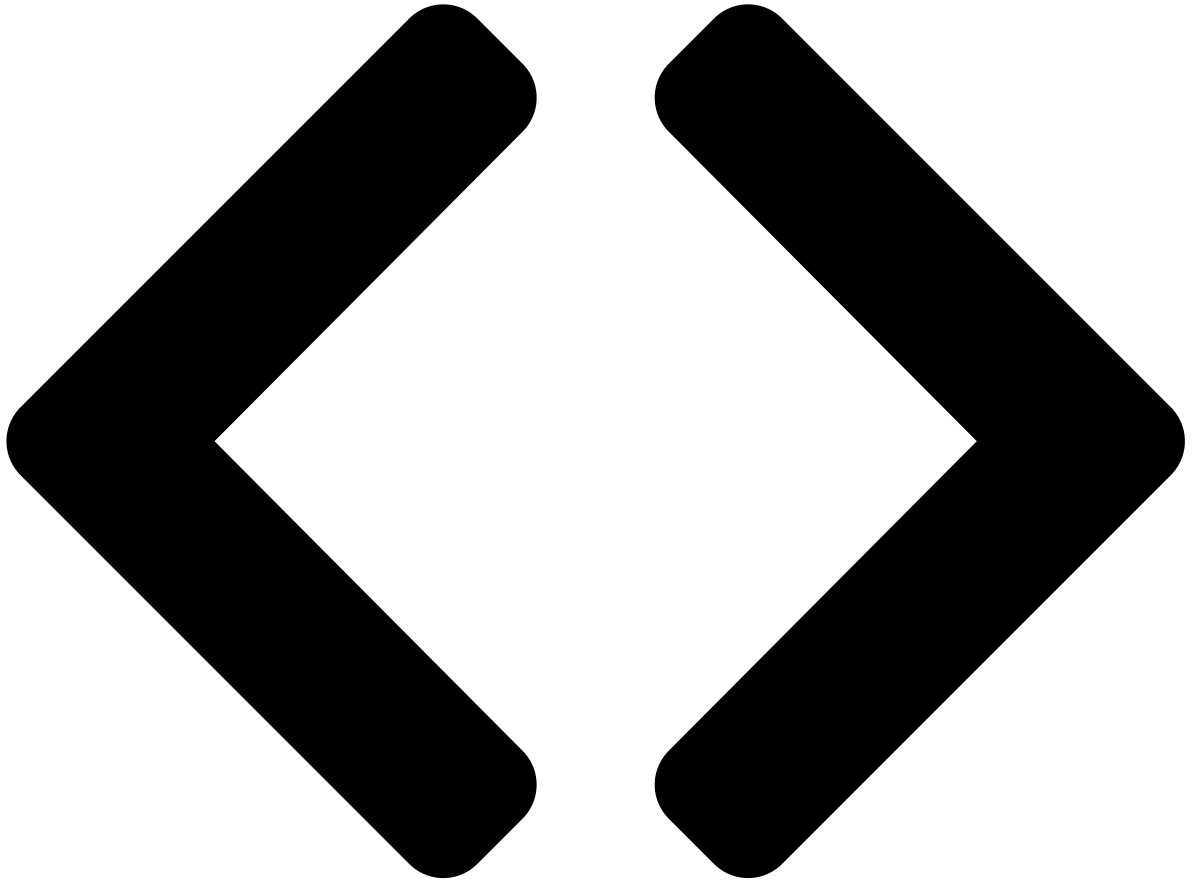

Connecting a digital audiosystem

The TV's DIGITAL

AUDIO

OUTterminal

outputs

a Dolby_*

Digital_P_

or 2-channel

down-mixed

PCM (pulse-code

modulation)

signal for use with an external Dolby_* Digital

decoder

or other external audio system with optical audio

input.

You will need:

 
- optical audio cable (Use an optical audio cable that has the

larger "TosLink" connector and not the smaller "mini-

optical" connector.)

Connecting a digital audio system

The TV's **DIGITAL AUDIO OUT** terminal outputs a Dolby®*

Digital  or 2-channel down-mixed PCM (pulse-code

modulation) signal for use with an external Dolby® Digital

decoder or other external audio system with optical audio

input.

You will need:

- optical audio cable (Use an optical audio cable that has the

Note:

- Some audio systems may not be compatible with standard digital audio sources because they are not designed to properly process digital bitstream signals. To ensure proper operation, use standard digital audio sources properly, creating a high quality audio signal for use with speakers or headphones. This is not covered by your TV's warranty.
- The **DIGITAL AUDIO OUT** terminal is not intended for use with digital audio sources because they are not designed to properly process digital bitstream signals.

* Manufactured under license from Dolby, and the double-D symbol is a registered trademark of Dolby.

TV lower backpanel

Connecting a digital audio system

To control the audio:

1

Turn on the TV and the digital audio device.

2 Press the **MENU** button on the TV's remote control and open the **Audio** menu.

3

Highlight **Audio Setup** and press **ENTER**.


4

In the **Optical Output Format** field, select either **Dolby Digital** or **PCM**, depending on your device (see "Selecting the optical audio output format" on page 46).

The TV's **DIGITAL AUDIO OUT** terminal outputs a Dolby® Digital or 2-channel down-mixed PCM (pulse-code modulation) signal to use with an external Dolby® Digital decoder or other external audio system with optical audio input.

You will need:

- optical audio cable (Use an optical audio cable that has the larger TosLink connector and not the smaller "mini-optical" connector.)

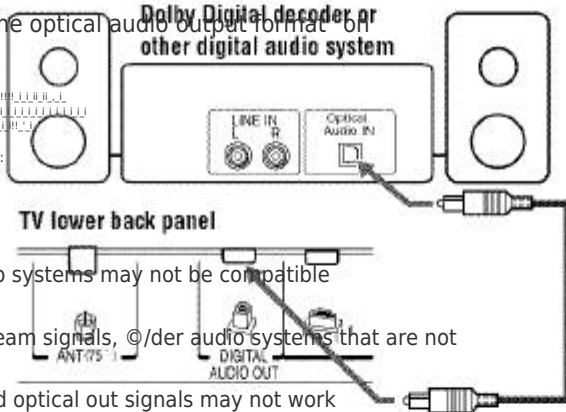

Note:

- Some audio systems may not be compatible with Dolby Digital bitstream signals, and other audio systems that are not compatible with standard optical out signals may not work properly, creating a high noise level that may damage speakers or headphones. THIS DAMAGE IS NOT COVERED BY YOUR WARRANTY.

To control the audio:

1 Turn on the TV and the digital audio device.

* The DIGITAL AUDIO OUT terminal may not output some digital audio sources because of copyright restrictions.

2 Press the **MENU** button on the TV's remote control and open the **Audio** menu.

* Manufactured under license from Dolby Laboratories.

Dolby, and the Double-D symbol are registered trademarks of Dolby Laboratories.


Connecting an analog audio system

This connection allows you to use external speakers with an external analog audio amplifier to adjust the sound level.

You will need:

- standard audio cables

4 In the **Optical Output Format** field, select either **Dolby Digital** or **PCM**, depending on your device (see "Selecting the optical audio output format" on page 46).

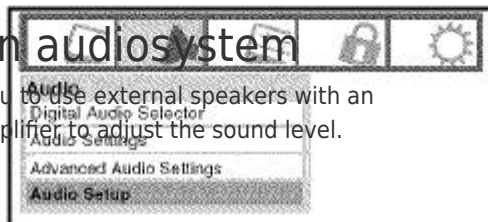

Audio Setup	
PC Audio	No
HDMI 1 Audio	Auto
MTS	Stereo
Language	English
Optical Output Format	Dolby Digital

To control the audio:

1

Note:

- Some audio systems may not be compatible with standard optical out signals, creating a high noise level that may damage speakers or headphones. THIS DAMAGE IS NOT COVERED BY YOUR WARRANTY.
- The **DIGITAL AUDIO OUT** terminal may not output some digital audio sources because of copyright restrictions.


* Manufactured under license from Dolby Laboratories.

Connecting an analog audio amplifier

This connection allows you to use external speakers with an external analog audio amplifier to adjust the sound level.

You will need:

- standard audio cables

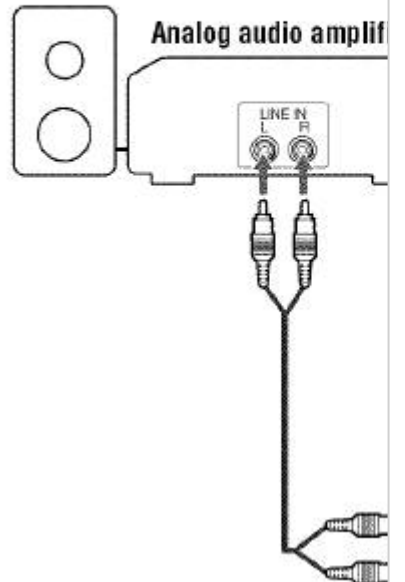

To control the audio:

1 Turn on the TV and the external analog audio amplifier.

2 Minimize the sound volume on the external analog audio amplifier's remote control.

Turn on the TV and the stereo amplifier.
Minimize the sound volume from the TV's built-in speakers and control the volume level using the amplifier's remote control.

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
15
16
17
18
19
20
21
22

Related Manuals for Toshiba REGZA 26HL67

[LCD TV Toshiba Regza 26HL67 Owner's Manual](#)

Integrated high definition lcd television (75 pages)

[LCD TV Toshiba 26HL47 Owner's Manual](#)

Integrated high definition lcd television (74 pages)

[LCD TV Toshiba REGZA 26HL67 Manuel D'utilisation](#)

Toshiba flat panel television user manual (66 pages)

[LCD TV Toshiba Regza 26HL67 Owner's Manual](#)

Toshiba integrated high definition lcd television owner's manual 26hl67, 32hl67, 32hl67u, 37hl67, 42hl67 (66 pages)

[40L3400U Connecting A Digital Audio System](#)

Toshiba 40L3400U

[Regza 42RV535U Connecting A Digital Audio System](#)

Toshiba Regza 42RV535U

[26AV52R Connecting A Digital Audio System](#)

Toshiba 26AV52R

[32E20U Connecting A Digital Audio System](#)

Toshiba 32E20U

[40G30U Connecting A Digital Audio System](#)

Toshiba 40G30U

[26AV52U Connecting A Digital Audio System](#)

Toshiba 26AV52U

[55XL700A Connecting An Amplifier Equipped With A Dolby Digital Decoder](#)

Toshiba 55XL700A

[37HL66 Connecting A Digital Audio System](#)

Toshiba 37HL66

This manual is also suitable for:

[Regza 32gl67](#)[Regza 32hl67u](#)[Regza 37hl67](#)[Regza 42hl67](#)