



# Installing the Remote Control Batteries; Remote Control Effective Range - Toshiba REGZA 26HL67 Owner's Manual

Integrated high definition lcd television



1

2

3

4

5

6

Table Of Contents

7

8

9

10

11

12

13

14

15

16

17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66



•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks







## Preparing the remote control for use

Your TV remote control can operate your TV and many other devices such as cable converter boxes, satellite receivers, VCRs, DVD players, and HTIBs (home theater in a box), even if they are different brands.

If you have a Toshiba device:

Your TV remote control is preprogrammed to operate most Toshiba devices (see page 24).

If you have a non-Toshiba device or a Toshiba device

that the remote control is not preprogrammed to

to

### Preparing the remote control for use

Your TV remote control can operate your TV and many other devices such as cable converter boxes, satellite receivers, VCRs, DVD players, and HTIBs (home theater in a box), even if they are different brands.

**If you have a Toshiba device:**

- Always remove batteries from the remote control if they are dead or if the remote control is not used for an extended period of time. This prevents the batteries from leaking into the battery compartment.

### Remote control operation

For optimum performance, aim the remote control at the TV and make sure there is a clear line of sight between the remote control and the TV.

operate:

You can program tile TV remote control so it will operate tile other device (tY\_ pages 22-26).

# Installing the remote control batteries

## Chapter 3: Using the remote control

1

Remove tile battery cover from tile back of tile remote control. and Squeeze tab lift cover.

### Preparing the remote control for use

2

Install two "AAA" size batteries, making sure to match the + and - signs on the batteries to the signs on the battery compartment.

Your TV remote control can operate your TV and many other devices such as cable converter boxes, satellite receivers, VCRs, DVD players, and HTIBs (home theater in a box), even if they are different brands.

#### If you have a Toshiba device:

Your TV remote control is preprogrammed to operate most Toshiba devices (see page 24).

Reinsert the battery cover in the remote control until the tab snaps.

#### If you have a non-Toshiba device or a Toshiba device that the remote control is not preprogrammed to operate:

Caution: Never throw batteries into a fire.

Note:

- Be sure to use AAA size batteries in the TV remote control so it will operate the other devices (pages 22-26).
- ° Dispose of batteries in a designated disposal area.

Batteries should always be disposed of with the environment in mind. Always dispose of batteries in accordance

with applicable laws and regulations.

### Installing the remote control batteries

If the remote control does not operate correctly, or if the operating range becomes reduced, replace batteries with new ones.

1 Remove the battery cover from the back of the remote control.

When necessary to replace batteries in the remote control,

always replace both batteries with new ones. Never mix battery types or use new and used batteries in combination.

° Always remove batteries from the remote control if they are dead or if the remote control is not to be used for an extended period of time. This will prevent battery acid from leaking into the battery compartment.

2 Install two "AAA" size batteries, making sure to match the + and - signs on the batteries to the signs on the battery compartment.

For optimum performance,

aim the remote control directly at

the TV and make sure there is no obstruction between

the

remote control and the TV.

3 Reinsert the battery cover in the remote control until the tab snaps.

Caution: Never throw batteries into a fire.



16,4 ft (5m)

Note:

- Always remove batteries from dead or if the remote control extended period of time. This will prevent battery acid from leaking into the battery compartment.

### Remote control effective range

For optimum performance, aim the remote control directly at the TV and make sure there is no obstruction between the remote control and the TV.

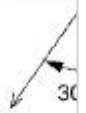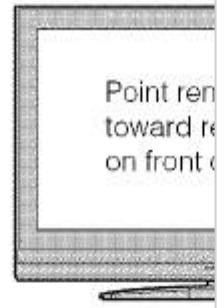

16.

## Table of Contents

[Previous Page](#)  
[Next Page](#)

1  
...  
17  
18  
19  
20  
21  
22  
23  
24

## Related Manuals for Toshiba REGZA 26HL67

[LCD TV Toshiba Regza 26HL67 Owner's Manual](#)

Integrated high definition lcd television (75 pages)

[LCD TV Toshiba 26HL47 Owner's Manual](#)

Integrated high definition lcd television (74 pages)

[LCD TV Toshiba REGZA 26HL67 Manuel D'utilisation](#)

Toshiba flat panel television user manual (66 pages)

[LCD TV Toshiba Regza 26HL67 Owner's Manual](#)

Toshiba integrated high definition lcd television owner's manual 26hl67, 32hl67, 32hl67u, 37hl67, 42hl67 (66 pages)

[19C100U Installing The Remote Control Batteries](#)

Toshiba 19C100U

[40L543 DG Series Inserting Batteries And Effective Range Of The Remote Control](#)

Toshiba 40L543 DG Series

[32W2863DA Inserting The Batteries Into The Remote](#)

Toshiba 32W2863DA

[24 LL Series Inserting The Batteries Into The Remote](#)

Toshiba 24 LL Series

[24D143 DG Series Inserting Batteries And Effective Range Of The Remote Control](#)

Toshiba 24D143 DG Series

[32L153 DG Series Inserting Batteries And Effective Range Of The Remote Control](#)

Toshiba 32L153 DG Series

[40L543 DG Series Inserting Batteries And Effective Range Of The Remote Control](#)

Toshiba 40L543 DG Series

[48L544 DG Series Inserting Batteries And Effective Range Of The Remote Control](#)

Toshiba 48L544 DG Series

This manual is also suitable for:

[Regza 32gl67](#)[Regza 32hl67u](#)[Regza 37hl67](#)[Regza 42hl67](#)