

Room Temperature Control - Sanyo KS3032 Service Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



The Unit adjusts room temperature by turning the outdoor unit's compressor ON and OFF. This process is controlled by the thermostat located in the remote control unit. **2. Proce**
 The figures on this and the next pages show how each part of the system performs when the room temperature changes and the thermostat activates the compressor to start (thermo ON)

2-1 Room Temperature Control

or stop (thermo OFF). Fig. 1 shows about the cooling cycle.

S.T.- TF

- SET TEMP. T*F
- COMPRESSOR
- INDOOR FAN
- OUTDOOR FAN

- ROOM TEMPERATURE
- WITHIN 3 MINUTE
- MORE THAN 3 MINUTES
- MORE THAN 3 MINUTES
- 3 MINUTES
- 5 MINUTES

The Unit adjusts room temperature by turning the outdoor unit's compre
 This process is controlled by the **thermostat** located in the remote contr
 The figures on this and the next pages show how each part of the syste
 room temperature changes and the thermostat activates the compresso
 or stop (**thermo OFF**). Fig. 1 shows about the cooling cycle.



Chart Summary and Explanations

Once the compressor starts, it keeps running for 5 minutes.

Once the compressor stops, it will not start running again for 3 minutes.

If you change the operation mode during the cooling cycle, the control circuit stops the compressor for 3 minutes.

For 5 minutes after the compressor is first turned on, and for 3 minutes after it is turned off, the compressor is not controlled by the thermostat.

Thermo ON: When room temperature rises 1 °F above the set temperature T°, (T°+1 °F):

Compressor

— ON

Thermo OFF: When the room temperature is equal to or below the set temperature T°:

Compressor

—

OFF

SM830069

-26-

2. Proce

2-1 Room Temperature Control

The Unit adjusts room temperature by turning the outdoor unit's compressor ON. This process is controlled by the thermostat located in the remote control. The figures on this and the next pages show how each part of the system reacts when room temperature changes and the thermostat activates the compressor or stop (thermo OFF). Fig. 1 shows about the cooling cycle.

ROOM TEMPERATURE

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
23
24
25
26
27
28
29
30

Quick Links:

[Unit Specifications](#)

[\(B\) Outdoor Unit](#)

Chapters

[Table of Contents](#) 3

[| 4. Service Procedures](#) 36

Troubleshooting

[SERVICE PROCEDURES](#) 36

[Check before and after Troubleshooting](#) 37

Related Manuals for Sanyo KS3032

[Air Conditioner Sanyo KS3032 Service Manual](#)

Split system air conditioner (56 pages)

[Air Conditioner Sanyo C3032 Service Manual](#)

Split system air conditioner (54 pages)

[Air Conditioner Sanyo C2432A Installation Instructions Manual](#)

(50 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner; wall-mounted type ceiling-mounted type recessed type cool/fan model (24 pages)

[Air Conditioner Sanyo KS2432 Instruction Manual](#)

Split system air conditioner cool/fan model (24 pages)

[Air Conditioner Sanyo 30KS32A Specifications](#)

Wall mounted air conditioner (3 pages)

[Air Conditioner Sanyo XS3632 / C3632 Service Manual](#)

Split system air conditioner (51 pages)

[Air Conditioner Sanyo XS3632 Service Manual](#)

Split system air conditioner (50 pages)

[Air Conditioner Sanyo KS3082 Instruction Manual](#)

Inverter-controlled split system air conditioner (36 pages)

[Air Conditioner Sanyo KS3082 Installation Instructions Manual](#)

Inverter split system air conditioner (30 pages)

[Air Conditioner Sanyo 36KS82 Submittal Data](#)

Split system wall mounted air conditioner (2 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (16 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

[Air Conditioner Sanyo KS0911 Instruction Manual](#)

Split system air conditioner (15 pages)

Related Content for Sanyo KS3032

[STW-2 Series Room Temperature Control](#)

Sanyo STW-2 Series

[SAP-C302AH-S Room Temperature Control](#)

Sanyo SAP-C302AH-S

[ECO-i AHX0752 Room Temperature Control](#)

Sanyo ECO-i AHX0752

[SAP-KM97GHS5A 10-1.Room Temperature Control](#)

Sanyo SAP-KM97GHS5A

[SPW-D253G56 Room Temperature Control](#)

Sanyo SPW-D253G56

[SAP-K91AA Room Temperature Control](#)

Sanyo SAP-K91AA

[SAP-K92A Room Temperature Control](#)

Sanyo SAP-K92A

[SAP-K91AA-S Room Temperature Control](#)

Sanyo SAP-K91AA-S

This manual is also suitable for:

[C3032Ks3632CI3032C3632CI3632](#)