



Toshiba RC-10IH1TAU(N) User Manual

Electric rice cooker

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23



•


[Table of Contents](#)

•

Bookmarks

[Download this manual](#)

Quick Links

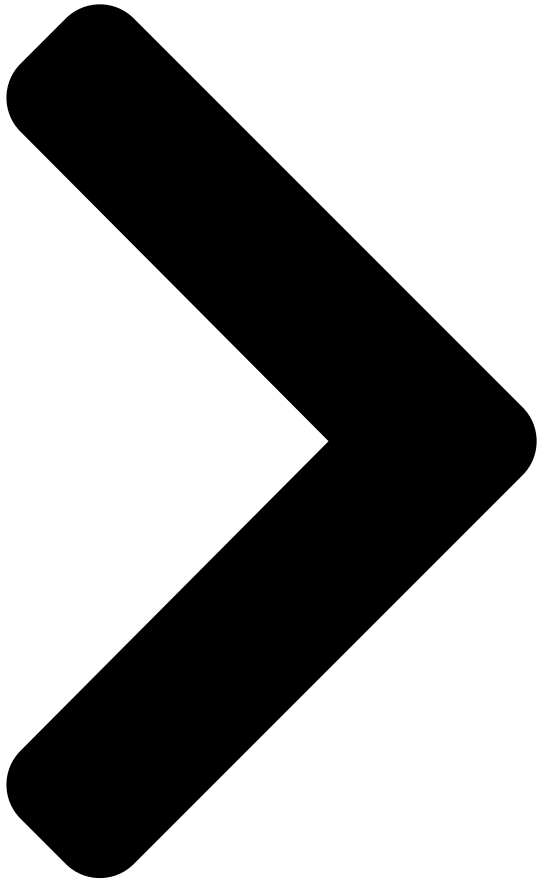

USER

MANUAL

**ELECTRIC
RICE COOKER**



RC-10IH1TAU(N)

RC-18IH1TAU(N)

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RC-10IH1TAU(N)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Toshiba RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF, RC-10NMF, RC-18NMF - Toshiba Electric Rice Cooker/Warmer Manual](#)

(article)

[Rice Cooker Toshiba RC-10NMF Instruction Manual](#)

Electric rice cooker/warmer (17 pages)

[Rice Cooker Toshiba RC-10RHI Instruction Manual](#)

Electric rice cooker/warmer (13 pages)

[Rice Cooker Toshiba RC-10JR1NP Instruction Manual](#)

Mechanical rice cooker / warmer, 1.0l/1.8l type (8 pages)

[Rice Cooker Toshiba RC-18DR1NMY Instruction Manual](#)

Electric rice cooker (23 pages)

[Toshiba RC-18DR1NMY, RC-10DH1NMY, RC-18DH1NMY - ELECTRIC RICE COOKER Manual](#)

(article)

[Rice Cooker Toshiba RC-10JRNH Instruction Manual](#)

Toshiba mechanical rice cooker / warmer (16 pages)

[Rice Cooker Toshiba RC-10NAF Series Instruction Manual](#)

Electric rice cooker/warmer (24 pages)

[Rice Cooker Toshiba RC-10IRPH Instruction Manual](#)

Microcomputer induction rice cooker (55 pages)

[Rice Cooker Toshiba RC-10IRPMY Instruction Manual](#)

(14 pages)

[Toshiba RC-10IRPMY - 1.0L Microcomputer Induction Rice Cooker Manual](#)

(article)

[Rice Cooker Toshiba RC-10ISSHK User Manual](#)

Electric rice cooker (58 pages)

[Rice Cooker Toshiba RC-18DH1NP Instruction Manual](#)

Electric rice cooker/warmer (20 pages)

[Rice Cooker Toshiba RC-18ISPH Manual](#)

(28 pages)

Summary of Contents for Toshiba RC-10IH1TAU(N)

[Page 1](#) USER MANUAL ELECTRIC RICE COOKER RC-10IH1TAU(N) RC-18IH1TAU(N)

[Page 2: Table Of Contents](#)

Special purpose for AC 220-240V. Please do not apply to power sockets other than AC

220-240V. Thank you for buying the Toshiba Microcomputer Induction Rice Cooker. • This product is for household use only. (Please do not use as a commercial product.) •...

[Page 3: Important Safety Instructions](#)

It may cause to fire, burns, injury, or electric shock Toshiba doesn't assume any responsibility for the consequences of improper use of this product or use for purposes other than those described in the instruction manual.

[Page 4](#) In case of cord damage, the cord should be replaced with a special cord or specialized component purchased from the Manufacturer or the Maintenance Department. For the purpose of preventing fire, scald, electric shock, electric leakage, short Warning circuit, etc. Please use the power plug, power cord and power socket correctly.

[Page 5](#) Important Safety Instructions Please observe for security For the purpose of preventing injury, scald, electric shock, electric leakage, Note fire and home loss. Please do not use device in these places. Easy to splash water Near walls or furniture. or near fire. When using on the kitchen shelves, please Please pay attention to pay attention to ventilation.

[Page 6: Attention](#)

For the purpose of preventing injury, scald, electric shock, electric leakage, Note fire and home loss. To prevent overheating For products equipped with a metal steamer, the Only use the original inner pot for the rice cooker. steamer should not be used separately as a heating container for cooking, so as to avoid overheating, plastic melting, or even fire accidents.

[Page 7: Parts Name](#)

Parts name Please clean the inner cooking pot, inner cover, steam valve and accessories before using for the first time. When starting to use, there may be an odor of plastic, which will gradually disappear with the usage. The configuration of accessories varies depending on the product model. Due to the difference in appearance and function of different models, please refer to the actual product and read the corresponding function description.

[Page 8](#) Power cord connection Insert the power plug Insert the power plug (body side) into the plug (power supply side) into socket on the rear face the power socket. Power plug (body side) Power plug (power supply side) Please plug in the power plug exactly into the bottom Operation part Display part (The clock is of 24-hour display mode)

[Page 9](#) Disassembly & assembly of detachable inner lid and steam valve RC-10IH1TAU(N) Remove the detachable inner lid Push the inner cover slider to the right Inner cover slider according to the arrow (the detachable inner lid leans forward). Grab the handle and pull up the detachable inner lid.

[Page 10](#) Method of opening and closing upper housing Open the upper housing Please do not press the upper housing from above. You should just press the button before hearing the "clatter" sound of unlocking, and the upper housing will be opened. Please do not press the upper housing from above.

[Page 11: Basic Procedures](#)

Basic procedures Rice cooking method Connect to power cord Preparation Rice Use the attached measuring cup measurement 1 plain cup = about 180mL [Correct case] [Wrong case] Using measuring cup for cooking (200mL) may cause errors. Until water gets clean Wash rice quickly Add adequate water fully mix with rice and then promptly pour water out.

[Page 12](#) Key points to cook delicious rice Rice Add rice horizontal to measuring cup opening Use fresh white rice with the volume that can be eaten up within two weeks to one month every time. Please do not shake the measuring cup Please place rice into a closed container, and place in a dark place.

[Page 13: Cooking Mode](#)

Cooking mode Cooking capacity and corresponding cooking Select "cooking mode" and "water level scale" based on type time estimation of cooking rice. RC-10IH1TAU(N) Estimation of cooking time Cooking TIMER Cooking mode Taste Water level scale Unit: min capacity (: Valid, X: Invalid) () First cooking time MIXED RICE MIXED RICE...

[Page 14](#) Usage and setting of MENU Function selection method Press Each time when you press the MENU button, the option light will flash and change in the order of <WHITE RICE> → <BROWN RICE> → <STICKY RICE> → <CRISPY RICE> → <CONGEE/SOUP> → <CAKE>. START indicator Beep once...

[Page 15: Method Of Pre-Setting Cooking Time](#)

Method of pre-setting cooking time Complete cooking within the pre-set time. within the pre-set time. Wash rice, add or reduce water, place inner cooking It is impossible to pre-set without pot in the body and place on the upper housing inner cooking pot in.

[Page 16](#) Pay attention that "X" indicates on cooking appointment does not work during cooking appointment (It may cause rice deterioration or corrosion to inner cooking pot) RC-10IH1TAU(N)/RC-18IH1TAU(N) MIXED RICE BROWN RICE STICKY RICE QUICK COOK WHITE RICE CAKE CONGEE SOUP CRISPY RICE (Please do not exceed 8 hours in summer) Please do not make appointment longer than 14 hours Long-time appointment will make the rice fermented or scented.

[Page 17: Recipes](#)

Recipes Mixed rice Ingredients (2~3 servings) 150g White rice 150g Black rice, oat, millet Water, appropriate amount Wash the prepared white rice and the coarse grain and add them to the inner pot. Add water to mark 2 of the MIXED RICE according to the amount of rice Select MIXED RICE and press COOK to enter the cooking state.

[Page 18: Maintenance](#)

Maintenance An unpleasant odor will produce due to inappropriate cleaning process. Please note Note Please do not use the following items (Otherwise, it will cause deformation, corrosion, discoloration, crack or scratch) Tableware washing dryer and tableware dryer During maintenance, the power plug Detergent other than neutral detergents for kitchen should be unplugged.

[Page 19](#) Cleaned by boiling (about once a week) Place water in inner cooking pot and close the outer cover. (To 1 in the water level scale of "White Rice") Please do not place in any items other Select < QUICK COOK >. than water (detergent, etc.).

[Page 20: How To Deal With Cooking Failure](#)

How to deal with cooking failure Please check before applying for repair. If the reason cannot be found out after investigation, please consult with the store where you buy the electric cooker. Investigate the reasons (reference page) This time Please reduce water volume for cooking. Soft Please scarify the rice completely and promptly after the cooking is done.

[Page 21](#) Investigate the reasons (reference page) This time Whether the detachable inner lid has been installed well? If the detachable inner lid is not Difficult to close installed, the upper housing cannot be closed to prevent forgetting the installation of the Impossible to close detachable inner lid.

[Page 22: Error Display](#)

How to deal with cooking failure Please check before applying for repair. Investigate the reasons (reference page) This time It sends out sound during Please refer to the "Sound in use" on Page 9. When starting to use, there may be an odor, which will gradually disappear with the use. With scent of plastic Eliminate the unpleasant odor by ventilating and cleaning by boiling.

[Page 23: Specifications](#)

Specifications Dimension Ma . Consump Power (Unit: cm) Voltage Rated Cooking Model tion power cord frequency apacity Capacity (Cooking) length (rice volume) Length Width Height 220-240V~ RC-10IH1TAU(N) 1000W 3.0L 1.0L 32.9 26.2 21.9 50/60Hz 220-240V~ RC-18IH1TAU(N) 1300W 5.0L 1.8L 36.7 24.9 50/60Hz Please use under regularly confirming of "Important Safety Instructions"...

This manual is also suitable for:

[Rc-18ih1tau\(n\)](#)