

General Operation - Sanyo MCD- XJ790 - PORTABLE CD RADIO CASSETTE RECORDER PLAYER CD- R/CD-RW/CD AM/FM STEREO Instruction Manual

Instruction manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15

• PAGE

5



-

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



To control the sound

BASSXPANDER

ON: Increase the bass output level.

OFF: For normal bass output level.

 
 
LCD DISPLAY SEGMENT

1.
Play indicator

2.
Program indicator

3.
Repeat indicator

4.

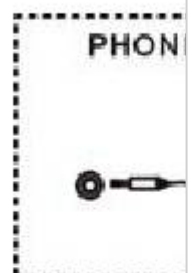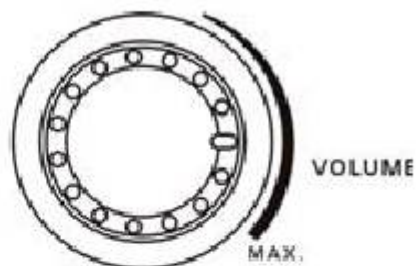

Repeat all indicator

5.

RANDOM indicator

6.

CD Track number indicator

NOTES:

- If a disc is loaded upside down, "---" will be displayed.

- If no disc is loaded, "---" will be displayed.

- Opening the CD compartment lid while a

CD is playing could scratch the disc.

Always press the STOP button and wait for the disc to stop rotating before opening the CD compartment lid.

AUX IN CONNECTION

1.

Slide Function selector to AUX.

2.

Connect one end of a 3.5 mm plug signal wire to AUX IN JACK and the other end of the signal wire to your home equipment.

3.

Play your home equipment.

MP3 player or other sound

equipment.

GENERAL OPERATION

4

 
 
Using headphones

When the headphones are plugged in, the speakers are automatically disconnected.

CAUTION: Listening at high power for a long moment could damage users' ears.

Compact discs

- Both 8cm and 12cm discs can be played in

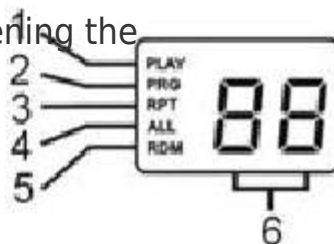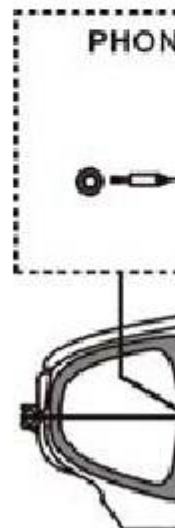

ManualsLib.com




this unit.

NOTE: Place only one disc at a time in the CD compartment.

- Only discs bearing the logo as shown can be played in this unit.

 - This unit can play back the CD-R/RW as well, however, some CD-R/RWs cannot be played back due to various recording conditions: such as CD-R/RW recorder performance, writing software etc.

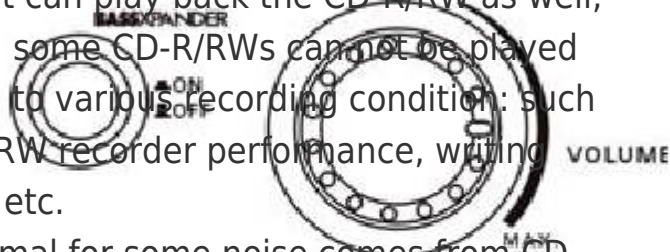


- It is normal for some noise comes from CD laser head when the unit is searching tracks or there is no disc in the CD compartment.

- Always place the compact disc in the CD compartment with the label side facing up.


Compact discs can be played on only one side.

 - Fingerprints and dust should be carefully wiped off the disc's signal surface (opposite the label side) with a soft cloth. Gently wipe in a straight motion from the inside to the outside of the disc.

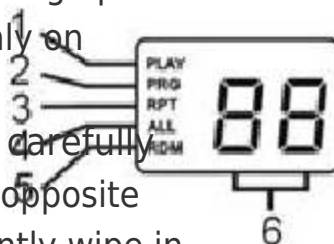

- Discs should be returned to their case after use to avoid serious scratches, which could cause the player to skip.

 - Do not expose a disc to direct sunlight, high humidity, or high temperatures for extended

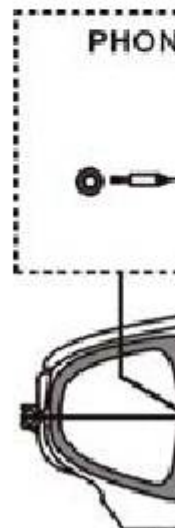

[Previous Page](#)
[Next Page](#)

1
2
3
4
5
6
7
8
9

Quick Links:

[Power Supply](#)

[General Operation](#)

[Compact Disc Operation](#)

[Track Skip](#)

[Cassette Tape Operation](#)

[Troubleshooting Guide](#)

[Maintenance](#)

[Specifications](#)

Related Manuals for Sanyo MCD-XJ790 - PORTABLE CD RADIO CASSETTE RECORDER PLAYER CD-R/CD-RW/CD AM/FM STEREO

[CD Player Sanyo MCD-XP630 Instruction Manual](#)

Cd portable radio (6 pages)

[CD Player Sanyo MCD-X77L Instruction Manual](#)

(16 pages)

[CD Player Sanyo MCD-X77L Instruction Manual](#)

(17 pages)

[CD Player Sanyo MCD-XP400 Instruction Manual](#)

Portable cd radio (8 pages)

[CD Player Sanyo MCDZX500 Instruction Manual](#)

Cd portable radio cassette recorder (9 pages)

[CD Player Sanyo MCD-ZX250F Service Manual](#)

Cd portable radio cassette recorder (12 pages)

[CD Player Sanyo MCD-Z8F Service Manual](#)

Cd portable stereo radio cassette recorder (20 pages)

[CD Player Sanyo MCD-Z16F Service Manual](#)

Cd portable fm stereo/ am radio cassette recorder (21 pages)

[CD Player Sanyo MCD-S735F Instruction Manual](#)

(20 pages)

[CD Player Sanyo MCD-Z250F Service Manual](#)

(33 pages)

[CD Player Sanyo MCD-S670F Service Manual](#)

(20 pages)

[CD Player Sanyo MCD-Z11F Service Manual](#)

(20 pages)

[CD Player Sanyo PH-DS280 Service Manual](#)

Cd portable radio cassette recorder (16 pages)

[CD Player Sanyo MCD-290F Service Manual](#)

Cd portable am/fm stereo cassette recorder (19 pages)

[CD Player Sanyo MCD-ZX530F Service Manual](#)

Portable (16 pages)

[CD Player Sanyo MCD-Z38F Instruction Manual](#)

Cd portable stereo/radio double cassette recorder (21 pages)

Related Content for Sanyo MCD-XJ790 - PORTABLE CD RADIO CASSETTE RECORDER PLAYER CD-R/CD-RW/CD AM/FM STEREO

[MCD-ZX540F General Operation](#)

Sanyo MCD-ZX540F

[DV-S100 For Safe And Efficient Operation](#)

Sanyo DV-S100

[Excedio CDF-201 For Safe And Efficient Operation](#)

Sanyo Excedio CDF-201

[FXD-RS60RM Operation Check](#)

Sanyo FXD-RS60RM

[FXD-CI00 Hints For Correct And Safe Operation](#)

[CDP-M420 Before Operation](#)

Sanyo CDP-M420

[MCD-Z260F For Safe And Efficient Operation](#)

Sanyo MCD-Z260F

[MCD-Z1F For Safe And Efficient Operation](#)

Sanyo MCD-Z1F

