



Asus PRIME H610M-R Quick Start Manual

1
2

--

•

Bookmarks

[Download this manual](#)

Quick Links



PRIME H610M-R

Quick start guide

Hurtigstartvejledning

Кратко упътване за бърз старт

Guido de inicio rápida

Stručná příručka

Instrukcja szybkiej instalacji

Quick Start-vejledning

Краткое руководство

Snelstartgids

Ghid de pornire rapidă

Lühijuhend

Guía de inicio rápida

Guide de démarrage rapide

Vodič za brzo korišćenje

Pikakäynnistysopas

Stručný návod na spustenie

Schnellstartanleitung

Snabbstartsguide

□□□□□□□□□□□□□□□□

Οδηγός γρήγορης έναρξης

Beüzemelési útmutató

Hızlı Başlatma Kılavuzu

Guida Rapida

Hồðùng daãn khôùì ñoãng nhanh

قم بتثبيت وحدة المعالجة المركزية (CPU)
GPU را نصب کنید



Panduan Ringkas

Vodič za brzi procesorirada



Короткий посюник

Жылдам іске қосу нұсқаулығы

Vodnik za hitni zatešek



Greitos darbo pradžios vadovas
Įsa pamācība

Motherboard Layout

Step 7

US Schenker

Step 1

US Schenker

Step 5

US Schenker

Australia statement notice

From 1 January 2012 updated warranties apply to all ASUS products, consistent with the Australian Consumer Law. For the latest product warranty details please visit <https://www.asus.com/support/>. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at <https://www.asus.com/support/>.

India RoHS

This product complies with the "India E-Waste (Management) Rules, 2016" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls (PBBs) and polybrominated diphenyl ethers (PBDEs) in concentrations exceeding 0.1% by weight in homogenous materials and 0.01 % by weight in homogenous materials for cadmium, except for the exemptions listed in Schedule II of the Rule.

Türkiye RoHS

AEEE Yönetmeliğine Uygundur

HDMI Trademark Notice

The terms HDMI, HDMI High-Definition Multimedia Interface, HDMI Trade dress, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.

Q22280

First Edition

July 2023

Copyright © ASUSTeK Computer Inc.

All Rights Reserved

Step 1

Install the CPU

Инсталирайте процесора

Instalace procesoru

Installer CPU'en

De CPU installeren

Paigaldage CPU

Installez le processeur

Asenna suoritin

Installieren der CPU

Εγκατάσταση της CPU

Helyezze be a CPU-t

Installare la CPU

Pasang CPU

CPU

CPU орнатыңыз

CPU

Sumontuokite centrinį procesorių

Uzstādiet centrālo procesoru

Step 2

Install the CPU fan

Инсталирайте вентилятор на процесора

Instalace ventilatoru procesoru

Installer CPU-ventilator

De CPU-ventilator installeren

Paigaldage CPU ventilator

Installez le ventilateur du processeur

Asenna suorittimen tuuletin

Installieren des CPU-Lüfers

Εγκατάσταση του ανεμιστήρα της CPU

Szerelje be a CPU ventilátort

Installare la ventolatore della CPU

Pasang kipas CPU

CPU

CPU желдеткішін орнатыңыз

CPU

Sumontuokite centrinio procesoriaus ventiliatorių


Uzstādiet centrālo procesora ventilatoru

Installer CPU-ventilator

Instale a ventoinha de CPU

Instalacja wentylatora

Установка вентилятора

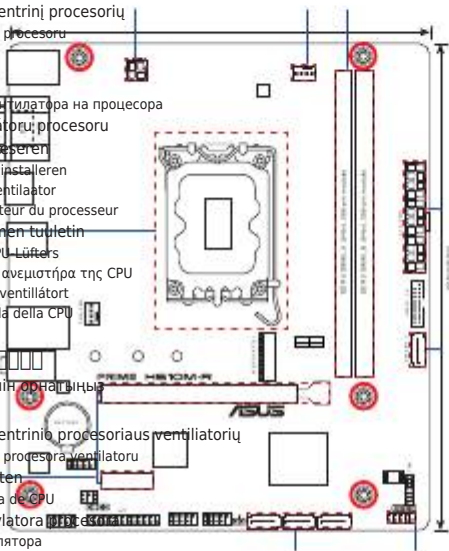

قم بتثبيت وحدة المعالجة المركزية (CPU)
CPU را نصب کنید

تثبيت مروحة وحدة المعالجة المركزية
پنکه CPU را نصب کنید

تثبيت وحدات الذاكرة
مادون های حافظه را نصب کنید

Instalați ventilatorul CPU-ului
Instalar el ventilador de la CPU
Instalirajte CPU ventilator
Instalacia ventilatora centrálneho procesora
Step 3


Step 2
Step 3
Motherboard
Instalieren der Speichermodule
Инсталируйте модули памяти
Instalace paměťových modulů
Installer hukommelsesmodulerne
Geheugenmodules installeren
Paigaldage mäluoodulid
Installez les modules de mémoire
Asenna muistimoduulit
Step 7
Installieren der Speichermodule
Εγκατάσταση των στοιχείων μνήμης
Helyezze be a memória modulokat
Installare i moduli di memoria
Pasang modul memori

Step 4
□□□□□□□□□□□□□□
Жад моульдерін орнатыңыз
□□ □□ □□
Sumontuokite atminties modulius
Uzstādiēt atmiņas moduļus

Step 4
Step 6
Install storage devices
Инсталиране на устройства за съхранение
Instalování paměťových zařízení
Installering af lagerenheder
Opslagapparaten installeren
Installige salvestid
Installer les périphériques de stockage
Tallennuslaitteiden asentaminen
Installieren der Speichergeräte
Εγκατάσταση συσκευών αποθήκευσης
Tárolóeszközök telepítése
Installare i dispositivi di archiviazione
Memasang perangkat penyimpanan

□□□□□□□□□□□□□□
Сақтау құрылғыларын орнату
□□ □□ □□
Įdiegti saugojimo įrenginius
Instalējiet atmiņas ierīces
IMPRESSO NA CHINA
15060-20PJ0000
Installer centralprocessoren (CPU)
Instale a CPU
Instalacja procesora
Установка процессора
Instalați CPU-ul

Instalar la CPU
Instalirajte CPU
Instalácia centrálneho procesora
Installera CPU
□□□□□□ CPU
CPU-yu takin
Lâp CPU
Instalacija procesora
Инсталируйте процессор
Namestitev CPE-ja
Installera CPU-facketen
□□□□□□□ CPU
CPU fanini takin
Lâp quat CPU
Instalacija ventilatora procesora
Инсталируйте вентилятор процессора
Namestitev ventilatorja CPE-ja
Installer minnesmoduler
Instale módulos de memória
Instalacja modułów pamięci
Установка модулей памяти
Instalați modulele de memorie
Instalar los módulos de memoria
Instalirajte module memorije
Instalácia pamäťových modulov
Installera minnesmoduler
□□□□□□□□□□□□□□□□□□□□□□
Bellek modüllerini takin
Lâp các thanh nhớ
DIMM_B
Instalacija memorijskih modula

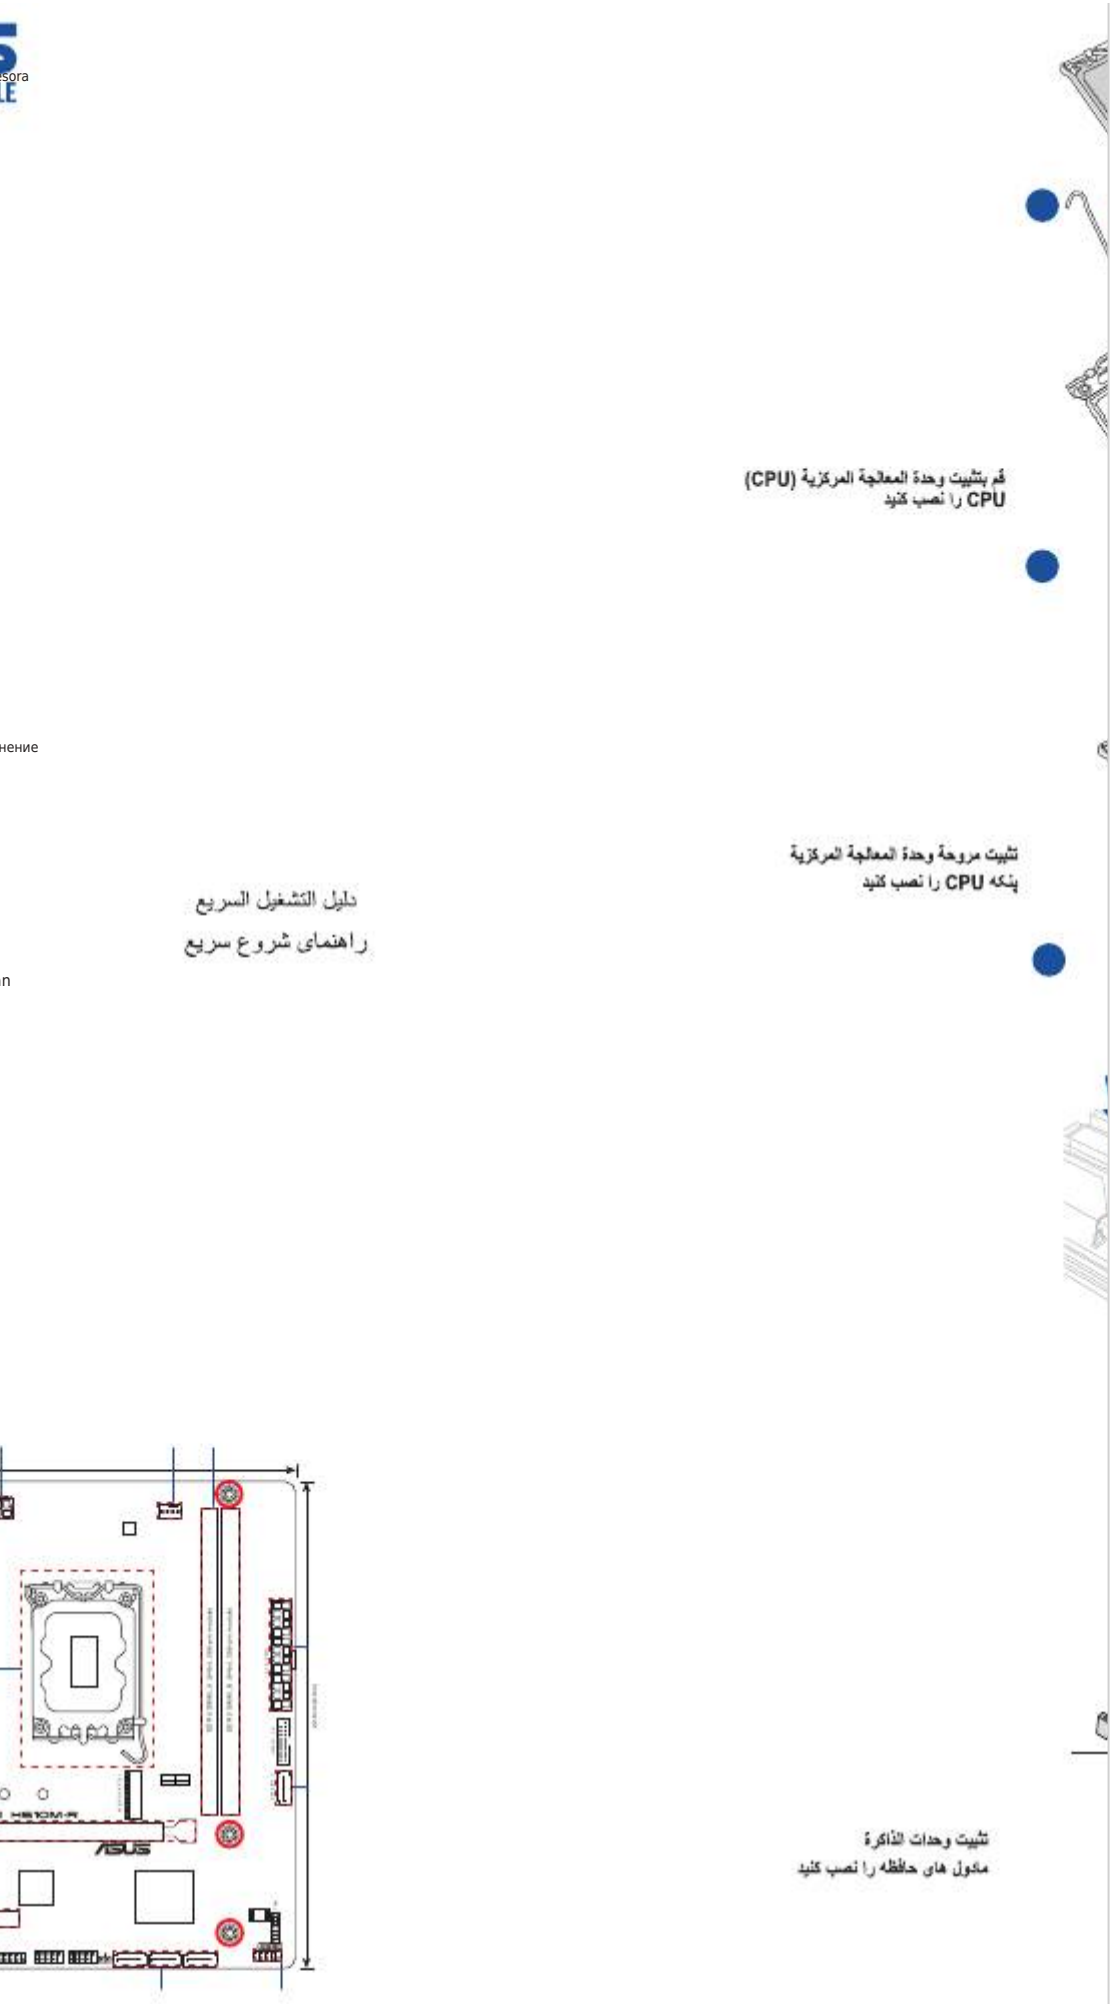

قم بتثبيت وحدة المعالجة المركزية (CPU)
CPU را نصب کنید

تثبيت مروحة وحدة المعالجة المركزية
پنکه CPU را نصب کنید

دليل التشغيل السريع
راهنمای شروع سریع

تثبيت وحدات الذاكرة
ماتول های حافظه را نصب کنید

Instalуйте модулі пам'яті
Namestitev pomnilniških modulov
Montare lagringsenheter
Instalar dispositivos de armazenamento
Instalace uredzen pameti
Установите накопители
Instalarea dispozitivelor de stocare
Instalar dispositivos de almacenamiento
Instalirajte uredaje za skladištenje
Ľstálacia pamäťových zariadení
Installera lagringsenheter
XX
Depolama aygıtlarınıza takma
láp dät các thiết bị lưu trữ
Instalirajte uredaje za pohranjivanje
Інсталяція пристроїв пам'яті
Namestitev naprav za shranjevanje

DIMM_A
DIMM_A
DIMM_B

قم بتثبيت وحدة المعالجة المركزية (CPU)
CPU را نصب کنید



[Next Page](#)

1

2

Related Manuals for Asus PRIME H610M-R

[Motherboard Asus PRIME H610M-R Manual](#)

(32 pages)

[Motherboard Asus Prime H610M-R D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-E D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-K D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-A D4 Manual](#)

(34 pages)

[Motherboard Asus PRIME H610M-D D4 Manual](#)

(32 pages)

[Motherboard Asus Pro H610M-CT D4 Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-F D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M2 FPT Manual](#)

(32 pages)

[Motherboard Asus PRIME H610M-CS D4 Manual](#)

(30 pages)

[Motherboard Asus PRIME H610M-A WIFI D4 Manual](#)

(36 pages)

[Motherboard Asus H610M-IM-A Manual](#)

Industrial motherboard (53 pages)

[Motherboard Asus PRIME H610M-D Instruction Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-K ARGB Manual](#)

(31 pages)

[Motherboard Asus PRIME H610M-C/PS D4 Manual](#)

(62 pages)

[Motherboard Asus PRIME H610M-E Manual](#)

(33 pages)

Summary of Contents for Asus PRIME H610M-R

Page 1 Instalirajte uređaje za skladištenje If you require assistance please call ASUS Customer Service 1300 2787 88 or visit us at Installieren der Speichergeräte Ižtalácia pamäťových zariadení...

Page 2 Step 5 Step 6 Step 7 Install expansion card(s) Install the system panel connector Install ATX power connectors Инсталирайте конектора за системния панел Инсталирайте допълнителна карта (допълнителни карти) Инсталирайте ATX конекторите за захранване Instalace přídatné karty (karet) Nainstalujte konektor pro panel systému Instalace konektorů...