





## Asus ZenWiFi BD5 Quick Start Manual

Be5000 dual band wifi router



1  
2


--

•

## Bookmarks

[Download this manual](#)

### Quick Links

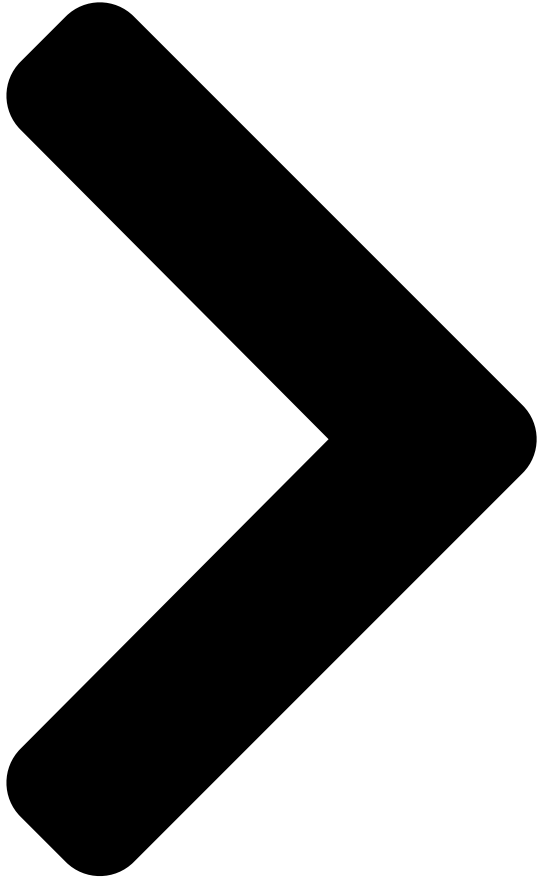

# Quick Start Guide

## ASUS ZenWiFi BD5

BE5000 Dual Band WiFi Router

Model: BD5

### Before Setup

#### Preparing to set up an AiMesh WiFi system

Find two ZenWiFi BD5, and power both on.


Use a network cable to connect your optical modem to a 2.5GbE port of ZenWiFi BD5 with the

"Main Unit" sticker. This ZenWiFi BD5 will be the AiMesh router, and the other ZenWiFi BD5 will be the AiMesh node.

The LED turns solid blue to indicate that ZenWiFi BD5 is ready for setup.

### ASUS Router App

Download free ASUS Router APP to set up and manage

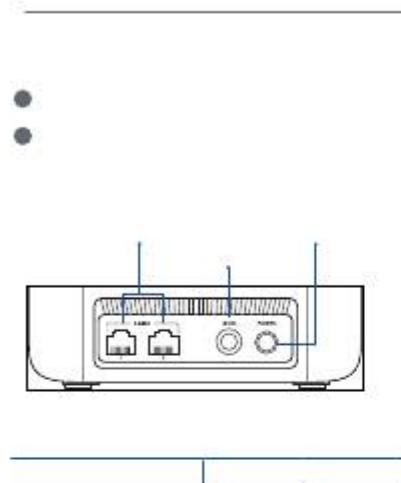



you router(s).



# AiMesh Setup Steps

## 01 IN SEARCH OF INCREDIBLE

### Prepare

Place your AiMesh router and node in the same room and at least 1 meter apart during the setup process.

### 02



### AiMesh node

Keep your AiMesh node powered on and standby for AiMesh system settings.

### 03

### Launching ASUS Router APP

Launch ASUS Router APP, and then follow the on-screen instructions to finish the AiMesh setup.

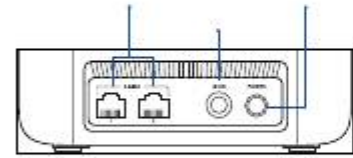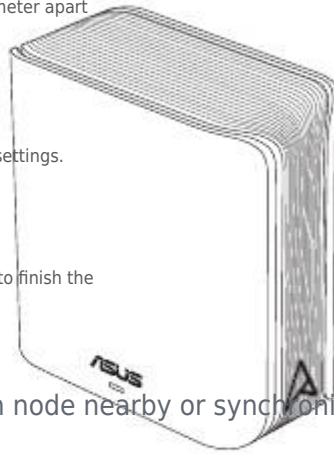

## Troubleshooting

If your AiMesh router cannot find any AiMesh node nearby or synchronization fails, please check the following and try again.

Move your AiMesh node closer to the AiMesh router ideally. Ensure that it is within 3 meters.

Your AiMesh node is powered on.

E23888\_2enWiFi\_BD5\_one-page\_2PK\_QSG.indd 1  
E23888\_2enWiFi\_BD5\_one-page\_2PK\_QSG.indd 1

## Hardware Explanations

Plug the adapter into the DC port, and press the power switch.

The power LED will light up when your hardware is ready.

### ZenWiFi BD5 Overview

- 2.5GbE port x 2
- Power button
- Power (DCIN) port

### Specifications:

- DC Power adapter
- DC Output: +12V with max 1.5A current
- Operating Temperature
- 0~40 C
- Storage
- Operating Humidity
- 50~90%
- Storage

### AiMesh node

### AiMesh Setup Steps

### AiMesh node

NOTE: When you're using a wireless backhaul to connect your router and AiMesh node, both

2.5GbE ports on your AiMesh node can be used as LAN ports.

### 2.5GbE port (WAN/LAN auto-detecting)

- Connect your optical modem to a 2.5GbE port with a network cable.
- Connect your PC to a 2.5GbE port with a network cable.

0~70 C

20~90%

### AiMesh router

At least 1

 
meter

### AiMesh router

E23888

2024/6/18 11:02:11

2024/6/18 11:02:11



[Next Page](#)

1

2

## Related Manuals for Asus ZenWiFi BD5

[Network Router Asus BRT-AC828/M2 User Manual](#)

Wireless-ac2600 dual wan vpn wireless router (121 pages)

[Network Router Asus BRT-AC828 Quick Start Manual](#)

Wireless-ac2600 dual wan vpn wireless router (204 pages)

[Network Router Asus BRT-AC828 Quick Start Manual](#)

Wireless-ac2600 dual wan vpn wireless router (140 pages)

[Network Router Asus ZenWiFi BQ16 Pro Quick Start Manual](#)

Zenwifi bq16 pro; be30000 quad band wifi router (2 pages)

[Network Router Asus ZenWiFi BQ16 Pro Quick Start Manual](#)

Be30000 quad band wifi router (2 pages)

[Network Router Asus ZenWiFi BQ16 User Manual](#)

Be25000 quad band router (131 pages)

[Network Router Asus ZenWiFi BT10 Quick Start Manual](#)

Be18000 tri band wifi router (2 pages)

[Network Router Asus E23557 Quick Start Manual](#)

Be18000 tri band wifi route (2 pages)

[Network Router Asus ZenWiFi BD4 Quick Start Manual](#)

Be3600 dual band wifi router (2 pages)

[Network Router Asus ZenWiFi AC Mini CD6 Series Quick Start Manual](#)

Wireless ac1500 dual band gigabit router (86 pages)

[Network Router Asus ZenWiFi Pro AX11000 Quick Start Manual](#)

Tri band wifi router (47 pages)

[Network Router Asus ZenWiFi Pro ET12 Quick Start Manual](#)

Axe11000 tri band router (155 pages)

[Network Router Asus REPUBLIC OF GAMERS GT-AX6000 User Manual](#)

Rapture dual band gaming router (152 pages)

[Network Router Asus RT-AC66R User Manual](#)

Dual band 3x3 802.11ac gigabit router (70 pages)

[Network Router Asus RT-AC56U User Manual](#)

Dual band wireless-ac1200 gigabit router (30 pages)

[Network Router Asus TUF-AX3000 V2 Quick Start Manual](#)

Tuf gaming ax3000 v2 dual band wifi 6 router (2 pages)

## Summary of Contents for Asus ZenWiFi BD5

**Page 1** Find two ZenWiFi BD5, and power both on. Use a network cable to connect your optical modem to a 2.5GbE port of ZenWiFi BD5 with the “Main Unit” sticker. This ZenWiFi BD5 will be the AiMesh router, and the other ZenWiFi BD5 will be the AiMesh node.

**Page 2** • A fin de evitar posibles descargas eléctricas, desconecte el cable de alimentación de la toma de suministro eléctrico antes de conectar el dispositivo. Canada radio frequency exposure limits. The ASUS Wireless Device should be used in such a manner such that the potential de cambiar la posición del sistema.