



Toshiba RAS-30SKP Series Installation Manual

Indoor/outdoor unit

1
2
3
4
5
6
7
8
9
10

--

•

Bookmarks

--

[Download this manual](#)

Quick Links



INSTALLATION MANUAL

AIR CONDITIONER (SPLIT TYPE)

Indoor unit

RAS-30SKP Series

Outdoor unit

RAS-30S Series

Toshiba 1110651126 (CV_F).indd
ba 1110651126 (CV_F).indd 1

1

GLISH

ANÇAIS

1110651126

TOSHIBA

11/6/08 5:55:48 PM
11/6/08 5:55:48 PM

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba RAS-30SKP Series

[Air Conditioner Toshiba RAS-M10GDCV-E Owner's Manual](#)

(multi-split type) (25 pages)

[Air Conditioner Toshiba RAS-B10SKVP-E Service Manual](#)

(117 pages)

[Air Conditioner Toshiba RAS-5M34UAV-E1 Owner's Manual](#)

Toshiba split type air conditioners owner's manual (8 pages)

[Air Conditioner Toshiba RAS-B10 SERIES Installation Manual](#)

(10 pages)

[Air Conditioner Toshiba RAS-M10PKVP-E Service Manual](#)

Split type (135 pages)

[Air Conditioner Toshiba RAS-18N3KV2 Series Installation Manual](#)

(23 pages)

[Air Conditioner Toshiba RAS-18N3KV2-E1 Installation Manual](#)

(276 pages)

[Air Conditioner Toshiba RAS-25PAVPG-ND Service Manual](#)

Split-type (128 pages)

[Air Conditioner Toshiba RAS-25PKVPG-ND Owner's Manual](#)

(44 pages)

[Air Conditioner Toshiba RAS-25U2FVG-ND Installation Manual](#)

Split type (108 pages)

[Air Conditioner Toshiba Aurora 25 Installation Manual](#)

(80 pages)

[Air Conditioner Toshiba RAS-30E2KVG-A Owner's Manual](#)

(12 pages)

[Air Conditioner Toshiba RA S-25N4KVRG-ND Service Manual](#)

(137 pages)

[Air Conditioner Toshiba RAS-2M18G3AVG-E Installation Manual](#)

Air conditioner (multi-split type) (18 pages)

[Air Conditioner Toshiba RAS-3M26G3AVG-E Installation Manual](#)

(19 pages)

[Air Conditioner Toshiba RAS-25UFV-ND Owner's Manual](#)

(24 pages)

Summary of Contents for Toshiba RAS-30SKP Series

[Page 1](#) INSTALLATION MANUAL ENGLISH AIR CONDITIONER (SPLIT TYPE) FRANÇAIS Indoor unit RAS-30SKP Series Outdoor unit RAS-30S Series 1110651126 Toshiba 1110651126 (CV_F).indd 1 Toshiba 1110651126 (CV_F).indd 1 11/6/08 5:55:48 PM 11/6/08 5:55:48 PM...

[Page 2](#) Remote Control A-B Selection7 Sélection de Télécommande A-B7 Test Operation8 Opération du Test8 Auto Restart Setting8 Réglage de la Remise en Marche Automatique8 Toshiba 1110651126 (TOC).indd 1 Toshiba 1110651126 (TOC).indd 1 11/6/08 5:57:02 PM 11/6/08 5:57:02 PM...

[Page 3](#) Also, make sure the equipment is properly earthed. • Appliance shall be installed in

accordance with national wiring regulations. If you detect any damage, do not install the unit. Contact your TOSHIBA dealer immediately. CAUTION • Exposure of unit to water or other moisture before installation could result in electric shock.

[Page 4](#) Liquid side : Ø6.35 mm 120 mm each Gas side : Ø15.88 mm Pipe insulating material (polyethylene foam, 8 mm thick) Drain outlet Air outlet Putty, PVC tapes each Toshiba 1110651126 (01_EN).indd 2 Toshiba 1110651126 (01_EN).indd 2 11/10/08 1:32:39 PM 11/10/08 1:32:39 PM...

[Page 5](#) NOTE • When drilling a wall that contains a metal lath, wire lath or metal plate, be sure to use a pipe hole brim ring sold separately. Toshiba 1110651126 (01_EN).indd 3 Toshiba 1110651126 (01_EN).indd 3 11/10/08 9:04:44 AM 11/10/08 9:04:44 AM...

[Page 6](#) Outward form of indoor unit Left R 30 mm (Use polisin (polyethylene) core or the like for bending pipe.) Bottom right Use the handle of screwdriver, etc. Right Toshiba 1110651126 (01_EN).indd 4 Toshiba 1110651126 (01_EN).indd 4 11/10/08 9:04:46 AM 11/10/08 9:04:46 AM...

[Page 7](#) • An allowable height level is up to 10 m. such as from audio equipment, welders, and medical equipment. • A place where the drain water does not cause any problems Strong wind Toshiba 1110651126 (01_EN).indd 5 Toshiba 1110651126 (01_EN).indd 5 12/9/08 10:46:39 AM 12/9/08 10:46:39 AM...

[Page 8](#) Be sure to use a vacuum pump with counter-fl ow prevention function so that inside oil of the pump does not fl ow backward into pipes of the air conditioner when the pump stops. Toshiba 1110651126 (01_EN).indd 6 Toshiba 1110651126 (01_EN).indd 6 11/10/08 9:04:51 AM...

[Page 9](#) • The remote control signal is not received when the settings of indoor unit and remote control are different. • There is no relation between A setting/B setting and A room/B room when connecting the piping and cables. Toshiba 1110651126 (01_EN).indd 7 Toshiba 1110651126 (01_EN).indd 7 11/18/08 1:27:43 PM 11/18/08 1:27:43 PM...

[Page 10](#) • Do not operate ON timer and OFF timer. 2. Press and hold the RESET button on the indoor unit for 3 seconds to cancel the operation. (3 beep sound but OPERATION lamp does not blink) Toshiba 1110651126 (01_EN).indd 8 Toshiba 1110651126 (01_EN).indd 8 11/10/08 9:04:55 AM...

This manual is also suitable for:

Ras-30s series30skp-ar30skp2b