



Whirlpool WFO 3T233 P 6.5 X Quick Manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19

20

•

Bookmarks

[Download this manual](#)

Quick Links





Quick Guide


THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.

In order to receive a more complete assistance, please register your appliance on: www.whirlpool.eu/register

Before using the appliance carefully read the Safety Instruction.

CONTROL PANEL

1. On-Off/Reset button with indicator light
2. Program selection button with indicator light
3. Multizone button with indicator light
4. Turbo button with indicator light / Key lock
5. Eco program indicator light

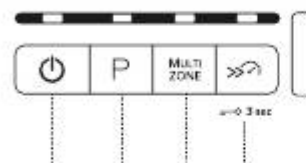

6.
Key lock indicator light



8.
Program number and remaining time indicator

FIRST TIME USE

FILLING THE SALT RESERVOIR

The use of salt prevents the formation of LIMESCALE on the dishes and on the machine's functional components.

- It is mandatory that the salt reservoir never be empty.
- It is important to set the water hardness.

The salt reservoir is located in the lower part of the dishwasher and must be filled when the SALT REFILL indicator light

1. Remove the lower rack and unscrew the reservoir cap (anticlockwise).

2. Position the funnel (see figure) and fill the salt reservoir right up to its edge (approximately 1 kg); it is not unusual for a little water to leak out.


3. Only the first time you do this: fill the salt reservoir with water.

4. Remove the funnel and wipe any salt residue away from the opening. Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash program (this could damage the water softener beyond repair).

Whenever you need to add salt, it is mandatory to complete the procedure before the beginning of the washing cycle to avoid corrosion.

WATER-SOFTENING SYSTEM

Water softener automatically reduces water hardness, consequently preventing scale buildup on heater, contributing also to better cleaning efficiency. This system regenerates itself with salt, therefore it is required

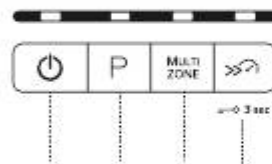

PROGRAMS TABLE

Program

Eco 50° - Program is suitable to clean normally soiled tableware, that for this use, it is the most efficient programme in terms of its combined energy

1. gy and water consumption, and that it is used to assess compliance with the EU Ecodesign legislation.

6			Drying phase	Natural-Dry	
Sense® 50° - 60° - For normally soiled dishes with dried food residues. Sense					
2.					
ses the level of soiling on the dishes and adjusts the program accordingly.					
Intensive 65° - Program recommended for heavily soiled crockery, especially			✓	✓	P
3.					
cially suitable for pans and saucepans.			✓	✓	MULTI ZONE P
Fast Wash 50° - Normally soiled crockery. Everyday cycle, that ensures			✓	✓	MULTI ZONE P
4.			✓	✓	MULTI ZONE P
res optimal cleaning and drying performance in shorter time.					
Crystals 45° - Program for delicate items, which are more sensitive to high			✓	✓	MULTI ZONE
5.					
temperatures, for example glasses and cups.			✓	✓	MULTI ZONE
Rapid 30' 50° - Program to be used for half load of lightly-soiled dishes					
					MULTI

6.

with no dried food residues. Without drying.

Silent 50 - Suitable for night-time operation of the appliance. With the

7. lowest noise.

Sanitizing 65° - Normally or heavily soiled crockery, with additional anti-

8.

bacterial wash. Can be used to perform maintenance of the dishwasher

Prewash - Use to refresh crockery planned to be washed later. No deter-

9.

gent to be used with this program.

Self- Clean 65° - Program to be used to perform maintenance of the

10.

dishwasher, to be carried out only when the dishwasher is EMPTY using

specific detergents designed for dishwasher maintenance.

ECO program data is measured under laboratory conditions according to European Standard EN 60436:2020. Note for Test

Laboratories: For information on com-

parative EN testing conditions, please send an email to the following address: dw_test_support@europeanappliances.com

Pre-treatment of the dishes is not needed before any of the programs.

*) Not all options can be used simultaneously.

**) Values given for programs other than the program Eco are indicative only. The actual time may vary depending on many factors such as temperature and

pressure of the incoming water, room temperature, amount of detergent, quantity and type of load, load balancing, additional selected options and sensor cali-

bration. The sensor calibration can increase program duration up to 20 min.

WATER RECYCLING INDICATOR - When lit, it indicates that standard program uses water recycling system.

9.

Tablet (Tab) indicator light

10. Closed water tap indicator

light

11. Rinse Aid refill indicator

light

12. Salt refill indicator light

13. Power Clean® button with

indicator light

14. Tablet button with indicator light

in the control panel is lit.



Programs description

PLEASE SCAN THE QR CODE ON YOUR

APPLIANCE IN ORDER TO HAVE MORE

DETAILED INFORMATION

		Drying phase	Natural-Dry	
1				
4				
2				
3				
15. Delay button with indicator light	✓	✓		
16. Start/Pause button with indicator light / to refill salt container when empty.	✓	✓		
Frequency of regeneration depends on water hardness level setting - regen- eration takes place once per 8 Eco cycles with water hardness level set to 3.	✓	✓	MULTI ZONE	
Regeneration process starts in final rinse and finishes in drying phase, be- fore cycle ends.	✓	✓	MULTI ZONE	
• Single regeneration consumes: ~3.5L of water;	✓	✓	MULTI ZONE	
• Takes up to 5 additional minutes for the cycle;	✓	✓	MULTI ZONE	
• Consumes below 0.005kWh of energy.	✓	✓	MULTI ZONE	
FILLING THE RINSE AID DISPENSER				

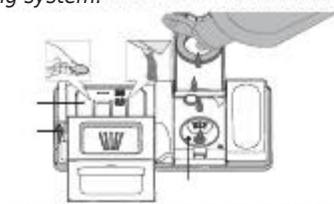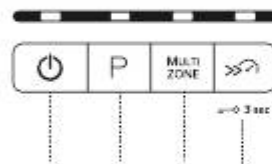  

Rinse aid makes dish DRYING easier. The rinse aid dispenser A should be filled when the RINSE AID REFILL indicator light on the control panel is lit.




NEVER pour the rinse aid directly into the appliance tub.

FILLING THE DETERGENT DISPENSER

To open the detergent dispenser use the opening device C. Introduce the detergent into the dry dispenser D only. Place the amount of detergent for pre-washing directly inside the tub.

If all-in-one detergents are used, we recommend using the TABLET button, because it adjusts the program so that the best washing and drying results are always achieved.

Usage of detergent not designed for dishwashers may cause malfunction or damage to the appliance.

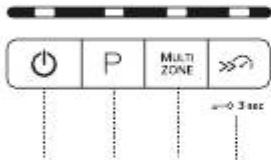

Available options



Drain out

Water

Duration

con

of wash

sumption program (*) (litres/ (h:min) (**) cycle)			Drying phase Natural- Dry	
Eco			✓	✓
3:10 6 th sense			✓	✓
1:25 - 3:00	14.0 0.90 - 1.40		✓	✓
2:50			✓	✓
14.0			✓	✓
1:25			✓	✓
11.5			✓	✓
1:40			✓	✓

11.5

0:30

9.0

3:30

15.0

1:40

10.0

0:12

4.5

1:35

14.0

EN

16

15

in the

Energy

con-

sumption

(kWh/

cycle)

0.85

1.50

1.10

1.20

0.50

 
1.15

1.30


0.01

1.15

1

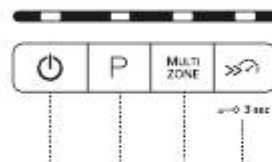

S

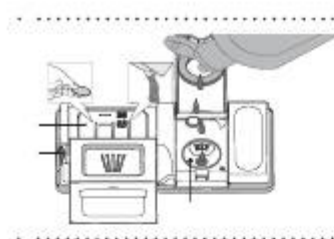 

[Next Page](#)

1
2
3
4
5

Related Manuals for Whirlpool WFO 3T233 P 6.5 X

[Dishwasher Whirlpool WFO 3O33 PL X Daily Reference Manual](#)

(89 pages)

[Dishwasher Whirlpool WFO 3P31 PL X Daily Reference Manual](#)

(73 pages)

[Dishwasher Whirlpool WFO 3T133 PF X Manual](#)

(13 pages)

[Dishwasher Whirlpool WBO 3T133 PF X Daily Reference Manual](#)

(65 pages)

[Dishwasher Whirlpool WFO 3T133 P 6.5 X Quick Manual](#)

(21 pages)

[Dishwasher Whirlpool WFO 3T121 X Daily Reference Manual](#)

(9 pages)

[Dishwasher Whirlpool WFO 3T142 X Daily Reference Manual](#)

(73 pages)

[Dishwasher Whirlpool WFO 3C33 6.5 X Daily Reference Manual](#)

(41 pages)

[Dishwasher Whirlpool WFO 3P33 DL X UK Health & Safety And Installation Manual](#)

(12 pages)

[Dishwasher Whirlpool WFC 3C34 F X Health & Safety And Installation Manual](#)

(13 pages)

[Dishwasher Whirlpool WFE2B19XUKN Daily Reference Manual](#)

(8 pages)

[Dishwasher Whirlpool WFP 5O41 PLG X Instructions For Use Manual](#)

(69 pages)

[Dishwasher Whirlpool WFC 3C34 P Daily Reference Manual](#)

(49 pages)

[Dishwasher Whirlpool WFC 3C34 P X Daily Reference Manual](#)

(33 pages)

[Dishwasher Whirlpool WFC 3C33 F X Quick Manual](#)

(33 pages)

[Dishwasher Whirlpool WFC 3C33 PF Daily Reference Manual](#)

(73 pages)

Summary of Contents for Whirlpool WFO 3T233 P 6.5 X

Page 1 Quick Guide THANK YOU FOR BUYING A WHIRLPOOL PRODUCT. PLEASE SCAN THE QR CODE ON YOUR In order to receive a more complete assistance, please register your appliance on: www.whirlpool.eu/register APPLIANCE IN ORDER TO HAVE MORE DETAILED INFORMATION Before using the appliance carefully read the Safety Instruction.

Page 2 Policies, standard documentation, ordering of spare parts and additional product information can be found by: • Using QR code on your product. • Visiting our website docs.whirlpool.eu/docs and parts-selfservice.europeanappliances.com • Alternatively, contact

our After-sales Service (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

Page 3 يمكن العثور على مستندات السياسة والمستندات القياسية ومعلومات المنتج الإضافية من خلال استخدام: parts-selfservice.europeanappliances.com و docs.whirlpool.eu/docs و parts-selfservice.europeanappliances.com و docs.whirlpool.eu/docs رمز الاستجابة السريعة على منتجك زيارة موقعنا الإلكتروني (وكبدل، يمكنك الاتصال بخدمة ما بعد البيع لدينا (راجع رقم التليفون في كتيب الضمان. يرجى... عند الاتصال بخدمة ما بعد البيع ذكر الكود المذكورة على لوحة تمييز المنتج

Page 4 شكرك على شرائك أحد منتجات شركة: للحصول على المساعدة الكاملة، WHIRLPOOL. الدليل السريع يرجى تسجيل جهازك على يـ رجي مسح رمز الاستجابة السريعة ضوئـ يـ أ على جهازك للحصول على مزيد من المعلومات التفصيلية. قبل استخدام الجهاز اقرأ تعليمات السلامة www.whirlpool.eu/register بعناية...

Page 5 Stručný Návod DĚKUJEME VÁM, ŽE JSTE SI ZAKOUPILI VÝROBEK ZNAČKY WHIRLPOOL. Pro získání komplexnější asistence zaregistrujte prosím svůj PRO ZÍSKÁNÍ PODROBNĚJŠÍCH IN-spotřebič na: www.whirlpool.eu/register FORMACÍ NASKENUJTE PROSÍM QR KÓD NA VAŠEM SPOTŘEBIČI. Před použitím spotřebiče si pečlivě přečtěte Bezpečnostní pokyny.

Page 6 Firemní zásady, standardní dokumentaci, objednávky náhradních dílů a další informace o výrobku získáte: • Použití QR kódu na produktu. • Návštěvou našeho webu docs.whirlpool.eu/docs a parts-selfservice.europeanappliances.com • Případně kontaktujte náš poprodejní servis (telefonní číslo najdete v záručním listě).

Page 7 Guide Rapide MERCI D'AVOIR CHOISI UN PRODUIT WHIRLPOOL. Afin de recevoir une assistance plus complète, merci d'enregi- MERCI DE SCANNER LE QR CODE SUR strer votre appareil sur on: www.whirlpool.eu/register VOTRE APPAREIL POUR OBTENIR DES Avant d'utiliser l'appareil, lisez attentivement les Consignes de INFORMATIONS PLUS DÉTAILLÉES...

Page 8 Guide Rapide Les données du programme Éco sont mesurées sous des conditions en laboratoire conformément à la norme européenne EN 60436:2020. Note pour les laboratoires d'essai : pour toutes informations sur les conditions d'essai comparatif EN, s'adresser à: dw_test_support@europeanappliances.com Aucun prétraitement de la vaisselle n'est nécessaire avant l'un quelconque des programmes. *) Les options ne peuvent pas toutes être utilisées en même temps.

Page 9 • En utilisant le QR code sur votre produit. • En visitant notre site web docs.whirlpool.eu/docs et parts-selfservice.europeanappliances.com • Vous pouvez également contacter notre Service après-vente (voir numéro de téléphone dans le livret de garantie). Lorsque vous contactez notre Service après-vente, veuillez indiquer les codes figurant sur la plaque signalétique de l'appareil.

Page 10 Skrócona Instrukcja Obsługi DZIĘKUJEMY ZA ZAKUP PRODUKTU WHIRLPOOL. Aby uzyskać kompleksową pomoc, prosimy zarejestrować urząd- ZESKANUJ KOD QR NA SWOIM URZĄ-dzenie na stronie: www.whirlpool.eu/register. DZENIU, ABY UZYSKAĆ BARDZIEJ Przez użyciem urządzenia przeczytać uważnie Instrukcję bezpie- SZCZEGÓŁOWE INFORMACJE. czeństwa. PANEL STEROWANIA Przycisk i kontrolka Wł.-Wył./Reset...

Page 11 Skrócona Instrukcja Obsługi Dane Programu Eco uzyskano na podstawie pomiarów wykonanych w warunkach laboratoryjnych zgodnie z normą europejską EN 60436:2020. Uwaga dla laboratoriów testowych: szczegółowe informacje dotyczące warunków testów porównawczych EN można uzyskać pod adresem: dw_test_support@europeanappliances.com. Przed żadnym z tych programów nie ma potrzeby wstępnego przygotowania naczyń. *) Nie wszystkie opcje mogą...

Page 12 • Korzystając z kodu QR na swoim produkcie. • Odwiedzając naszą stronę internetową docs.whirlpool.eu/docs i parts-selfservice.europeanappliances.com • Ewentualnie można skontaktować się z naszą obsługą posprzedażową (patrz numer telefonu w książeczce gwarancyjnej). Kontaktując się z naszą obsługą posprzedażową, należy podać kody zamieszczone na tabliczce identyfikacyjnej produktu.

Page 13 Ghid De Referință Rapidă VĂ MULȚUMIM CĂ AȚI ACHIZIȚIONAT UN PRODUS WHIRLPOOL. Pentru a beneficia de servicii complete de asistență, vă rugăm SCANAȚI CODUL QR DE PE APARATUL SĂ VĂ ÎNREGISTRAȚI aparatul pe: www.whirlpool.eu/register DUMNEAVOASTRĂ PENTRU A OBTI- NE INFORMAȚII MAI DETALIAȚE Înainte de a utiliza aparatul, citiți cu atenție

instrucțiunile pri-...

Page 14 Datele programului ECO sunt stabilite în condiții de laborator, în conformitate cu standardul european EN 60436:2020. Notă pentru laboratoarele de testări: pentru informații privind condițiile testului comparativ EN, trimiteți o solicitare la adresa: dw_test_support@europeanappliances.com Nu este necesară tratarea în prealabil a vaselor înainte oricăruia dintre aceste programe. *) Nu toate opțiunile pot fi utilizate simultan.

Page 15 Puteți găsi politicile, documentația standard, informațiile despre comandarea pieselor de schimb și informațiile suplimentare despre produs: • Utilizarea codului QR de pe produsul dumneavoastră. • Vizitând site-urile noastre [web docs.whirlpool.eu/docs](http://docs.whirlpool.eu/docs) și parts-selfservice.europeanappliances.com contactați serviciul nostru de asistență tehnică post-vânzare • Ca alternativă, (consultați numărul de telefon din certificatul...

Page 16 ĎAKUJEME, ŽE STE SI KÚPILI VÝROBOK WHIRLPOOL. PRE ZÍSKANIE PODROBNEJŠÍCH IN- Ak chcete získať komplexnejšiu pomoc a podporu, zaregistrujte sa FORMÁCIÍ NASKENUJTE, PROSÍM, QR te, prosím, svoj spotřebič na: www.whirlpool.eu/register KÓD NA VAŠOM SPOTREBIČI. Prv než spotřebič začnete používať, pozorne si prečítajte Bezpečnost- né...

Page 17 Firemné zásady, štandardnú dokumentáciu, objednávanie náhradných dielov a ďalšie informácie o produkte nájdete na: • Použitie QR kódu na produkte. • Našej webovej stránke docs.whirlpool.eu/docs a parts-selfservice.europeanappliances.com. • Prípadne sa obráťte na náš popredajný servis (Telefónne číslo nájdete v záručnej knižke). Pri kontaktovaní nášho popredajného servisu uveďte, prosím, kódy z výrobného štítku vášho spotřebiča.

Page 19 Stručný Návod...

Page 20 400020006417 06/2024 jk - Xerox Fabriano...