

 
Switching The Time Display; Viewing Jpeg Images - Sanyo NV-E7000 Installation And Operation Manual

Portable dvd navigation system

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks




SWITCHING THE TIME DISPLAY

You can select the type of time display to appear on the screen.

■ For DVD videos
Select from "TOTAL ELAPSED", "TITLE REMAIN", "CHAPTER ELAPSED", "CHAPTER REMAIN" and "NO DISPLAY".



■ For CDs
Select from "SINGLE ELAPSED", "SINGLE REMAIN", "TOTAL ELAPSED", "TOTAL REMAIN" and "OFF".

Select from "TOTAL ELAPSED", "TITLE REMAIN", "CHAPTER ELAPSED", "CHAPTER REMAIN" and "NO DISPLAY".

 
During playback, press the **TIME** button () to select the type of time display. Repeatedly pressing the button changes the type.

For DVD videos
Time display

HIDE TIME DISPLAY

For DVD videos
Press the **TIME** button ()
For CDs
Press the **TIME** button ()

157
DVD
CD
* Inoperable from the unit.
) to select
) to hide the time display.
) and select "OFF".

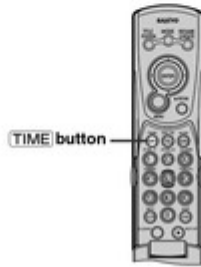

* Inoperable from the unit.

During playback, press the **TIME** button () to select the type of time display.

VIEWING JPEG IMAGES (1)

Images downloaded from a digital camera or the Internet and recorded onto a CD-R* with the help of a PC can be viewed on this unit.

* A disc recorded with JPEG images created using a PC (Windows)

SKIP button

JOYSTICK (a)
button

The following are ways to view JPEG images.

- 12 types of slideshow displays
- Enlargement/reduction of images

1

Insert the CD-R with recorded images in the unit.

A disc data screen appears.

<Example>

Hint

Files can only be played back with JPE, JPG or JPEG format. There may be instances when files are not viewable with JPE or JPG.

* Files not viewable are marked with a

Up to 8 half-size, upper-case alphanumeric characters and underscores can be displayed. (Characters after the 8th will not be displayed.)

Names recorded in a format other than "ISO9960 Level 1" may not be displayed or played back normally. Also, folder names and file names recorded with symbols other than the above will not be displayed correctly.

For multi-session, only the last session will be displayed.

720X480 dot images will fit exactly into the unit's screen.

JPG images recorded on CD EXTRA, Active Audio or Mixed CDs will not be displayed.

Up to 179 folders (a total of 655,360 files) can be read by the unit.

JOYSTICK (a)

button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button

SKIP button


SWITCHING THE TIME DISPLAY

DVD CD

VIEWING JPEG IM

Images downloaded from a digital camera with the help of a PC can be viewed on

 * A disc recorded with JPEG images created us

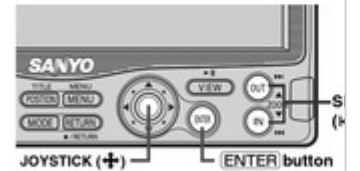

The following are ways to view JPEG im

- 12 types of slideshow displays
- Enlargement/reduction of images

1 Insert the CD

A disc data scr

<Example>



Hint

- Files can only be play be instances when fil
- Files not viewable a
- Up to 8 half-size, upp can be displayed. (Cl
- Names recorded in a displayed or played b recorded with symbol correctly.
- For multi-session, on
- 720X480 dot images
- JPG images recorded be displayed.
- Up to 179 folders (a t


SWITCHING THE TIME DISPLAY

DVD CD

VIEWING JPEG IM

Images downloaded from a digital camera with the help of a PC can be viewed on

 * A disc recorded with JPEG images created us

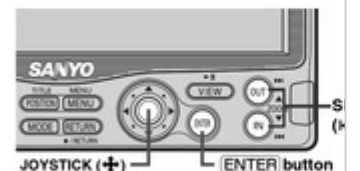

The following are ways to view JPEG im

- 12 types of slideshow displays
- Enlargement/reduction of images

1 Insert the CD

A disc data scr

<Example>

During playback, press the **TIME** button () to select

- Play mode
 - Rotate image symbol before the file name.
- D
D
D
C
D
J
P
E
G
158

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
82
83
84
85
86
87
88
89

Chapters

Introduction	11
Navi Operation	30
DVD/CD/Jpeg Imaging Operation	76
Other	95

Related Manuals for Sanyo NV-E7000

[Car Navigation system Sanyo NV-E7000 Service Manual](#)

Portable dvd navigation system (68 pages)

[Car Navigation system Sanyo NV-E7000 Service Manual](#)

Portable dvd navigation system (7 pages)

[Car Navigation system Sanyo NV-E7000 Supplementary Manual](#)

Portable dvd navigation system (3 pages)

[Car Navigation system Sanyo NV-E7000 Specifications](#)

Portable/automotive navigation system & mobile dvd entertainment system (2 pages)

[Car Navigation system Sanyo NVM-4030 Instruction Manual](#)

Portable navigation system (41 pages)

[Car Navigation system SANYO NVM-4030 Instruction Manual](#)

Portable navigation system (42 pages)

[Car Navigation system Sanyo Easy Street NVM-4070 Instruction Manual](#)

Sanyo easy street nvm-4070: user guide (45 pages)

[Car Navigation system SANYO NVM-4070 Instruction Manual](#)

Portable navigation system (45 pages)

[Car Navigation system Sanyo NVM-4070 Instruction Manual](#)

Portable navigation system (30 pages)

[Car Navigation system Sanyo Easy Street NVM-4050 Instruction Manual](#)

Sanyo easy street nvm-4050: user guide (40 pages)

[Car Navigation system SANYO NVM-4050 Instruction Manual](#)

Portable navigation system (41 pages)

[Car Navigation system Sanyo NVM-4370 Instruction Manual](#)

Portable (8 pages)

Related Content for Sanyo NV-E7000