



Whirlpool AKZ 162 - USING THE ELECTRONIC PROGRAMMER Manual To Using

Guide to using the electronic programmer

1
2

--

•

Bookmarks

--

[Download this manual](#)

Quick Links



Electronic programmer

Temperature

Increase

Indicators

ON/OFF - Function selection knob
Button to select and change programmes
Knob to change programme (temperature, time, levels)

Fast starting the oven

When the oven is connected to the power supply for the first time or reconnected after a power failure, the display indicates "STOP".

To switch on the oven:

1. Turn knob to "0".

2. Press the

button. The display shows "--:--".

Selecting and changing the clock time:

1. Press the button three times.

2. Turn the knob

within 15 seconds to set the time of day. The time of day flashes on the display.

3. Press the button

or wait 15 seconds to get automatic confirmation of the setting.

To modify the time of the day:

Press the button

twice

blinks on the display. Repeat the steps described above.

Select cooking function:

1. Turn knob

to the chosen function: the preset temperature or grill level will flash on the display.

2. If this value is right, press the button

to confirm or wait 10 seconds to have the setting

accepted automatically.

To change the pre-set temperature or grill level:

1. Turn knob

: the temperature (or grill level when knob blinks on the display.

2. Press button

to confirm or else wait about 10 seconds to have the setting accepted automatically.

The oven begins operation about 5 seconds after confirmation: the temperature increase indicators

on the display turn on sequentially, indicating the temperature increase on the graduated scale °C.

Notes:

The set values can be changed even during cooking.

At the end of cooking:

Switch off the oven by turning knob

back to "0". The time of day appears again on the display.

Important notes:

To cancel any selection made, turn knob to "0".

Keeping button

down for 5 seconds deactivates the audio signal associated with the manipulation of knobs and buttons.

Press button

again for 5 seconds to reactivate. For safety reasons, the oven switches off automatically (except for the

" and

functions) after 4.5 hours of continuous operation.

5019 610 56189

GUIDE TO USING THE ELECTRONIC PROGRAMMER

Display

Heat

Maintenance

Extra

browning

Cooking time

End of

Clock

cooking time

is on the selection

)

Operating the oven using the electronic programmer

Selecting the cooking time:

Select the cooking time (available with any function) to turn the oven on for a specified period of time. At the end of the specified time the oven will switch off automatically. The maximum programmed cooking time is 3 hours and 59 minutes.

1. Set the function and temperature or grill level (see chapter: "Fast starting the oven" and

"Selecting the cooking function").

2. Repeatedly press the button

, the indicator

3. Turn knob

clockwise: the selected time blinks on the display. The appearance of the dash "-" indicates that the chosen time decreases until "0" is reached.

4. The oven automatically starts cooking 20 seconds after the setting and the time remaining until the end of cooking appears on the display.

Note: To view or change the previously set temperature, turn the knob to the display of the remaining time, wait 20 seconds or press the button

To use the special functions Extra browning and Heat Maintenance "Special functions".
To change the pre-set temperature or grill level:
Turn the knob
and confirm by pressing the button
acceptance of the setting.

Appearance of
on the display
When the pre-set time (browning) runs out,
signal sounds for 15 seconds (intermittent). The oven switches off automatically and the oven's interior
lamp stay on for 25 min.

1. Press button
to stop the acoustic signal.
2. Turn knob
back to "0". The lamp turns off.
The time of day appears again on the display.
blinks on the display and "-0:00" appears.
by one click. To return
, consult the chapter
or wait about 10 seconds for automatic
appears on the display and an acoustic



2

5

3

[Next Page](#)

1
[2](#)

Related Manuals for Whirlpool AKZ 162 - USING THE ELECTRONIC

PROGRAMMER

[Control Panel Whirlpool Cabrio Service Manual](#)

Maytag, kenmore 900 series (60 pages)

Summary of Contents for Whirlpool AKZ 162 - USING THE ELECTRONIC PROGRAMMER

[Page 1](#) GUIDE TO USING THE ELECTRONIC PROGRAMMER Electronic Display Operating the oven using the electronic programmer programmer Selecting the cooking time: Select the cooking time (available with any function) to turn the oven on for a specified period of time. At the end of the specified time the oven will switch off automatically. The maximum programmed cooking time is 3 hours and 59 minutes.

[Page 2](#) Setting end of cooking time Selecting the special Extra Browning function: 1. Set the cooking time or end of cooking time. See "Fast starting the oven" and "Selecting the By using this function it is possible to preset the end of cooking time. The maximum programmed cooking function".