



Asus RS160-E5 - 0 MB RAM Approved Vendor List

Rs160-e5 memory approved vendor list

1

--

•

Bookmarks

--

[Download this manual](#)

Quick Links

[illegible]

ASUS				
04G00161796M				
ASUS				
04G001618948				
ATP				
AH12K72E4BJE6M				
Hynix				
HYMP351P72AMP4-Y5 AB-A 4GB				
Kingston				
KVR667D2D4P5/4G				
Qimonda				
HYS72T128000HP-3S-B				
Qimonda				
HYS72T128900HP-3S-B				
Qimonda				
HYS72T128900EP-3S-B2				
Qimonda				
HYS72T256920HP-3S				
Qimonda				
HYS72T256920EP-3S-B2				
Qimonda				
HYS72T512920EP-3S-C2				
Samsung				
M393T5166AZA-CE6				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
1GB				
DDR2-667 1GB ECC/REG (Dual Rank)				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
4GB				
DDR2-667 4GB ECC/REG (Dual Rank)				
512MB				
DDR2-667 512MB ECC/REG (Single Rank) Samsung / K4T51083QE-ZCE6				
1GB				
DDR2-667 1GB ECC/REG (Dual Rank)				
1GB				
DDR2-667 1GB ECC/REG (Dual Rank)				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
4GB				
DDR2-667 4GB ECC/REG (Dual Rank)				
1GB				
DDR2-667 1GB ECC/REG (Dual Rank)				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
4GB				
DDR2-667 4GB ECC/REG (Dual Rank)				
DDR2-667 4GB ECC/REG (Dual Rank)				
4GB				
DDR2-667 4GB ECC/REG (Dual Rank)				
1GB				
DDR2-667 1GB ECC/REG (Single Rank)				
1GB				
DDR2-667 1GB ECC/REG (Single Rank)				
1GB				
DDR2-667 1GB ECC/REG (Single Rank)				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
2GB				
DDR2-667 2GB ECC/REG (Dual Rank)				
4GB				
DDR2-667 4GB ECC/REG (Dual Rank)				
4GB				
DDR2-667 4GB ECC/REG (Dual Rank)				
Samsung / K4T51043QC-ZCE6				
Samsung / K4T51083QE-ZCE6				
Samsung / K4T1G084QD-ZCE6				
Samsung / K4T2G2640A-ZCE6				

Samsung / K4T51083QE-ZCE6				
Elpida / E1108ACBG-6E-E				
Samsung / K4T51043QE-ZCE6				
Samsung / K4T51043QC-ZCE6				
Elpida / E1108ACBG-6E-E				
Samsung / K4T1G044QC-ZCE6				
Elpida / E1108ACBG-6E-E				
Elpida / E1108ACBG-6E-E				
Micron / 7SE22D9HMMW				
Hynix / HY5PS2G431AMP-Y5				
Elpida / E1104ACSE-6E-E				
Qimonda / HYB18T512400BF3S				
Qimonda / HYB18T512405BF3S				
Qimonda / HYB18T512400B2F3S				
Qimonda / HYB18T512405BF3S				
Qimonda / HYB18T512400B2F3S				
Qimonda / HYB18T1G405C2F-3S				
Samsung / K4T2G264QA-ZCE6				
2				
2				
2				
2				
1				
2				
1				
2				
2				
2				
2				
1				
2				
2				
2				
2				
1				
1				
1				
2				
2				
2				
2				

Related Manuals for Asus RS160-E5 - 0 MB RAM

- [Server Asus rs160-e5 Configuration Manual](#)
(20 pages)
- [Server Asus Pedestal/5U Rackmount Server TS500-E5 User Manual](#)
Asus ts500-e5 pedestal/5u rackmount server user guide (164 pages)
- [Motherboard ASUS DSAN-DX User Manual](#)
(162 pages)
- [Network Storage Server Asus TS500-E5 Configuration Manual](#)
(24 pages)
- [Server Asus 1U Rackmount Barebone Server RS160-E3/PS4 User Manual](#)

Asus rs160-e3/ps4 1u rackmount barebone server user guide (140 pages)

[Server Asus RS160-E2 User Manual](#)

1u rackmount barebone server (132 pages)

[Server Asus RS160-S5 Approved Vendor List](#)

Rs160-s5 memory approved vendor list (1 page)

[Server Asus RS161-E2 - 0 MB RAM User Manual](#)

1u rackmount barebone server (124 pages)

[Server Asus TS700-E4 RX8 Datasheet](#)

Ts700-e4/rx8 qualified vendor list (2 pages)

[Server Asus RS162-E4 RX4 User Manual](#)

1u rackmount barebone server (164 pages)

[Server Asus RS161-E5 - 0 MB RAM Service Manual](#)

1u rackmount server (124 pages)

[Server Asus RS160-E4 - 0 MB RAM User Manual](#)

1u rackmount server (144 pages)

[Server Asus RS161-E4 PA2 User Manual](#)

1u rackmount server (126 pages)

[Server Asus RS160-E4 PA4 User Manual](#)

1u rackmount barebone server (186 pages)

[Server Asus DSBF-D16 SAS Hardware Manual](#)

User manual (2 pages)

[Server Asus DSBV-DX SAS Hardware Manual](#)

User manual (2 pages)

Related Products for Asus RS160-E5 - 0 MB RAM

[Asus RS160-E3 PS4](#)

[Asus RS160-E2](#)

[Asus RS161-E2 - 0 MB RAM](#)

[Asus 1U Rackmount Barebone Server RS160-E3/PS4](#)

[Asus RS161-E4 - 0 MB RAM](#)

[Asus RS162-E4 RX4](#)

[Asus RS161-E5 - 0 MB RAM](#)

[Asus RS160-E4 - 0 MB RAM](#)

[Asus RS161-E4 PA2](#)

[Asus RS160-E4 PA4](#)

[Asus RS160-E2/CS3](#)

[Asus RS160-E4/PA4](#)

[Asus RS161-E2/PA2](#)

[Asus RS161-E5/PA2](#)

[Asus RS160-S5/PX4](#)

[Asus RS161-E4/PA2](#)

This manual is also suitable for:

[Ts500-e5Dsan-dx](#)