

 
Installing The Cpu - Asus Vintage User Manual

Barebone system

| |
|-------------------|
| 1 |
| 2 |
| Table Of Contents |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86



•

[Table of Contents](#)

•

Bookmarks



2.4.2 Installing the CPU

Follow these steps to install a CPU.


1.

Locate the 478-pin ZIF socket on the motherboard.

2.

Unlock the socket by pressing the lever sideways, then lift it up to a 90°-100° angle.

Make sure that the socket lever

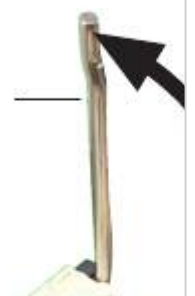

is lifted up to a 90°-100° angle, otherwise the CPU does not fit in completely.

3.

Position the CPU above the socket such that its marked corner matches the base of the socket lever.

4.

Carefully insert the CPU into the socket until it fits in place.

The CPU fits only in one correct orientation. DO NOT force the CPU into the socket to prevent bending the pins and damaging the CPU!

5.

When the CPU is in place, push down the socket lever to secure the CPU. The lever clicks on the side tab to indicate that it is locked.

22

Socket lever

Chapter 2: Basic Installation

90 - 100

Gold mark



[Table of Contents](#)



ManualsLib.com

[Previous Page](#)
[Next Page](#)

1
...
19
20
21
22
23
24
25
26

Quick Links:

[Central Processing Unit \(Cpu\)](#)

Related Manuals for Asus Vintage

[Desktop Asus Vintage User Manual](#)

Barebone system (90 pages)

[Desktop ASUS Vintage-S800 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage-PH1 User Manual](#)

Barebone system (98 pages)

[Desktop Asus Vintage PE1 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage PE1 User Manual](#)

Asus vintage pe1: user guide (84 pages)

[Desktop Asus Vintage AE1 Quick Start Manual](#)

Barebone system (80 pages)

[Desktop Asus VINTAGE-AE1 Manual](#)

Barebone system (96 pages)

[Desktop Asus Vintage-AE1 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage PE2 Quick Installation Manual](#)

Barebone system (80 pages)

[Desktop ASUS VivoPC Barebone User Manual](#)

(50 pages)

[Desktop Asus VivoMini UN Series User Manual](#)

(38 pages)

[Desktop Asus VivoMini Installation Manual](#)

Memory, wireless card, and solid state drive (ssd) installation guide (16 pages)

[Desktop Asus V2-PH1 Quick Installation Manual](#)

Barebone system (70 pages)

[Desktop Asus V2-PH1 Manual](#)

Barebone system (104 pages)

[Desktop ASUS VC60 Series User Manual](#)

Vivopc vc60 series (38 pages)

[Desktop Asus VINTAGE2-PE1 Quick Installation Manual](#)

Barebone system (100 pages)

Related Content for Asus Vintage

[T4 Series Installing A Cpu](#)

Asus T4 Series

[T Series Installing A Cpu](#)

Asus T Series

[V6 Series Installing A Cpu](#)

Asus V6 Series

[P3 Series Installing A Cpu](#)

Asus P3 Series

[Pundit P3-PH4 Installing A Cpu](#)

Asus Pundit P3-PH4

[G Series Installing The Cpu Fan And Heatsink Assembly](#)

Asus G Series

[V4 Series Installing A Cpu](#)

Asus V4 Series

[Vintage V2-AH2 Installing A Cpu](#)

Asus Vintage V2-AH2

This manual is also suitable for:

[Vintage-s800](#)