



# About This Guide - Asus Vintage User Manual

 
Barebone system



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86



•

[Table of Contents](#)

•

## Bookmarks







## About this guide

### **Audience**

This guide provides general information and installation instructions about the ASUS Terminator 1 barebone system. This guide is intended for experienced users and integrators with hardware knowledge of personal computers.

### **How this guide is organized**

This guide contains the following parts:

**1.**

## **Chapter 1: System introduction**

This chapter gives a general description of the ASUS Terminator 1. The chapter lists the system features including introduction on the front and rear panel, and internal components.

**2.**

## **Chapter 2: Basic installation**

This chapter provides step-by-step instructions on how to install components in the system.

**3.**

## **Chapter 3: Starting up**

This chapter helps you power up the system and install drivers and utilities from the support CD.

**4.**

## **Chapter 4: Motherboard information**

This chapter gives information about the motherboard that comes with the system. This chapter includes the motherboard layout, jumper settings, and connector locations.

**5.**

## **Chapter 5: BIOS setup**

This chapter tells how to change system settings through the BIOS Setup menus and describes the BIOS parameters.

**8**

ManualsLib.com

[Previous Page](#)  
[Next Page](#)

1  
...  
5  
6  
7  
8  
9  
10  
11  
12

Quick Links:

[Central Processing Unit \(Cpu\)](#)

## Related Manuals for Asus Vintage

[Desktop Asus Vintage User Manual](#)

Barebone system (90 pages)

[Desktop ASUS Vintage-S800 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage-PH1 User Manual](#)

Barebone system (98 pages)

[Desktop Asus Vintage PE1 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage PE1 User Manual](#)

Asus vintage pe1: user guide (84 pages)

[Desktop Asus Vintage AE1 Quick Start Manual](#)

Barebone system (80 pages)

[Desktop Asus VINTAGE-AE1 Manual](#)

Barebone system (96 pages)

[Desktop Asus Vintage-AE1 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage PE2 Quick Installation Manual](#)

Barebone system (80 pages)

[Desktop ASUS VivoPC Barebone User Manual](#)

(50 pages)

[Desktop Asus VivoMini UN Series User Manual](#)

(38 pages)

[Desktop Asus VivoMini Installation Manual](#)

Memory, wireless card, and solid state drive (ssd) installation guide (16 pages)

[Desktop Asus V2-PH1 Quick Installation Manual](#)

Barebone system (70 pages)

[Desktop Asus V2-PH1 Manual](#)

Barebone system (104 pages)

[Desktop ASUS VC60 Series User Manual](#)

Vivopc vc60 series (38 pages)

[Desktop Asus VINTAGE2-PE1 Quick Installation Manual](#)

Barebone system (100 pages)

## Related Content for Asus Vintage

[BS5000 About This Guide](#)

Asus BS5000

[Essentio ES5000 About This Guide](#)

Asus Essentio ES5000

[BS5000 About This Guide](#)

Asus BS5000

[E900 G4 About This Guide](#)

Asus E900 G4

[V\\*-P5G45 Series About.this.guide](#)

Asus V\*-P5G45 Series

[E500 G5 SFF About This Guide](#)

Asus E500 G5 SFF

[Chromebox 3 About This User Guide](#)

Asus Chromebox 3

[Terminator 2 About This Guide](#)

Asus Terminator 2



This manual is also suitable for:

[Vintage-s800](#)