

 
Change User Password; Clear User Password - Asus Vintage User Manual

Barebone system

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86



•

[Table of Contents](#)

•

Bookmarks



After you set a supervisor password, the other items appear to allow you to change other security settings.

Security Settings
Supervisor Password
User Password
Change Supervisor Password
User Access Level

Change User Password

Password Check

User Access Level (Full Access)

BIOS SETUP UTILITY
Boot

Allows you to select the access restriction to the Setup items.

Configuration options: [No Access] [View Only] [Limited] [Full Access]

No Access prevents user access to the Setup utility.

View Only allows access but does not allow change to any field.
Limited allows change to only selected fields, such as Date and Time.
Full Access allows viewing and changing all the fields in the Setup utility.

Change User Password

Select this item to set or change the user password. The User Password item on top of the screen shows the default Not Installed. After you have set a password, this item shows Installed.

To set a User Password:

1. Select the **Change User Password** item and press **Enter**.
2. On the password box that appears, type a password composed of letters and/or numbers, then press **Enter**. Your password should have at least six characters.
3. Confirm the password when prompted.

The message "Password Installed" appears after you have successfully set your password. The User Password item now shows Installed. To change the user password, follow the same steps as in setting a user password

Clear User Password

Choose this option to immediately clear the user password,

ASUS Vintage-S800 barebone system

Not Installed

Not Installed


[Full Access]

[Setup]

<Enter> to change password.

<Enter> again to disable password.

83

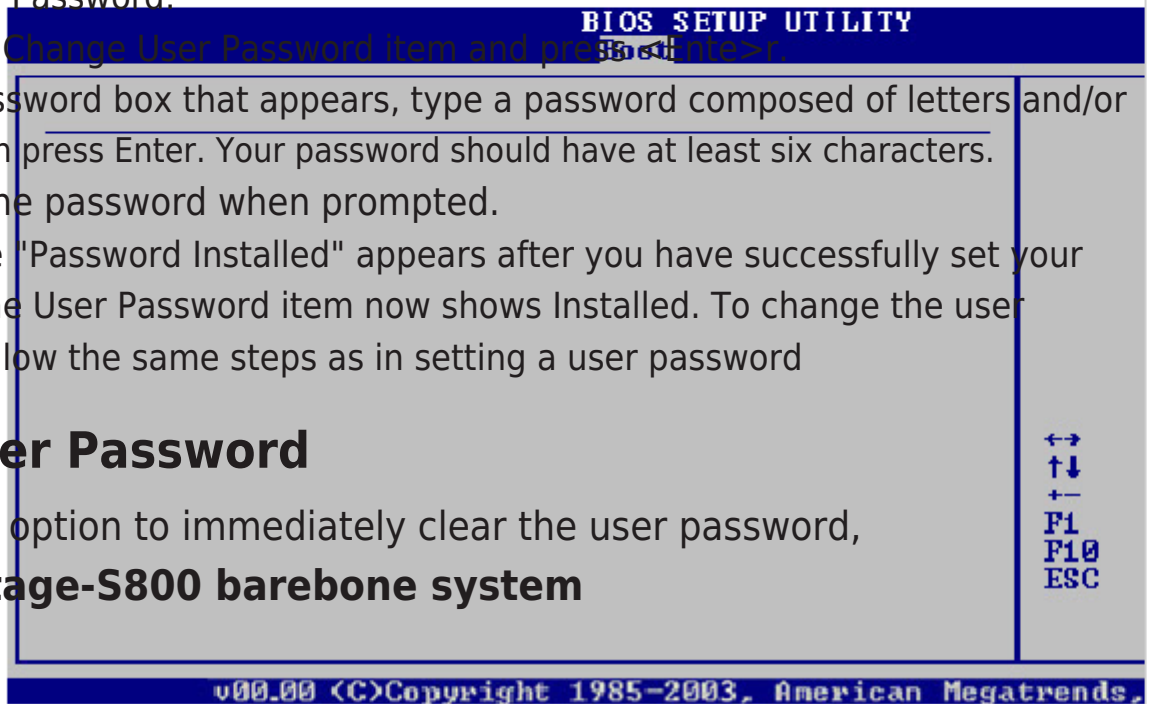

ManualsLib.com

Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
80
81
82
83
84
85
86

Quick Links:

[Central Processing Unit \(Cpu\)](#)

Related Manuals for Asus Vintage

[Desktop Asus Vintage User Manual](#)

Barebone system (90 pages)

[Desktop ASUS Vintage-S800 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage-PH1 User Manual](#)

Barebone system (98 pages)

[Desktop Asus Vintage PE1 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage PE1 User Manual](#)

Asus vintage pe1: user guide (84 pages)

[Desktop Asus Vintage AE1 Quick Start Manual](#)

Barebone system (80 pages)

[Desktop Asus VINTAGE-AE1 Manual](#)

Barebone system (96 pages)

[Desktop Asus Vintage-AE1 Quick Start Manual](#)

Barebone system (9 pages)

[Desktop Asus Vintage PE2 Quick Installation Manual](#)

Barebone system (80 pages)

[Desktop ASUS VivoPC Barebone User Manual](#)

(50 pages)

[Desktop Asus VivoMini UN Series User Manual](#)

(38 pages)

[Desktop Asus VivoMini Installation Manual](#)

Memory, wireless card, and solid state drive (ssd) installation guide (16 pages)

[Desktop Asus V2-PH1 Quick Installation Manual](#)

Barebone system (70 pages)

[Desktop Asus V2-PH1 Manual](#)

Barebone system (104 pages)

[Desktop ASUS VC60 Series User Manual](#)

Vivopc vc60 series (38 pages)

[Desktop Asus VINTAGE2-PE1 Quick Installation Manual](#)

Barebone system (100 pages)

Related Content for Asus Vintage

[Pundit P3-PH5X Change User Password](#)

Asus Pundit P3-PH5X

[BP5265 Change User Password](#)

Asus BP5265

[AS-D760 Change User Password](#)

Asus AS-D760

[AS-D670 Change User Password](#)

Asus AS-D670

[BP5220 Change User Password](#)

Asus BP5220

[V2-PH1 Change User Password](#)

Asus V2-PH1

[P4-P5G41 Change User Password](#)

Asus P4-P5G41

[Pundit P3-PH4C Change User Password](#)

Asus Pundit P3-PH4C

This manual is also suitable for:

[Vintage-s800](#)