

Appendix A Hot Keys - Toshiba Satellite P20-8PW User Manual

 
Toshiba satellite p20-8pw: user guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks



Satellite P20

Hot Keys

Hot keys are keys that, when pressed in combination with the Fn key, turn system functions on and off. Hot keys have an icon label on the key indicating the option or feature the key controls.

Volume mute

Instant security

Power save mode

Standby

Hibernate

Appendix A

Turns the volume off and on. When you press these keys, the current setting is shown in a window.

Blanks the screen to prevent others from accessing your data. To restore the screen and original settings, press any key or use the Touch pad. If you have set a screen saver password, a dialog box appears. Enter the password and click OK. If no screen saver password is set, the screen is restored when you press any key or use the Touch pad.

Changes the power save mode. Press Fn+F2 once to display the Power Save Mode in a window. Press the hotkeys again to change the setting. You can also change this setting through the AC Power or Battery Power items of the Power Save Modes tab in the TOSHIBA Power Management Utility.

The computer enters Standby. To avoid entering Standby unexpectedly, a dialog box appears for verification. However, if you uncheck the dialog box, it will not appear the next time.

The computer enters Hibernate. To avoid entering Hibernate unexpectedly, a dialog box appears for verification. However, if you activate the checkbox in the dialog box, it will not appear the next time.

Changes the active display device. When you press these hotkeys a dialog box appears. Only selectable devices are displayed.

Hot Keys



Table of Contents

[Previous Page](#)
[Next Page](#)

1

...

123

124

125

126

Quick Links:

[Appendix B Features and Specifications](#)

Related Manuals for Toshiba Satellite P20-8PW

[Laptop Toshiba PSM30C-0QQ31 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P20-25 Series Maintenance Manual](#)

(250 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite l500 series reference guide (56 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba Satellite U500-ST5305 Resource Manual](#)

Toshiba satellite u500-st5305: reference guide (64 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

Related Content for Toshiba Satellite P20-8PW

[Satellite C660 Series Hot Keys](#)

Toshiba Satellite C660 Series

[Satellite Pro L450 Series Hot Keys](#)

Toshiba Satellite Pro L450 Series

[Satellite L650D Series Hot Keys](#)

Toshiba Satellite L650D Series

[Satellite Pro A300D Series Hot Keys](#)

Toshiba Satellite Pro A300D Series

[NB100 Series Chapter 3: Hot Keys And Utilities](#)

Toshiba NB100 Series

[Satellite A500 series Hot Keys](#)

Toshiba Satellite A500 series

[Satellite A205 Series Appendix A: Hot Keys/Toshiba Cards](#)

Toshiba Satellite A205 Series

[SATELLITE R850 Hot Keys](#)

Toshiba SATELLITE R850

This manual is also suitable for:

[Satellite p20-s103](#)[Satellite p20-s203f](#)[Satellite p25-sp507](#)[Satellite p25-sp526](#)[Satellite p25-sp509](#)[Psp20c-1u8pw](#) ... [Show all](#)