

Windows Special Keys; Overlay Keys; Using The Overlay To Type Numeric Data - Toshiba Satellite P20-8PW User Manual

 
Toshiba satellite p20-8pw: user guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142




•

[Table of Contents](#)


•

 Bookmarks

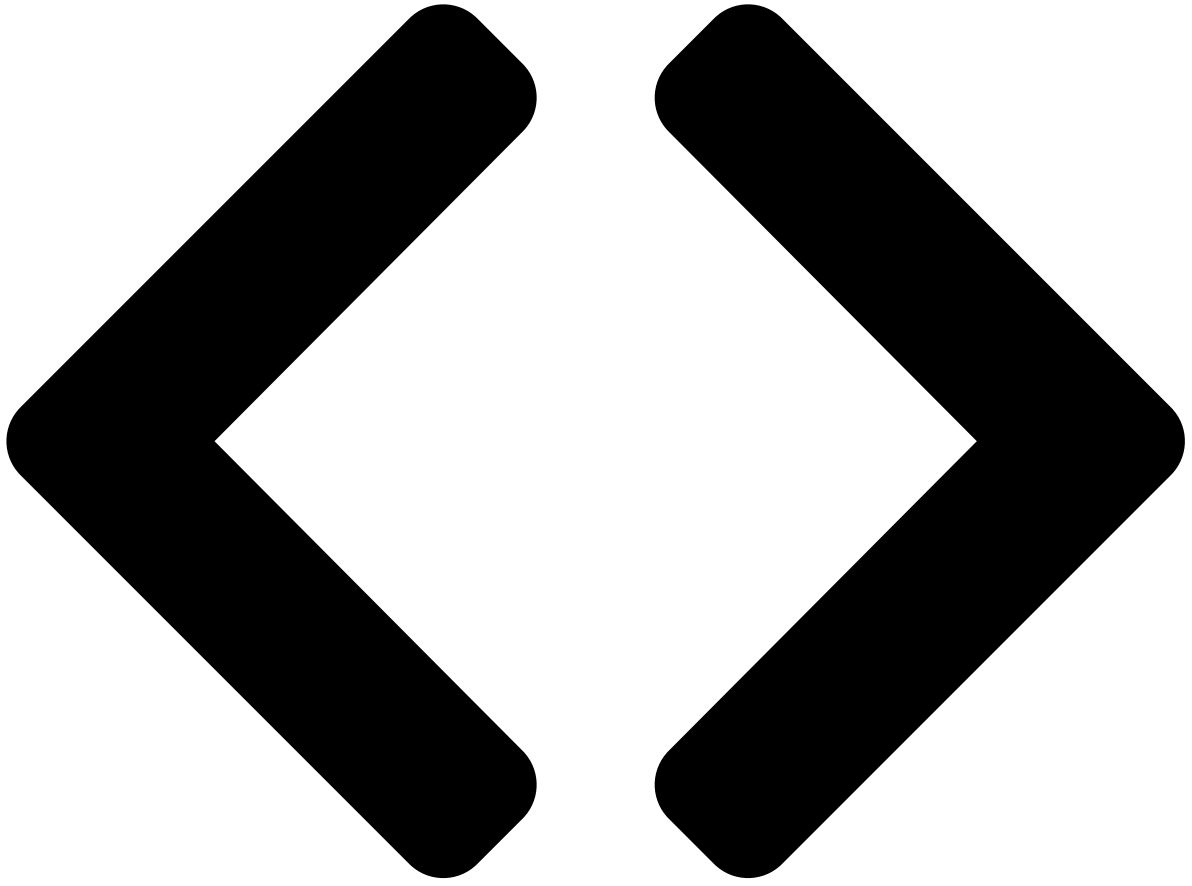

Windows

 The keyboard provides two keys that have special functions in Windows. The Windows key has the same function as the secondary (normally right-side) mouse (or Touch pad) button.

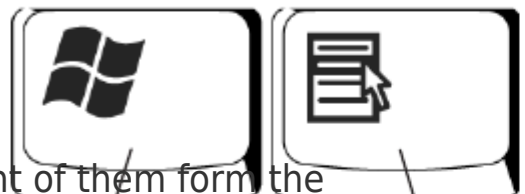


Overlay keys

The keys with numbers and symbols on the front of them form the numeric and cursor overlay. This overlay lets you enter numeric data or control the cursor as you would use the ten-key keypad on a desktop computer's keyboard.

Using the overlay to type numeric data

To turn the numeric overlay on and off, press Fn and F11 simultaneously. The numeric mode light immediately below the F11 key glows when the numeric overlay is on.

 You can still use the overlay keys to type alphabetic characters while the numeric overlay is on.

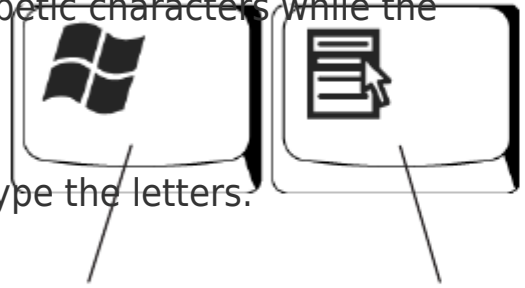

For lowercase letters, hold down Fn while you type the letters.

For uppercase letters, hold down both Fn and Shift while you type the letters.

To use the cursor control keys (allowing you to move the cursor up, down, left and right using the keyboard) when the numeric overlay is on, press and hold down Shift while you use the cursor control keys. To return to the numeric overlay, release Shift.

special keys

WINDOWS

®

key activates the Start menu. The Application key has the

KEY

APPLICATION KEY

Learning The Basics

®



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
57
58
59
60
61
62
63
64

Quick Links:

[Appendix B Features and Specifications](#)

Related Manuals for Toshiba Satellite P20-8PW

[Laptop Toshiba PSM30C-0QQ31 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P20-25 Series Maintenance Manual](#)

(250 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite l500 series reference guide (56 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba Satellite U500-ST5305 Resource Manual](#)

Toshiba satellite u500-st5305: reference guide (64 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

Related Content for Toshiba Satellite P20-8PW

[Satellite A660D Series Windows Special Keys](#)

Toshiba Satellite A660D Series

[Satellite L635 Series Windows Special Keys](#)

Toshiba Satellite L635 Series

[Satellite C660 Series Windows Special Keys](#)

Toshiba Satellite C660 Series

[Satellite Pro L450 Series Windows Special Keys](#)

Toshiba Satellite Pro L450 Series

[Satellite L650D Series Windows Special Keys](#)

Toshiba Satellite L650D Series

[Satellite Pro A300D Series Windows Special Keys](#)

Toshiba Satellite Pro A300D Series

[Portege 2010 Windows Special Keys](#)

TOSHIBA Portege 2010

[NB100 Series Special Windows ® Keys](#)

Toshiba NB100 Series

This manual is also suitable for:

[Satellite p20-s103](#)[Satellite p20-s203f](#)[Satellite p25-sp507](#)[Satellite p25-sp526](#)[Satellite p25-sp509](#)[Psp20c-1u8pw](#) ... [Show all](#)