

The Cd-Rom / Dvd-Rom / Cd-Rw/Dvd / Dvd-R/-Rw / Dvd Multi Drive; Playing Compact Discs - Toshiba Satellite P20-8PW User Manual

 
Toshiba satellite p20-8pw: user guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks



The CD-ROM / DVD-ROM / CD-RW/DVD / DVD-R/-RW /

DVD Multi drive

Press the eject button to open the disc tray. The eject button will open the disc tray even when the computer is off if the battery has power and the computer is in CD mode.

If the computer is turned off and there is no power, use the manual eject button.

Inserting discs into the drive

1. Press the eject button to open the disc tray.
2. Pull the disc tray until it is fully open.
3. Hold the disc by its edges, ensure it is dust-free, and place it carefully

in the disc tray, with the label side up.

4. Press down on the disc until it locks on the spindle.
5. Close the disc tray.

If the disc is not seated properly when you close the disc tray, the disc might be damaged and the tray may not open fully when you press the eject button.


Removing discs from the drive

1. Press the eject button.

Do not press the eject button while the computer is accessing the CDROM/DVD-ROM drive (the Module Bay LED on the left side of the keyboard flashes when the system is accessing the disc drive). If the disc is still spinning when you open the disc tray, wait for it to stop before you remove it.

2. Pull the disc tray until it is fully open, remove the disc, and place it in its protective cover.
3. Close the disc tray.

Playing compact discs

Turn to  chapter 4 to learn about the CD control buttons which are located on the front of your computer. For information on playing DVDs and digital music files such like MP3s, and on playing CDs with your computer turned off, see chapter 5.

[Previous Page](#)
[Next Page](#)

1
...
63
64
65
66
67
68
69
70

Quick Links:

[Appendix B Features and Specifications](#)

Related Manuals for Toshiba Satellite P20-8PW

[Laptop Toshiba PSM30C-0QQ31 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P20-25 Series Maintenance Manual](#)

(250 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite l500 series reference guide (56 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba Satellite U500-ST5305 Resource Manual](#)

Toshiba satellite u500-st5305: reference guide (64 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

Related Content for Toshiba Satellite P20-8PW

[Tecra M1 Dvd-Rom, Cd-Rw/Dvd-Rom And Dvd Multi Drive Troubleshooting](#)

Toshiba Tecra M1

[P300 Writing Cd/Dvd With The Dvd Super Multi Drive Or Hd Dvd-Rom Drive Supporting Dvd±R DL](#)

Toshiba P300

[A300 Series Writing Cd/Dvd With The Dvd Super Multi Drive Or Hd Dvd-Rom Drive Supporting Dvd±R DL](#)

Toshiba A300 Series

[Satellite A305-S6839 Writing Cd/Dvd With The Dvd Super Multi Drive Or Hd Dvd-Rom Drive Supporting Dvd±R DL](#)

Toshiba Satellite A305-S6839

[Satellite 1415 Series Using The Dvd-Rom Or Dvd-Rom/Cd-Rw Multifunction Drive](#)

TOSHIBA Satellite 1415 Series

[Satellite A40 Dvd-Multi \(Cd-R/Rw Dvd-Ram/R/Rw\) Drive](#)

..... [1-27](#)

Toshiba Satellite A40

[TE2000 Dvd-Rom Or Dvd-Rom/Cd-Rw Drive Problems](#)

Toshiba TE2000

[TE2100 Series Dvd-Rom Or Dvd-Rom/Cd-Rw Drive Problems](#)

Toshiba TE2100 Series

This manual is also suitable for:

[Satellite p20-s103](#)[Satellite p20-s203f](#)[Satellite p25-sp507](#)[Satellite p25-sp526](#)[Satellite p25-sp509](#)[Psp20c-1u8pw](#) ... [Show all](#)