

Opening The Disc Tray With The Computer Off; Caring For Compact Discs And Dvds; Using Pc Cards - Toshiba Satellite P20-8PW User Manual

 
Toshiba satellite p20-8pw: user guide

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
Table Of Contents
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142



•

[Table of Contents](#)

•

Bookmarks



Opening the disc tray with the computer off

When your computer is turned off, you can remove and insert CDs in two ways. You can turn your computer to CD mode by pressing the CD/Digital Mode button for more than 3 seconds and then use the eject button as normal. Alternatively, use the manual eject button:

1. Insert a slender object, such as a straightened paper clip, into the manual eject hole.

Never use a pencil to press the manual eject button. Pencil lead can break off inside the computer and damage the devices.

2. Pull the disc tray until it is fully open, insert a CD, or remove it and



place it in its protective cover.

3. Close the disc tray.

Caring for compact discs and DVDs

Store your CDs and DVDs in their original containers to protect them from scratches and keep them clean.

Don't bend a disc or place heavy objects on top of it.



Don't apply a label to, or otherwise mar, the surface of a CD or DVD.

Hold a disc by its outside edge. Fingerprints on the surface of a disc can prevent the drive from reading the data properly.

Don't expose CDs or DVDs to direct sunlight or extreme heat or cold.

To clean a disc, wipe it with a clean, dry cloth—starting from the centre of the disc and wiping toward the outward edge. Do not wipe using a circular motion. If necessary, moisten the cloth with water or a neutral cleaner (not benzene or rubbing alcohol). Let the CD dry completely before inserting it in the drive.

Using PC Cards

PC Cards expand your computer's capabilities and usefulness. You can purchase additional PC Cards from your dealer. Most PC Cards conform to the PCMCIA (Personal Computer Memory Card International Association) standard.

Your Satellite computer comes with two stacked PC Card slots and supports two types of PC Card:

Type II cards are typically used for fax/modems, memory storage, network cards, etc. You can install up to two of these cards, one in

each slot.



Type III cards are used for removable hard disks and other functions that require a larger card. You can install just one of these cards. No Type II card can be installed when a Type III card is installed.

Check the documentation that came with the PC Card to see if it conforms to the PCMCIA 2.1 standard, or later. Other cards may work with your computer, but are likely to be much more difficult to set up and use.

Learning The Basics



[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
64
65
66
67
68
69
70
71

Quick Links:

[Appendix B Features and Specifications](#)

Related Manuals for Toshiba Satellite P20-8PW

[Laptop Toshiba PSM30C-0QQ31 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P20-25 Series Maintenance Manual](#)

(250 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite l500 series reference guide (56 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba Satellite U500-ST5305 Resource Manual](#)

Toshiba satellite u500-st5305: reference guide (64 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

Related Content for Toshiba Satellite P20-8PW

[A500-ST5602 Removing A Disc With The Computer On \(Tray-Type Drive\)](#)

Toshiba A500-ST5602

[Satellite 1905 Series Removing A Disc With The Computer On](#)

Toshiba Satellite 1905 Series

[Satellite Pro L70-B Series Removing A Disc With The Computer On](#)

Toshiba Satellite Pro L70-B Series

[Satellite A205 Series Removing A Disc With The Computer On](#)

Toshiba Satellite A205 Series

[Satellite Removing A Disc With The Computer On](#)

Toshiba Satellite

[Satellite Pro Series Removing A Disc With The Computer On](#)

Toshiba Satellite Pro Series

[Satellite S70-B Series Removing A Disc With The Computer On](#)

Toshiba Satellite S70-B Series

[Tecra A3 Series Removing A Disc With The Computer On](#)

Toshiba Tecra A3 Series

This manual is also suitable for:

[Satellite p20-s103](#)[Satellite p20-s203f](#)[Satellite p25-sp507](#)[Satellite p25-sp526](#)[Satellite p25-sp509](#)[Psp20c-1u8pw](#) ... [Show all](#)