



# Inserting Pc Cards - Toshiba Satellite P20-8PW User Manual

Toshiba satellite p20-8pw: user guide

 


1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
Table Of Contents  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142



•

[Table of Contents](#)



•

## Bookmarks





## Inserting PC Cards

PC Cards require Card and Socket Services software, which is preinstalled with Microsoft acts as a translator between the PC Card and the computer that makes hot swapping (switching cards while the computer is on) possible.

*Microsoft*

*Services for your PC Card. Even if your PC Card comes with its own version of Card and Socket Services, you should use the files included in*

*Microsoft*

*support hot swapping. Refer to your PC Card's manual for information.*

An HDD or CD-ROM connected to a 16-bit PC card, might affect the performance of the computer's sound system and data transmission, including slower transmission speeds and dialling errors.

1. If your PC Card does not support hot swapping, save your data and turn off the computer before inserting the PC Card. For more information, see "Hot swapping" later in this chapter.
2. Hold the PC Card with the arrow side up and the connector side toward the slot.
3. Align the card connectors with an available PC Card slot and carefully slide the card into the slot until it locks into place.

There are two eject buttons, one per slot. When the PC card is seated, the eject button for that slot pops out.

4. Press the eject button to put it in its retracted position.

*If you have a Type III card, insert the connector into the lower slot. If you have a Type II card, insert it into either the upper or the lower slot.*

*To avoid damaging the computer or the PC Card, don't force the card into the slot.*



®  
Windows

®  
Windows

XP operating system provides the Card and Socket


®  
Windows

XP operating system. Some PC Cards do not

®  
XP. This is a set of programs that

TYPE II/III PC CARD  
SLOT

Learning The Basics  
TYPE II PC CARD SLOT

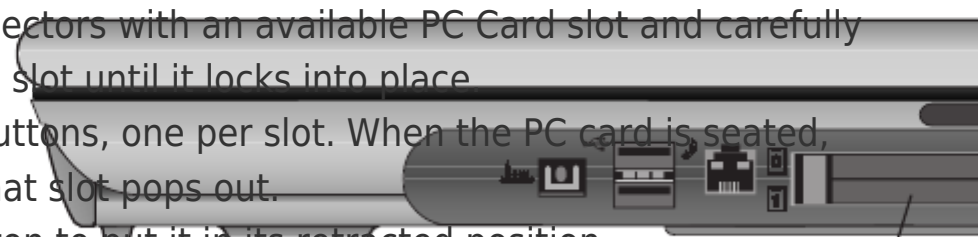

ManualsLib.com

[Previous Page](#)  
[Next Page](#)

1  
...  
65  
66  
67  
**68**  
69  
70  
71  
72

Quick Links:

[Appendix B Features and Specifications](#)

## Related Manuals for Toshiba Satellite P20-8PW

[Laptop Toshiba PSM30C-0QQ31 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)



(193 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P20-25 Series Maintenance Manual](#)

(250 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite l500 series reference guide (56 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba Satellite U500-ST5305 Resource Manual](#)

Toshiba satellite u500-st5305: reference guide (64 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

## Related Content for Toshiba Satellite P20-8PW

[Tecra 500CS Inserting Pc Cards](#)

Toshiba Tecra 500CS

[Portégé 650CT Inserting Pc Cards](#)

Toshiba Portégé 650CT

[Satellite 200 Series Inserting Pc Cards](#)

Toshiba Satellite 200 Series

[Satellite 110 Series Inserting Pc Cards](#)

Toshiba Satellite 110 Series

[Satellite M45 Inserting And Removing Pc Cards](#)

Toshiba Satellite M45

[Satellite 4030CDT Inserting Pc Cards](#)

TOSHIBA Satellite 4030CDT

[Satellite 1415 Series Inserting Pc Cards](#)

TOSHIBA Satellite 1415 Series

[M45-S165 - Satellite - Celeron M 1.5 GHz Inserting And Removing Pc Cards](#)

Toshiba M45-S165 - Satellite - Celeron M 1.5 GHz

This manual is also suitable for:

[Satellite p20-s103](#)[Satellite p20-s203f](#)[Satellite p25-sp507](#)[Satellite p25-sp526](#)[Satellite p25-sp509](#)[Psp20c-1u8pw](#) ... [Show all](#)