



# Playing Cds, Dvds And Digital Music Files With The Computer On Or Off; Cd Mode - Toshiba Satellite P20-8PW User Manual

Toshiba satellite p20-8pw: user guide

 


1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16  
17  
18

19  
20  
21  
22  
23  
Table Of Contents  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142



•

[Table of Contents](#)



•

## Bookmarks





## Playing CDs, DVDs And Digital Music Files With The Computer On Or Off

You can listen to CDs with the computer turned off and also start playing digital music files and DVDs, in which case the computer will turn on automatically.

Use the CD/Digital Mode button on the front of the computer to switch between CD mode and Digital mode.

*Whether your computer is turned on or off, the CD/Digital control buttons are locked by default. To unlock them, press the CD/Digital mode button for more than 3 seconds. Press the mode button again for over 3 seconds*



to lock them again. When the computer is off and in CD or Digital mode, the buttons will lock automatically after 2 minutes if Play is not pressed and no CD is playing.

CD/DIGITAL MODE  
CD MODE INDICATOR

You can refer to chapter 1 for instruction on using the CD control buttons.

## CD Mode


Computer Power Off state: You can use the CD controls to play an audio CD without turning on the computer. Press the CD/Digital Mode button for more than 3 seconds until the Direct CD LED lights, then press play. If there is no response, press Stop/Eject and check to make sure a CD is correctly placed in the CD tray.



If a DVD is in the drive, pressing play will turn the computer on in order to start playing the DVD title (as long as your computer is equipped with a DVD drive).

Computer Power On state: Press the CD/Digital Mode button for more than 3 seconds until the Direct CD LED lights. Pressing play will launch the media application appropriate for either a CD or DVD. If the CD tray is empty, an alert window will inform you.

BUTTON  
PREVIOUS  
DIGITAL MODE  
LED  
INDICATOR LED  
Using Advanced Features  
NEXT  
PLAY/PAUSE  
STOP/EJECT

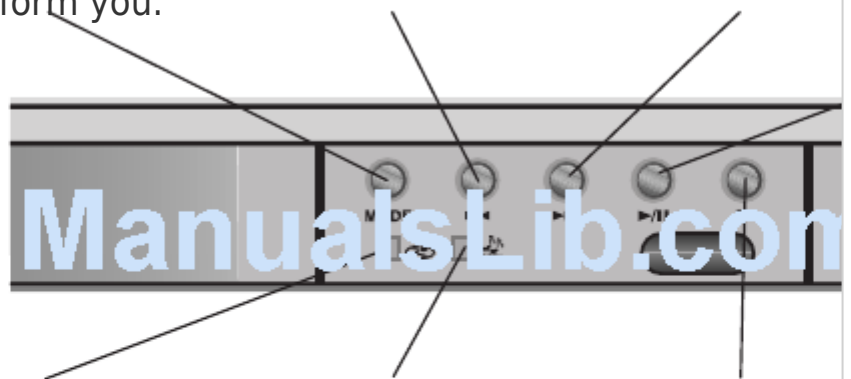

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)

1  
...  
90  
91  
92  
93  
94  
95  
96  
97

Quick Links:

[Appendix B Features and Specifications](#)

## Related Manuals for Toshiba Satellite P20-8PW

[Laptop Toshiba PSM30C-0QQ31 Brochure](#)

Brochure (4 pages)

[Laptop Toshiba P200 Series User Manual](#)

Toshiba dvd video player user's manual (183 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

Toshiba laptop user's manual p200 (194 pages)

[Laptop Toshiba P205-S6277 User Manual](#)



P205-s6277 user's guide (242 pages)

[Laptop Toshiba PSPB0U-00W008 User Manual](#)

User manual (175 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(220 pages)

[Laptop Toshiba Satellite P200 Maintenance Manual](#)

(251 pages)

[Laptop Toshiba Satellite P200 Series Maintenance Manual](#)

(193 pages)

[Laptop Toshiba Satellite P200 Series User Manual](#)

(238 pages)

[Laptop Toshiba Satellite Pro P200 Series User Manual](#)

(194 pages)

[Laptop Toshiba Satellite P205D Maintenance Manual](#)

(249 pages)

[Laptop Toshiba Satellite P20-25 Series Maintenance Manual](#)

(250 pages)

[Laptop Toshiba Satellite L500-01K00Y Resource Manual](#)

Toshiba satellite l500 series reference guide (56 pages)

[Laptop Toshiba Satellite A305-S6825 Resource Manual](#)

Toshiba satellite a305-s6825: reference guide (52 pages)

[Laptop Toshiba Satellite U500-ST5305 Resource Manual](#)

Toshiba satellite u500-st5305: reference guide (64 pages)

[Laptop Toshiba Satellite A70 Resource Manual](#)

Toshiba satellite a70: user guide (68 pages)

## Related Content for Toshiba Satellite P20-8PW

[G25-AV513 Playing Digital Music Files](#)

Toshiba G25-AV513

[G15-AV501 Playing Digital Music Files](#)

Toshiba G15-AV501

[E15-AV101 Playing Digital Music Files](#)

Toshiba E15-AV101

[F25Series Playing Digital Music Files](#)

Toshiba F25Series

[Qosmio F15 Series Playing Digital Music Files](#)

Toshiba Qosmio F15 Series

[Qosmio G35 Playing Digital Music Files](#)

Toshiba Qosmio G35

[8100 Playing Cds And Files](#)

Toshiba 8100

[Satellite 1750 Playing Cds Or Dvds](#)

Toshiba Satellite 1750

This manual is also suitable for:

[Satellite p20-s103](#)[Satellite p20-s203f](#)[Satellite p25-sp507](#)[Satellite p25-sp526](#)[Satellite p25-sp509](#)[Psp20c-1u8pw](#) ... [Show all](#)