 


Ring Volume; In Call Volume - Asus P505 Quick Start Manual

Smart pda phone

1
2
3
4
5
6
7
8
9
10
11
12
Table Of Contents
13




•

[Table of Contents](#)

•

Bookmarks

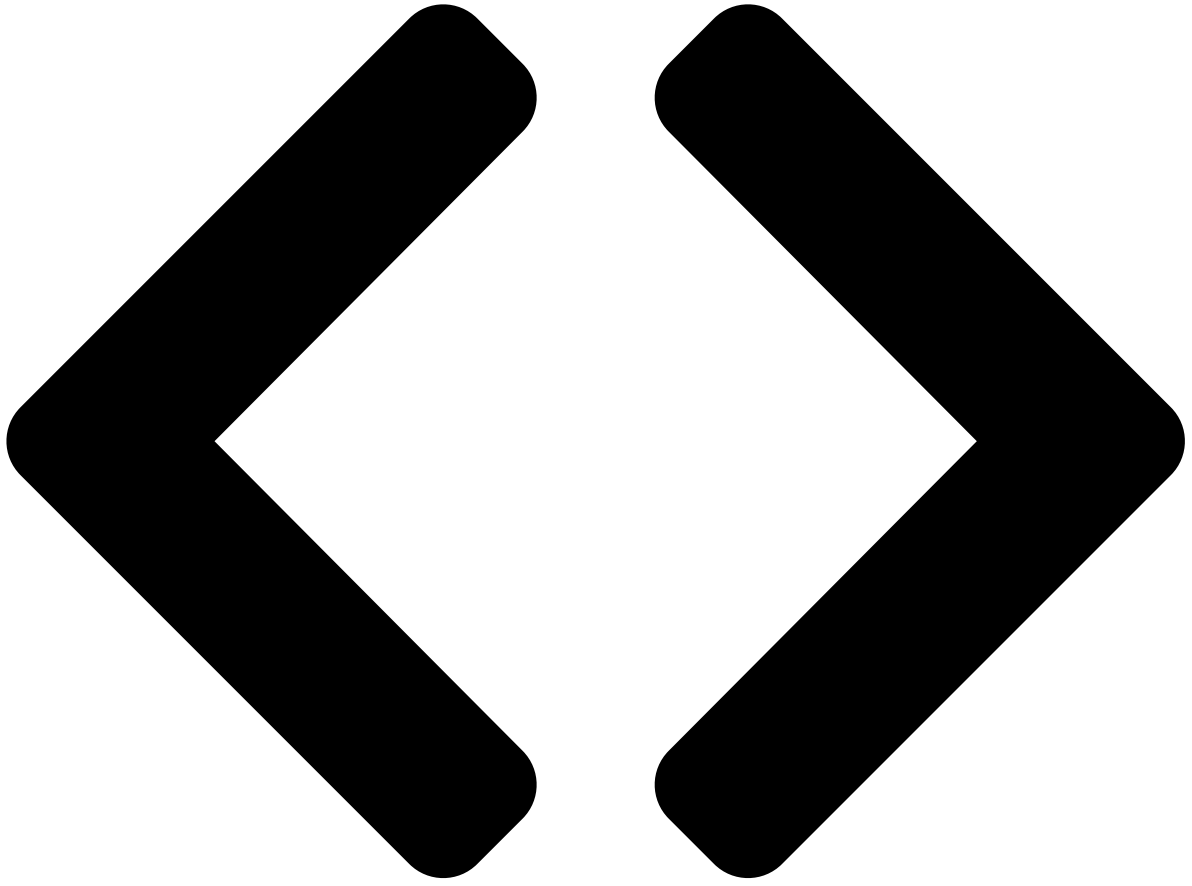

• • • • • Adjusting the volume in phone mode

Adjusting the volume in phone mode

Adjusting the volume in phone mode

Adjusting the volume in phone mode

Adjusting the volume in phone mode

System (device) volume

System (device) volume

System (device) volume

System (device) volume

System (device) volume



1. When the phone is in idle mode, press the 5-way joystick forward or backward to open the System Volume screen.

System Volume
System Volume
System Volume
System Volume

2. Press the 5-way joystick backward to decrease the system (device) volume. Press forward to increase. Refer to the 5-way joystick direction below.

3. Press the 5-way joystick to return to the previous phone menu.

Ring volume

Ring volume

Ring volume

Ring volume

Ring volume

1. When the phone is in idle mode, press the center button of the 5-way joystick for two seconds to open the Ring Volume

2. Press the 5-way joystick backward to decrease the ring volume. Press forward to increase. Refer to the 5-way joystick direction below.

3. Press the 5-way joystick to return to the previous phone menu.

NOTE
NOTE
NOTE
NOTE
NOTE

You can only adjust the system and ring volumes when the phone is not in use for an incoming or outgoing call.

In Call volume

In Call volume

In Call volume

In Call volume

In Call volume

1. After getting connected to the other party during an incoming or outgoing call, press the 5-way joystick to open the In Call Volume screen.

2. Press the 5-way joystick backward to



ManualsLib.com



decrease the in call volume. Press forward to increase. Refer to the 5-way joystick direction below.

3. Press the 5-way joystick to return to the previous phone menu.

NOTE
NOTE
NOTE
NOTE
NOTE

You can only adjust the in call volume while you are talking to another party on the line.

Ring Volume screen.

Ring Volume

Ring Volume

Ring Volume

In Call Volume

In Call Volume

In Call Volume

In Call Volume

5-way joystick direction

5-way joystick direction

5-way joystick direction

5-way joystick direction

5-way joystick direction

to decrease

to increase

volume

volume



Manualslib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
5
6
7
8
9
10
11
12

Related Manuals for Asus P505

[PDA Asus P505 User Manual](#)

(326 pages)

[Handhelds Asus P505 User Handbook Manual](#)

(80 pages)

[Cell Phone Asus P505 Service Manual](#)

P505 (29 pages)

[PDA Asus P535 Assembly & Disassembly Instructions](#)

(33 pages)

[PDA Asus P527 - Smartphone - GSM Service Manual](#)

Service manual (35 pages)

[PDA Asus MyPal A636 Handbook](#)

(142 pages)

[PDA Asus R50A User Manual](#)

Ultra mobile pc (76 pages)

[PDA Asus Galaxy mini 2 Assembly & Disassembly](#)

Sop (15 pages)

Related Products for Asus P505

[Asus P525](#)

[Asus P526](#)

[Asus P535](#)

[Asus P527 - Smartphone - GSM](#)

[Asus P550](#)

[Asus P565](#)

[Asus P552](#)

[Asus P552W](#)

[Asus P560](#)

[Asus P750](#)

[Asus ROG Phone 5](#)

[Asus ROG PHONE 07](#)

[Asus ROG PHONE 7](#)

[Asus ROG PHONE 6](#)

[Asus ZenFone Max Plus ZB570TL](#)

[Asus ROG PHONE 3](#)