



# Toshiba UT1A1A010C6 User Manual

User guide



1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51

--

- 

[Table of Contents](#)

- 

Troubleshooting

•

Bookmarks

--



[Download this manual](#)

### Quick Links



The instructions contained in this manual are not intended to cover all of the details or

**TOSHIBA**

The instructions contained in this manual are not intended to cover all of the details or

~~variations in equipment, or to provide for every possible contingency concerning~~

~~variations in equipment, or to provide for every possible contingency concerning~~

installation, operation, or maintenance. Should further information be required or if

installation, operation, or maintenance. Should further information be required or if

problems arise which are not covered sufficiently, contact your local Toshiba sales

problems arise which are not covered sufficiently, contact your local Toshiba sales

office or (877) 867-8773 or by e-mail at [toshibaups@tic.toshiba.com](mailto:toshibaups@tic.toshiba.com).

office or (877) 867-8773 or by e-mail at [toshibaups@tic.toshiba.com](mailto:toshibaups@tic.toshiba.com).

The contents of this instruction manual shall not become a part of or modify any prior or

The contents of this instruction manual shall not become a part of or modify any prior or

existing agreement, commitment, or relationship. The sales contract contains the entire

existing agreement, commitment, or relationship. The sales contract contains the entire

obligation of Toshiba International Corporation (TIC) Uninterruptible Power Systems

obligation of Toshiba International Corporation (TIC) Uninterruptible Power Systems

(UPS) Division. The warranty contained in the contract between the parties is the sole

(UPS) Division. The warranty contained in the contract between the parties is the sole

warranty of TIC's UPS Division and any statements contained herein do not create new

warranty of TIC's UPS Division and any statements contained herein do not create new

warranties or modify the existing warranty.

warranties or modify the existing warranty.

Any electrical or mechanical modifications to this equipment without prior

Any electrical or mechanical modifications to this equipment without prior

**TOSHIBA**

written consent of Toshiba International Corporation will void all warranties and

written consent of Toshiba International Corporation will void all warranties and

may void the UL/CUL listing. Unauthorized modifications can also result in

may void the UL/CUL listing. Unauthorized modifications can also result in

personal injury, death, or destruction of the equipment.

personal injury, death, or destruction of the equipment.

IMPORTANT NOTICE

IMPORTANT NOTICE

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

## Related Manuals for Toshiba UT1A1A010C6

### [UPS Toshiba RELIABILITY IN MOTION 1000 Series User Manual](#)

Single phase 1000 va to 3000 va uos (54 pages)

### [UPS Toshiba 1000 SEREIS Brochure & Specs](#)

1000 series (2 pages)

### [Laptop Toshiba 1000-S157 User Manual](#)

1000-s157 user's guide (246 pages)

### [Controller Toshiba V Series User Manual](#)

Integrated controller, loop controller (158 pages)

### [Laptop TOSHIBA Satellite 1000 Series User Manual](#)

Toshiba satellite portable personal computer (126 pages)

### [Laptop Toshiba Satellite 1000 User Manual](#)

Toshiba satellite 1000 notebook (126 pages)

### [UPS Toshiba 1000 SERIES User Manual](#)

(64 pages)

### [UPS Toshiba 1000 Series User Manual](#)

Reliability in motion single phase 1000/1200 va (60 pages)

### [UPS Toshiba 1000 Series Installation Instructions](#)

Toshiba power supply user manual (4 pages)

### [UPS Toshiba 1000 Series Specification](#)

Ups rack-mount 2u rail kit (2 pages)

### [UPS Toshiba 1500 Plus Series Operation Manual](#)

6/.8/1.0 kva 220v uninterruptible power system (31 pages)

### [UPS Toshiba 1600 Series Product Specifications](#)

Uninterruptible power systems, 3.6kva 240v in - 240v out tower maintenance bypass solution (2 pages)

### [UPS Toshiba 1800 Series User Manual](#)

1800 series uninterruptible power systems (ups) 1500/2000/2400va (52 pages)

### [UPS Toshiba 4200 series Operation Manual](#)

Uninterruptible power system three phase- 75/100kva ups (45 pages)

### [UPS Toshiba 1400SE Series Operation Manual](#)

Single phase - .6/.8/1.0/1.2/1.5/2.0/2.4 kva, single phase - .6/.8/1.0/1.5 kva plus (41 pages)

### [UPS Toshiba 1600EP Series Operation Manual](#)

Battery cabinet system single phase- 8/10/14/18 kva (16 pages)

## Summary of Contents for Toshiba UT1A1A010C6

**Page 1** Should further information be required or if installation, operation, or maintenance. Should further information be required or if problems arise which are not covered sufficiently, contact your local Toshiba sales problems arise which are not covered sufficiently, contact your local Toshiba sales office or (877) 867-8773 or by e-mail at [toshibaups@tic.toshiba.com](mailto:toshibaups@tic.toshiba.com).

**Page 2** UNINTERRUPTIBLE POWER SYSTEM Complete the information below for the UPS received. Unless otherwise specified on the warranty card, the warranty period for the UPS or UPS part is 36 months from the shipment date (see TIC Bill of Lading). Unless otherwise



specified on the warranty card, the warranty period for a UPS battery is 24 months from the shipment date (see TIC Bill of Lading).

### [Page 3: Table Of Contents](#)

Table of Contents Manual's Purpose and Scope.....V Contacting Toshiba International Corporation's Customer Support Center ..VII EMC Statements.....VIII General Safety Instructions ..... X Important Safety Instructions .....XIII Instructions Importantes Concernant.....XVI Inspection/Storage/Disposal .....XVII Installation Precautions .....XIX Operating Precautions .....XXI 1.

[Page 4](#) 6.2 Dry Contact Interface (optional card).....15 6.3 USB Port ..... 15 6.4 EPO Port (emergency power off) .....16 6.5 Network Transient Protector..... 16 6.6 Load Segments ..... 16 7. User's Guide to Operations .....17 7.1 UPS Startup and Shutdown ..... 17 7.2 Button Operation .....

### [Page 5: Manual's Purpose And Scope](#)

Manual's Purpose and Scope The purpose of this manual is to provide information on how to safely install, operate, and maintain your TIC power electronics product. This manual includes a section of general safety instructions that describes the warning labels and symbols that are used throughout the manual.

[Page 6](#) TOSHIBA is a registered trademark of Toshiba Corporation. All other product or trade references appearing in this manual are registered trademarks of their respective owners. Toshiba International Corporation (TIC) shall not be liable for direct, indirect, special, or consequential damages resulting from the use of the information contained within this manual.

### [Page 7: Contacting Toshiba International Corporation's Customer Support Center](#)

Contacting Toshiba International Corporation's Customer Support Center Toshiba International Corporation's Customer Support Center can be contacted to obtain help in resolving any Uninterruptible Power System problems that you may experience or to provide application information. The center is open from 8 a.m. to 5 p.m. (CST), Monday through Friday. The Support Center's toll free number is US (877) 867-8773, Fax (713) 896-5212.

### [Page 8: Emc Statements](#)

EMC Statements FCC Part 15 NOTICE: Pursuant to section 15 of the FCC rules this product has been tested and complies with the conditions of a Class B digital device. The product has been established as offering sufficient protection against dangerous interference for installations in a residential area.

[Page 9](#) Declaration of Conformity Request Units labeled with a CE mark comply with the following standards and directives: Harmonic Standards: EN 50091-1-1 and EN 50091-2. EU Directives: 73/23/EEC, Council Directive on equipment designed for use within certain voltage limits. 93/68/EEC, Amending Directive 73/23/EEC. 89/336/EEC, Council Directive relating to electromagnetic compatibility.

### [Page 10: General Safety Instructions](#)

General Safety Instructions DO NOT attempt to install, operate, maintain or dispose of this equipment until you have read and understood all of the product safety information and directions that are contained in this instruction manual. Safety Alert Symbol / Signal Words The Safety Alert Symbol indicates that a potential personal injury hazard exists.

[Page 11](#) 2. Warning — The word WARNING in capital letters preceded by the safety alert symbol indicates that a potentially hazardous situation exists that, if not avoided, could result in death or serious injury to personnel. WARNING 3. Caution/Attention — The word CAUTION or ATTENTION in capital letters preceded by the safety alert symbol indicates that a potentially hazardous situation exists that, if not avoided, may result in minor or moderate injury.

[Page 12](#) Special Symbols Other warning symbols may appear in conjunction with the Danger, Warning, and Caution symbol and are used to specify special hazards. These warnings describe particular areas where special care and/or procedures are required in order to prevent serious injury and possible death. 1.

### [Page 13: Important Safety Instructions](#)

UPS output and the load input. 3. The maximum ambient operating temperature is 40° C (104° F). 4. Battery servicing should be performed by a qualified Toshiba Representative only. 5. Unauthorized personnel should not service batteries.

[Page 14](#) **WARNING** Misuse of this equipment could result in injury and equipment damage. In no event will Toshiba Corporation be responsible or liable for either indirect or consequential damage or injury that may result from the misuse of this equipment. **CAUTION** Do not dispose of the batteries in a fire.

[Page 15](#) —Strict adherence to the following precautions is a requirement when working with batteries— To be performed by Qualified Personnel only. 1. Verify that the UPS is off and that the power cord is disconnected from the power source. 2. Remove watches, rings or other metal objects. 3.

### [Page 16: Instructions Importantes Concernant](#)

Instructions Importantes Concernant LA SÉCURITÉ CONSERVER CES INSTRUCTIONS Cette notice contient des instructions importantes concernant la sécurité. **ATTENTION** Une batterie peut présenter un risque de choc électrique, de brûlure par transfert d' énergie. **ATTENTION** L' élimination des batteries est règlementée. Consulter les codes locaux à cet effet.

### [Page 17: Inspection/Storage/Disposal](#)

Inspection/Storage/Disposal **CAUTION** Inspection Upon receipt of the UPS, an inspection for shipping damage should be performed. Use caution when removing the unit from the pallet. Refer to labels or documentation attached to packing material. Uncrating Check the unit for loose, broken, bent or otherwise damaged parts. If damage has occurred during shipping, keep all original crating and packing materials for return to the shipping agent.

[Page 18](#) It is illegal to dump lead-acid batteries in landfills or dispose of improperly. Please help our Earth by contacting the environmental protection agencies in your area, the battery manufacturer, or call Toshiba toll-free at (877) 867-8773 for more information about recycling.

### [Page 19: Installation Precautions](#)

Installation Precautions **CAUTION** 1. Install the unit in a well-ventilated location; allow at least 4 inches (10 cm) on all sides for air ventilation and for maintenance. 2. Install the unit in a stable, level and upright position that is free of excessive vibration.

[Page 20](#) 12. Connect the output terminals of the UPS to the load (refer to NEC Article 300 – Wiring Methods and Article 310 – Conductors For General Wiring). Size the branch circuit conductors in accordance with NEC Table 310.16. Conductor Routing and Grounding 1.

### [Page 21: Operating Precautions](#)

**CHARGE LED** has gone out before opening the door of the UPS once the UPS power has been turned off. 8. Do not attempt to disassemble, modify, or repair the UPS. Call your Toshiba sales representative for repair information.

[Page 22](#) 12. The heat sink and other components may become extremely hot to the touch. Allow the unit to cool before coming in contact with these items. 13. Warning signs should be placed on or near the load as a notification that the load is being powered by the UPS.

### [Page 23: Introduction](#)

1. Introduction The information provided in this manual covers single phase 1000 – 3000 VA uninterruptible power systems (UPS). Included in this manual is information on the installation, operation, safety precautions, shipping, and storage of the equipment. Installation must be carried out in accordance with this manual. Electrical installations must also follow local legislation and regulations.

### [Page 24: General Description](#)

General Description As a double conversion on-line UPS, it is able to supply uninterrupted, clean single-phase power to your critical systems while keeping batteries charged continuously, even if the utility power fails. Other features of the UPS includes • Auto-Restart and Cold Start

features •...

## [Page 25: Efficiency Optimizer Function](#)

IGBT Control SNMP Port/Dry Contact IGBT Control Figure 1. Block diagram • An input filter reduces transients on the main supply. • For maintaining full battery charge, AC-power is rectified and regulated in the rectifier feeding power to the inverter and battery converter. •...

## [Page 26: Free Run Mode](#)

than a second and the on-line mode can be reactivated immediately. Switching back to online mode occurs when the input voltage exceeds  $\pm 10\%$  (or  $\pm 15\%$  selectable), when the input frequency exceeds  $\pm 3\text{Hz}$ , or when no input line is available. Although high efficiency is standard, the default operation is the on-line mode. From the LCD display panel, Bypass can be activated as required or On-line operation can be run permanently if preferred.

[Page 27](#) • The total demand of the protected system shall dictate the output power rating (VA). Allow a margin for future expansion or calculation inaccuracies from measuring power requirements. • Backup time needed will determine the battery size needed. If the load is less than the UPS nominal power rating then the actual backup time will be longer.

## [Page 28: Storage](#)

UPS output with no UPS input. This can pose a shock or fire hazard if the output terminals are shorted. Toshiba is not responsible for any resultant fire or damage if the cold start function is not disabled.

## [Page 29: Installation](#)

Installing this software allows the user to set the UPS output to 50 or 60 Hz regardless of the input frequency. This option can be downloaded from the Toshiba website, [www.toshiba.com/ind](http://www.toshiba.com/ind). Follow the home page menu path to: UPS>> Options/Accessories>> 1000 series>>...

## [Page 30: Rear Panel Views](#)

Rear Panel Views 1000VA – 1500VA Tower Rear Panel EXTERNAL EXTERNAL BATTERY BATTERY (120V NEMA) (230V IEC) 2000VA – 3000VA Tower Rear Panel (120V NEMA) (230V IEC)

[Page 31](#) 1000 – 1500 VA Rack mount (2U) Rear Panel RM-2U 120V NEMA RM-2U 230V IEC 2000 – 3000 VA Rack mount (2U) Rear Panel RM-2U 120V NEMA RM-2U 230V IEC...

## [Page 32: Connection To Main Supply And Loads \(1000 - 3000 Va\)](#)

Connection to main supply and loads (1000 – 3000 VA) The input cable is supplied with all models. • Ensure that the UPS is disconnected from the main supply and loads while connecting the External Battery Cabinets. • Use the battery cable supplied with the External Battery Cabinet to connect the External Battery Cabinet to the UPS.

[Page 33](#) Figure 2 Example of Installation of Plug & Play products.

## [Page 34: Front Panel Settings](#)

Front Panel Settings Listed below are the default settings of the primary UPS parameters. Settings Options Default Remarks 1) O/P VOLT SET 100/110/115/120/127 120 V 120 V (FOR LV series) (output voltage 208/220/230/240 Vac 230 V 230 V (FOR HV series) set) 2) I/P FREQ SET +/- 2%...

[Page 35](#) Settings Options Default Remarks 7) OUTLET GROUP1/GROUP2 Option 1 This is a load-shed feature. SETTING Option 1: 1 On /2 On Option 2: 1 Off /2 On Option 3: 1 Off /2 Off Option 4: 1 On /2 Off 8) BATTERY TEST TEST? Perform battery test immediately...

## [Page 36: Computer And Alarm Connections](#)

6. Computer and Alarm Connections At the rear of the UPS is an interface that allows direct communication with a computer system (see figure 2). There is a RS232 serial data interface, a USB data interface, and an emergency power off switch. The RS232 port and the USB interface cannot be used simultaneously.

## [Page 37: Dry Contact Interface \(Optional Card\)](#)

Dry Contact Interface (optional card) DB9 Male Connector Outline (facing connector) Pin # Description I/O Type UPS fail, relay contact, normally open, active close. output Summary alarm, relay contact, normally open, active close. output One of the following signals activate this signal: 1) Output fault 2) Bus fault 3) Over temperature...

## [Page 38: Epo Port \(Emergency Power Off\)](#)

port cannot be used when using the USB port. The USB cable is a standard cable and may be purchased separately. EPO Port (emergency power off) A customer-supplied switch located remotely may be used to open the EPO connection and force the UPS output receptacles to be switched off. The EPO function shuts down the equipment immediately.

## [Page 39: User's Guide To Operations](#)

7. User's Guide to Operations Normal ongoing UPS operation requires little or no user input. Startup and shutdown requirements of the user are discussed in this section. UPS Startup and Shutdown Starting the UPS • Ensure that installation is correct and that the input power cable is connected to a properly grounded outlet.

## [Page 40: Control Panel Functions](#)

2. " " is the Enter button. (a) Press and hold the Enter button for at least 2 seconds to read the parameter settings of the UPS. Press the Enter button again to read the next parameter. (b) Ten seconds of inactivity will return the display to the original status. 3.

## [Page 41: Normal Display](#)

Status of the UPS, measurements, and alarms are all indicated on the LCD screen. Rack Unit Tower Unit ON-LINE ON-BATT BYPASS FAULT FLAG ENTER ON/OFF Figure 3 Control panels Normal Display The UPS status is shown in the normal display mode. The UPS Meters display and the Setting display may be accessed by pressing the Return button on Tower Unit and FUNC button on the Rack Unit.

## [Page 42: Ups Configurations](#)

BAT VOLT= xx.xV Shows Battery Voltage O/P LOAD%= xx% Shows Load % of Max Load O/P W= xW Shows Output Watts O/P VA= xVA Shows Output VA O/P CURR= xA Shows Output Current BACKUP TIME= xx min Shows Estimated Backup Time in Minutes BAT CHARG= xx% Shows Approximate Percentage of Battery Capacity TEMPERATURE= xxC...

## [Page 43: Ups Manual Test](#)

UPS Manual Test Manual UPS and Battery tests may be performed from the UPS configuration screen. Tests may be performed when the battery is not being charged. To run the battery test scroll to the "Manual Bat Test" parameter press the Enter button twice.

## [Page 44: Troubleshooting](#)

7.11 Troubleshooting Displayed on LCD Audible Alarm Alarm Description What You Should Do Output Overload Two Beeps/sec The UPS is overloaded (in Remove loads from the UPS; least to Line Mode). More power most critical. If this solves the required than the UPS can problem, the UPS will return to provide.

## [Page 45: Maintenance](#)

8. Maintenance With a minimal amount of maintenance you can expect years of satisfactory operation from the UPS unit. The most critical issues for the reliability of the UPS are environmental issues. Ensure that the temperature and humidity are always in accordance with the specifications and keep the area around the unit clean and dust free.

## [Page 46: Technical Specifications](#)

Warranty Three years on electronics Two years full replacement on battery (See Toshiba warranty policy for full details.) • Output frequency can hard set at 50 or 60 Hz by installing an optional software upgrade. This upgrade enables the user to select a fixed output frequency and simultaneously disables the bypass mode.

### [Page 47: Power Range 1000-3000 Va \(230V\)](#)

Three years on electronics Two years full replacement on battery (See Toshiba warranty policy for full details.) \* Output frequency can hard set at 50 or 60 Hz by installing an optional software upgrade. This upgrade enables the user to select a fixed output frequency and simultaneously disables the bypass mode.

### [Page 48: Warranty Information](#)

Toshiba Plant or a Toshiba Designated Authorized Service Center. Note (5) Toshiba Service dispatch available at normal business hours. Contacting Toshiba is possible 24 hours 7 days a week. User can purchase 24x7 dispatch programs offered through TIC's Service Department. TIC also encourages users to review TIC's UPS Preventative and Scheduled Maintenance/Parts Programs for...

### [Page 49: Limitations And Exclusions](#)

(5 conditions below): Valve Regulated Lead Acid (VRLA) Batteries for Toshiba UPS Required Operating, Installation, and Maintenance Conditions Annual Average Temperature is to be 77°F (25 °C) with no greater 1.

[Page 50](#) FITNESS FOR A PARTICULAR PURPOSE. PROCEDURE User must contact TIC via e-mail [upsservice@tic.toshiba.com](mailto:upsservice@tic.toshiba.com), or phone 1-800-231-1412, no later than 90 days after User's discovery of occurrence or defect in UPS, UPS part, and/or BATTERY but in no event after the expiration of the respective warranty period. Subject to the limitations of this policy and product type, TIC service or TIC service representative shall repair/replace the UPS/part warranted hereunder, without charge for material, labor (on-site except in cases presented herein).

### [Page 51: Model Number](#)

THIS WARRANTY REPRESENTS THE ENTIRE AGREEMENT BETWEEN TIC AND USER WITH RESPECT TO THE SUBJECT MATTER HEREIN AND SUPERSEDES ALL PRIOR OR CONTEMPORANEOUS ORAL WRITTEN COMMUNICATIONS, REPRESENTATIONS, UNDERSTANDINGS OR AGREEMENTS RELATING TO THIS SUBJECT. End User: Model Number: Serial Number: Startup Date: Warranty End Date:...

This manual is also suitable for:

[1000 seriesUps 1000vaUps 1500vaUps 2000vaUps 3000va](#)