






## Asus UF735B Quick Start Manual

User manual



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11

 Table Of Contents



•

[Table of Contents](#)

- 

Troubleshooting

•

## Bookmarks

## Quick Links

[Download this manual](#) See also: [User Manual](#)







*FOTO*

UF735  
**ASUS**®

# Quick Start Guide

[Table of Contents](#)

[Next Page](#)

1  
2  
3  
4  
5

# Related Manuals for Asus UF735B

## [Digital Photo Frame Asus UF735B User Manual](#)

User manual (40 pages)

## Summary of Contents for Asus UF735B

[Page 1](#) FOTO UF735 Quick Start Guide...

[Page 2](#) In the package box uFOTO UF735 Quick Start Guide Support CD Power adaptor USB cable Warranty card Suggested device with photos / MP3 files: SPLENDID MENU Digital camera USB flash disk computer memory card (under mass storage mode) System requirements for Sub-Display function Minimum requirements Recommended specifications...

### [Page 3: Start The Device](#)

uFOTO profile Front view Back view Side view USB ports/ Stereo Control buttons headphone speakers jack Confirm Memory button card slots/ DC IN port Control buttons (in the back panel) Locate the control buttons in the back panel according to the following table.

[Page 4](#) To normally use the Sub-Display function and the Data Synchronization, make sure to install the ASUS uFOTO Utility Place the support CD into the optical drive. Double-click the ASUS uFOTO Utility icon, then the follow the on-screen instructions to finish the installation. Restart your computer after the installation.

### [Page 5: Viewing Photos](#)

Viewing photos Viewing photos from your memory card Go to the Photo Frame menu to Insert your memory card to the select your card type, then you will card slot of the UFOTO. see the preview window. • Left slot: CF card Right slot: xD/MMC/SD/MS card Viewing photos from your USB device Go to the Photo Frame menu to...

### [Page 6: Listening To Mp3S](#)

Listening to MP3s Connect your USB device, memory card, or computer to your uFOTO following the instructions on page [ ]. Music length / Elapsed time • When connecting your uFOTO to your computer, go to the Photo Frame menu to select My uFOTO Music, then you will see the playlist window. •...

### [Page 7: Data Synchronization](#)

ASUS uFOTO Utility. Data Synchronization Go to Sub-Display > Mass Storage, then double-click the ASUS uFOTO Utility icon on the computer desktop to start the ASUS uFOTO Folder Sync utility. Copy your favorite MP3 files to the My uFOTO Music folder and photos to the My uFOTO Picture folder.

### [Page 8: Duplication Mode](#)

Duplication mode In the control panel, select Duplicated, then adjust the position of the window on your uFOTO by dragging the same screen with the hand-shaped cursor in the control panel. Hand-shaped cursor Selection mode In the control panel, select Selected, then move the scroll bar in the preview screen to select the window you want to display on the uFOTO.

### [Page 9: Troubleshooting](#)

I cannot launch the Sub-Display function • The USB cable is not well connected. • The ASUS uFOTO utility is not completely installed. Refer to page [ ] and re-install the utility. • The Sub-Display function cannot work with the Mass Storage mode simultaneously.

This manual is also suitable for:

[Uf735pUf735sUfoto uf735](#)