



Asus UF735B User Manual

User manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40

--

•

[Table of Contents](#)


•

Bookmarks

--

[Download this manual](#)

Quick Links

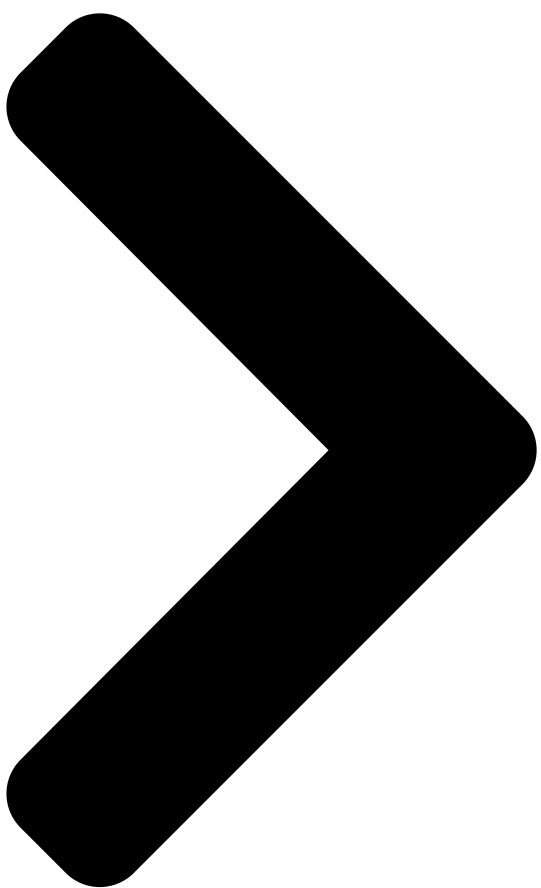

u

FOTO

UF735 **ASUS**[®]

User Guide

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus UF735B

[Digital Photo Frame Asus UF735B Quick Start Manual](#)

User manual (11 pages)

Summary of Contents for Asus UF735B

[Page 1](#) FOTO UF735 User Guide...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 3: Table Of Contents](#)

Contents Notices.....v Safety information..... vi
Care.&.Cleaning.....vii Notes.for.This.Manual.....viii
Where.to.find.more.information.....viii Chapter 1: Hardware introduction
Package.contents..... 1-2 System.requirements.for.sub-display.function.....1-3
Hardware.introduction..... 1-4 Front.view.....1-4 Back.view.....1-4
Side.view.....1-5 To.connect.uFOTO:.....1-6 Connecting.your.uFOTO.

[Page 4](#) Software.introduction.....2-19 Data.synchronization.....2-19 Sub-
Display.....2-19 Specifications.summary.....2-24
Troubleshooting.(FAQ).....2-25...

[Page 5: Notices](#)

Notices Federal Communications Commission Statement
This.device.complies.with.Part.15.of.the.FCC.Rules..Operation.is.
subject.to.the.following.two.conditions: • This.device.may.not.cause.harmful.interference,,and
• This.device.must.accept.any.interference.received.including.
interference.that.may.cause.undesired.operation.
This.equipment.has.been.tested.and.found.to.comply.with.the.limits.
for.a.Class.B.digital.device,,pursuant.to.Part.15.of.the.FCC.Rules..
These.limits.are.designed.to.provide.reasonable.protection.against.
harmful.interference.in.a.residential.installation..This.equipment.
generates,,uses.and.can.radiate.radio.frequency.energy.and,,if.not.
installed.and.used.in.accordance.with.manufacturer's.instructions,,
may.cause.harmful.interference.to.radio.communications..However,,
there.is.no.guarantee.that.interference.will.not.occur.in.a.particular.
installation..If.this.equipment.does.cause.harmful.interference.to.
radio.or.television.reception,,which.can.be.determined.by.turning.
the.equipment.off.and.on,,the.user.is.encouraged.to.try.to.correct.
the.interference.by.one.or.more.of.the.following.measures: •
Reorient.or.relocate.the.receiving.antenna. •
Increase.the.separation.between.the.equipment.and.receiver. •
Connect.the.equipment.to.an.outlet.on.a.circuit.different.from.
that.to.which.the.receiver.is.connected. •
Consult.the.dealer.or.an.experienced.radio/TV.technician.for. help. As.an.Energy.Star ®.
Partner,,our.company.has.determined.that.this. product.meets.the.Energy.Star ®.
guidelines.for.energy.efficiency. Canadian Department of Communications Statement
This.digital.apparatus.does.not.exceed.the.Class.B.limits.for.

[Page 6: Safety information](#)

Safety information • Before.setting.up.uFOTO,,carefully.read.all.the.documentation.
that.came.with.the.package.. • To.prevent.fire.or.shock.hazard,,never.expose.uFOTO.to.rain.or.
moisture... • Never.try.to.open.uFOTO.cabinet..The.dangerous.high.voltages.
inside.uFOTO.may.result.in.serious.physical.injury.. •
Before.turning.the.device.on,,make.sure.that.all.cables.are.

correctly connected and the power cable is not damaged. If you encounter any damage, contact your dealer immediately. • Make sure to use uFOTO only from the type of power source indicated on the label. If you are not sure of the type of power supply to your home, consult your dealer or local power company. • Use the appropriate power plug which complies with your local power standard. • Do not overload power strips and extension cords. Overloading can result in fire or electric shock. • Avoid dust, humidity, and temperature extremes. Do not place uFOTO in any area where it may become wet. • Place uFOTO on a stable surface. • Unplug the unit during a lightning storm or if it will not be used for a long period of time. This will protect the device from damage due to power surges. • To ensure satisfactory operation, use uFOTO only with UL listed computers which have appropriately configured receptacles marked between 100-240V AC... • If you encounter technical problems with uFOTO, contact a qualified service technician or your retailer...

[Page 7: Care & Cleaning](#)

Care & Cleaning • Follow the correct lifting techniques when positioning uFOTO. Grasp the edges when lifting or carrying uFOTO. • Turn your uFOTO off and unplug the power cord before cleaning. Clean the surface with a lint-free, non-abrasive cloth. Stains may be removed with a cloth dampened with mild cleaner. • Avoid using a cleaner containing alcohol or acetone. Use a cleaner intended for use with the LCD. Never spray cleaner directly on the screen, as it may drip inside device and cause an electric shock. The following indications are normal with uFOTO: • The screen may flicker during the initial use due to the nature of the fluorescent light. When this happens, turn off the power switch then turn the device back on. • You may find slightly uneven brightness on the screen depending on the desktop pattern you use. • When the same image is displayed for hours, an afterimage of the previous screen may remain after switching images. The screen will recover slowly or you can also reset the device. • If you encounter a problem with your device, contact your retailer. Do not attempt to repair the device yourself.

[Page 8: Notes for this manual](#)

Notes for This Manual A few notes and warnings are used throughout this guide, allowing you to complete certain tasks safely and effectively. These notes have different degrees of importance as follows:
WARNING! Important information that must be followed for safe operation.
IMPORTANT! Vital information that must be followed to prevent damage to data, components, or persons.
TIP: Tips for completing tasks.
NOTE: Information for special situations.
 Where to find more information
 Refer to the following sources for additional information and for product and software updates.
 1. ASUS websites The ASUS websites worldwide provide updated information on ASUS hardware and software products... Refer to <http://www.asus.com>
 2. Optional documentation Your product package may include optional documentation that may have been added by your retailer. These documents are not part of the standard package. viii...

[Page 9: Chapter 1: Hardware Introduction](#)

Chapter 1 Hardware introduction This chapter provides a general description of uFOTO UF735 including the installation requirements, hardware features, and basic installation procedures.

[Page 10: Package contents](#)

Package contents Check your uFOTO UF735 Digital Photo Frame package for the following items: uFOTO photo frame Power adaptor USB cable Warranty card Support CD Quick Start Guide If any of the above items is damaged or missing, contact your retailer immediately. Optional accessories: SPLENDID MENU Digital Camera USB flash disk PC / Notebook memory card (under mass storage mode) Chapter 1: Hardware introduction...

[Page 11: System requirements for sub-Display function](#)

System requirements for sub-display function
 Make sure your PC / Notebook system meets the minimum requirements: Minimum requirements • Windows XP • 1GHz CPU • 512MB RAM • 150MB available HD space.

Recommended specifications • Windows.XP • 2GHz.CPU. • 1GB.RAM. • 150MB.available.HD.space. ASUS.UFOTO.UF735...

[Page 12: Hardware.introduction](#)

Hardware introduction Front view Stereo speakers Play/Confirm button Back view Menu button Return button Next button Left/Up button Right/Down button Power button Reset Support stand Chapter.1:Hardware.introduction...

[Page 13: Side.view](#)

Right / Down Left / Up Confirm / Play or Pause / Quick Power On Power On/Off Side view mini-USB port (A/B type) USB port Headphone port (A type) SD/MMC/xD/MS/MS Pro port CF Type I port DC IN port ASUS.UFOTO.UF735...

[Page 14: To.connect.ufoto](#)

Connecting your uFOTO

The.illustrations.below.show.devices.that.you.can.connect.to.your.uFOTO. PC / Notebook
SPLENDID MENU Camera (under mass storage mode)/ USB flash disk Memory card To connect
you uFOTO: 2.a.. Connect.your.digital. camera. (under mass .or.USB. storage mode)
flash.disk.to.the. 1.. Plug.the.uFOTO.power. uFOTO. adaptor.to.a.power. outlet. SPLENDID MENU
2.c.. Connect.your.uFOTO.to.your.PC. 2.b..

[Page 15: Chapter 2: Getting Started](#)

Chapter 2 Getting started This.chapter.guides.you.to.use.the.functions.of.your.uFOTO,, including.viewing.photos,.listening.to.MP3,.displaying.the.calendar,. and.using.the.Sub-Display..

[Page 16: Using.your.ufoto.for.the.first.time](#)

1.. Press. .or. .to.turn.on.the.device. 2.. Go.to.Setting.menu. 3..
Select.Language.to.set.preferred.language. 4.. Select.Time.and.Date.to.set.time.and.date.
.is.for.quick.power.on.only;you.cannot.press. .turn.off.the. device..Press.
.to.turn.on.or.off.your.uFOTO.normally.. safe. ent. Power button Installing the ASUS uFOTO
Utility The.ASUS.uFOTO.Utility.contains.two.functions:.data.synchronization. and.sub-
display..To.normally.use.the.functions,.make.sure.to.install.
the.ASUS.uFOTO.Utility.successfully. To.install.the.ASUS uFOTO Utility: 1..
Insert.the.support.CD.into.the.optical.drive. 2.. Double-click.the ASUS uFOTO
Utility.icon,.then.the.follow.the. on-screen.instructions.to.finish.the.installation. 3..
Restart.your.computer.after.the.installation. Chapter.2: Getting.started...

[Page 17: Ufoto.placement](#)

With.a.rotating.support.stand,.you.can.conveniently.position.your.
uFOTO.either.vertically.or.horizontally.on.a.stable.and.flat.surface. Horizontal placement
Vertical placement The.display.automatically.rotates.90.degrees.clockwise.
depending.on.your.preferred.orientation. Adjust the support stand: Rotate the support stand
clockwise Back view Front view to adjust and support vertical or horizontal placement.
You.can.also.rotate.the.support. stand.in.an.upward.position.to. hand.on.a.hook.as.shown:
ASUS.uFOTO.UF735...

[Page 18: Screen Menu](#)

Screen menu uFOTO.provides.several.visual.and.audio.functions.such.as.viewing.
photos,.listening.to.mp3s,.displaying.digital.calendar,.and.using.. the.Sub-Display.. Setting your
uFOTO Configure.several.basic.settings.from.the.Setting.function..From.the. main.menu,.use.
.or. .to.select.the.Setting.icon. ,and.press.the. confirm.button. .to.enter.
Chapter.2: Getting.started...

[Page 19](#) .to.select. the Time and Date.item,.then.press.

to.set.the.precise.time.and.date.for.the. Calendar.display.. To set the time: 1..
From.the.main.menu,.go.to.Setting > Time and Date > Time.to. display.the.following.screen. 2..
Use. .or. .to.select.the.field.(hh./mm./ss)and.change.the. values..Press. .to.confirm.the.setting.
To set the date: 1.. From.the.main.menu,.go.to.Setting > Time and Date > Date.to.
display.the.following.screen. ASUS.uFOTO.UF735...

[Page 20](#) 2.. Use. .or. .to.select.the.field.(mm./dd./yyyy)and.change.the. values..Press.
.to.confirm.the.setting. Brightness Enter.the.Brightness.item.to.adjust.the.desired.brightness.
Setting the alarm 1.. From.the.main.menu,.go.to.Setting > Alarm.to.display.the.

following screen. 2.. Use . or . to select alarm preset, then press . • Set the snooze. • Set the alarm time. • Set the alarm type Chapter 2: Getting started...

[Page 21](#) • Select Audio Options to set the alarm ringtone source from the internal music box or from your personal memory card, USB device, or your computer. • Select Volume to adjust the alarm volume using . or . AI Light The AI Light feature smartly adjusts the brightness of the LCD screen. . according to the lighting in the surrounding environment. Light-in-Motion When enabled, the both sides of the LCD panel is lightened up in specific color. ASUS uFOTO UF735...

[Page 22](#) Information Enter this item to view detailed information about your uFOTO, the status of the inserted memory card, and the current software version. Set Default Select Yes to restore to the factory default setting or No to maintain the current settings. Chapter 2: Getting started...

[Page 23: Viewing photos](#)

To display images from your personal memory card: 1.. Insert your memory card with pictures into the corresponding slot. 2.. Select the image file(s) you want to display. To display images from your USB device (Digital Camera / USB flash disk): 1.. Connect the bundled USB cable from your digital camera to your uFOTO. uFOTO Bundled USB cable Digital camera (under mass storage mode) Insert your USB flash disk into the USB port on the uFOTO. uFOTO 2.. Select the music file(s) you want to display. ASUS uFOTO UF735...

[Page 24: Previewing photos](#)

To display images from "My uFOTO Picture" folder in your computer (Sub-Display function): 1.. Connect the bundled USB cable from your computer to your uFOTO. SPLENDID MENU Bundled USB cable uFOTO computer 2.. Refer to section "Data Synchronization" on page 2-19 for details on how to synchronize photos in your computer on the uFOTO. Previewing photos 1.. From the main menu, use . or . to select ., then press . to enter. 2.. Select the photo source, then press . to view the browsing screen..

[Page 25: Adjusting effects](#)

• Vivid mode: enhances saturation and contrast for a more.. . saturated color.. • Nostalgic Mode: displays photos in old picture style. • Spotlight Mode: enhances color sharpness and strong.. . contrast. • Black and White Mode: displays photos in black and white. Slideshow Mode Auto- display your photos in order, saving you from clicking on each photo. Transition Effect Provides you several transition effects. Frequency Allows you to set the photo transition frequency.. Story Mode A built-in photo demonstration combined with music background. Play with MP3 Allows you to select the desired music from your storage device while viewing photos. ASUS uFOTO UF735 2-11...

[Page 26: Copying photos to your ufoto](#)

MP3 Menu Allows you to adjust the volume and playback mode for the currently playing MP3 file. Copying photos to your uFOTO You can copy your favorite photos from your memory card, USB device, PC, or Notebook to the uFOTO.. Memory capacity table Item Space Internal memory 128MB usable memory 100MB • When stored in the internal memory of the uFOTO, the photos are automatically resized into a 720 x 480 resolution. •...

[Page 27: Deleting photos from your ufoto](#)

Deleting photos from your uFOTO Deleting a single photo: 1.. While browsing, highlight a photo, then press . to check the checkbox below the photo and press. 2.. Select Delete, then press. 3.. Select Yes to delete the file, or No to abort the selection. Deleting all photos: 1.. While browsing, press. 2.. Select Select All, then press. 3.. Press. again, then select Delete and press. 4.. Select Yes to delete the file, or No to abort the selection. ASUS uFOTO UF735 2-13...

[Page 28: Listening.to.mp3S](#)

Listening to MP3s Enjoy.with.your.uFOTO!.uFOTO.can.play.music.files.from.your.memory.card,.USB.device,.or.My uFOTO Music folder.in.your. computer.
From.the.main.menu,.use..and. .to.select. ,.and.press. .to. enter.
The.uFOTO.only.supports.files.of..mp3.format. To play music from your personal memory card:
1.. Insert.your.memory.card.with.MP3.files.into.the.corresponding. slot. 2..
Select.the.music.file(s).you.want.to.play. To play music from your USB device: 1..
Connect.your.USB.device.with.MP3.files.to.your.uFOTO.with.the. bundled.USB.cable.
Insert.your.USB.device.into.the.USB.port.on.your.uFOTO. 2..

[Page 29: Copying.mp3.Files.to.your.ufoto](#)

Copying MP3 files to your uFOTO
You.can.copy.your.favorite.MP3.files.from.your.memory.card,.USB.device,.PC,.or.Notebook.to.your.uFOTO.. Copying a single MP3 file: 1..
While.in.the.playlist.screen,.highlight.an.MP3.file,.then.press.
to.check.the.checkbox.below.the.file.and.press. 2.. Select.Copy to,.then.press. 3..
Select.the.storage.source.where.you.want.to.paste.the.copied. MP3.file,.then.press.
.to.confirm.the.setting. Copying all MP3 files: 1.. While.in.the.playlist.screen,.press. 2..
Select.Select All,.then.press. .again,.then.select.Copy to.and.press. 3.. Press. 4..
Select.the.storage.source.where.you.want.to.paste.the.copied. mp3.files,.then.press.
.to.confirm.the.setting. ASUS.uFOTO.UF735 2-15...

[Page 30: Deleting.mp3.Files.from.your.ufoto](#)

Deleting MP3 files from your uFOTO Deleting a single MP3 file: 1..
While.in.the.playlist.screen,.highlight.an.MP3.file,.then.press.
to.check.the.checkbox.below.the.file.and.press. 2.. Select.Delete,.then.press. 3..
Select.Yes.to.delete.the.file,.or.No.to.abort.the.selection. Deleting all MP3 files: 1..
While.in.the.playlist.screen,.press. 2.. Select.Select All,.then.press. 3.. Press.
.again,.then.select.Delete.and.press. 4..
Select.Yes.to.delete.the.file,.or.No.to.abort.the.selection. 2-16 Chapter.2:.Getting.started...

[Page 31: Calendar](#)

Photos in Time and date slideshow mode Calendar SlideShow
While.displaying.the.calendar,.you.can.also.view.the.photos.in.
slideshow.mode.at.the.same.time. From.the.Calendar.screen,.press. ,.then.follow.the.steps.in.
Viewing photos.to.display.photos. Configuring Calendar settings
From.the.Calendar.screen,.press. .to.configure.several.settings.for.
photo.display.and.music.playback. Slideshow Mode
Allows.you.to.disable.the.slideshow.mode.or.set.to.sequential./. random.mode. Transition Effect
Provides.you.several.transition.effects. Frequency
Allows.you.to.set.the.photo.transition.frequency.. Play with MP3
Allows.you.to.select.the.desired.music.from.your.storage.device.
while.displaying.the.calendar.and.photos. Photo Source
Allows.you.to.select.a.storage.device.where.photos.are.located. ASUS.uFOTO.UF735 2-17...

[Page 32: Reminiscence](#)

Reminiscence A.shortcut.to.the.Reminiscence.function..Refer.to.the.next.
section.Reminiscence.for.more.details. Sub/Full Screen Mode
Allows.you.to.display.the.calendar.in.Sub Screen.or.Full Screen. MP3 Menu
Allows.you.to.adjust.the.volume.and.playback.mode.for.the. currently.playing.MP3.file..
Reminiscence The.Reminiscence.function.allows.you.to.search.for.a.photo.
according.to.the.date.when.the.photo.was.taken.. Use. .and.
.to.select.the.field.(mm./.dd./.yyyy).and.change.the. values..Press. .to.confirm.the.setting. 2-18
Chapter.2:.Getting.started...

[Page 33: Software.introduction](#)

Software introduction To.install.the.ASUS uFOTO Utility: 1..
Insert.the.support.CD.into.the.optical.drive. 2.. Double-click.the ASUS uFOTO
Utility.icon,.then.the.follow.the. on-screen.instructions.to.finish.the.installation. 3..
Restart.your.computer.after.the.installation. Data synchronization
The.synchronization.function.makes.it.a.lot.easier.and.faster.to.pass.
photos.and.MP3.files.to.your.uFOTO.
Before.using.this.function,.make.sure.that.you.have.installed.the. ASUS.uFOTO.Utility. To
synchronize data: 1.. Connect.your.uFOTO.with.your.computer.using.the.bundled. USB.cable..
2.. Select Mass Storage,.then.press. .to.enter. 3.. Double-click.the.ASUS uFOTO Utility

icon.on.the.computer. desktop.to.start.the.ASUS uFOTO Folder Sync utility.

[Page 34](#) Select Sub-Display, then press to enter. Double-click Sub-Display on the computer desktop to start the ASUS Sub-Display Utility. To use the Sub-Display functions: When the utility is activated, the same display is shown both on your computer and on your uFOTO.

[Page 35](#) Duplication mode Make.uFOTO.your.second.display.by.selecting.this.mode..You.will.see.the.same.movements.simultaneously.while.editing.a.word,.deleting.a.file,.writing.a.sentence,.etc.
When.you.select.the.Duplication.mode,.the.screen.on.your.computer.is.duplicated.to.your.uFOTO. Hand-shaped cursor
Adjust.the.position.of.the.screen.by.dragging. the.screen.with.the.hand-shaped.cursor. Selection mode Move.the.scroll.bar.in.the.preview.screen.to.select.the.window.
you.want.to.display.on.the.uFOTO.. Scroll bar Checkbox Preview screen ASUS.uFOTO.UF735 2-21...

[Page 36](#) After.selecting.the.window,.check.the.checkbox.on.the.down.right.side.of.the.preview.screen. Extension mode
When.enabling.the.extension.mode,.you.can.hide.the.current.viewing.window.by.dragging.it.ouside.of.the.computer.desktop.window..Adjust.the.position.of.the.window.on.your.uFOTO.by.dragging.the.same. screen.with.the.hand-shaped.cursor.in.the.control.panel..
You.can.also.extend.part.of.the.current.viewing.window.to.your. uFOTO.. 2-22
Chapter.2:.Getting.started...

[Page 37](#) Advanced settings Click.Advanced.to.adjust.the.settings.including.Image.Adjustment.and.Display.Setting. Advanced settings
Image.Adjustment.(Brightness,.Constrast,.Quality,.Speed)
Display.Setting.(Display.resolution.selection) ASUS.uFOTO.UF735 2-23...

[Page 38: Specifications.summary](#)

Specifications summary Panel Type TFT LCD Panel size 7" screen Resolution 720 x 480 Pixel pitch 0.1905 mm x 0.1905 mm Brightness (Max.) 220 nits Contrast Ratio (Typ.) 800:1 Response time 30 ms Battery Internal / non-removable, rechargeable Li-polymer battery Battery life time Lasting for 60 minutes system operation >...

[Page 39: Troubleshooting.\(Faq\)](#)

I cannot launch the Sub-Display function • The USB cable is not well connected. • The ASUS uFOTO utility is not completely installed. Refer to page 2-19 and re-install the utility. • The Sub-Display function cannot work with the Mass Storage mode simultaneously.

[Page 40](#) 2-26 Chapter.2:.Getting.started...

This manual is also suitable for:

[Uf735pUf735sUfoto uf735](#)