



Asus AAM6000EV E User Manual

Aam6000ev/e user's manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

 
14

15

16

17

18
19
20



•

[Table of Contents](#)

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#)



C1137

ADSL

调制解调器 / 路

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus AAM6000EV E

[Network Router Asus AAM6000EV User Manual](#)

Adsl combo router (52 pages)

[Modem Asus AAM6000EV User Manual](#)

Asustek computer user's manual adsl modem aam6000ev (32 pages)

[Network Router Asus AAM6000EV Quick Setup Instructions Manual](#)

(17 pages)

[Modem Asus ACM6000EB User Manual](#)

Acm6000eb manual (16 pages)

[Modem Asus ACM6000EB User Manual](#)

(16 pages)

[Modem Asus AAM6000UG User Manual](#)

Usb adsl modem for software version 9.5 (26 pages)

[Modem Asus AAM6000UG-ALC User Manual](#)

Usb adsl modem for belgacom (24 pages)

[Modem Asus AAM6000UG-ALC Troubleshooting](#)

Usb adsl modem (2 pages)

[ASUS PCE-AX58BT - AX3000 Dual-Band PCIe Wi-Fi Adapter Quick Start](#)

(article)

[Modem Asus 4G-N16 Quick Start Manual](#)

Wireless-n300 lte modem router (148 pages)

[Modem Asus 4G-N16 Manual](#)

Wireless-n300 lte modem router (13 pages)

[Modem Asus CMAX6000 User Manual](#)

Wireless ax docsis 3.1 cable modem router (47 pages)

[Modem Asus 4G-AC68U Quick Start Manual](#)

Wireless-ac1900 lte modem router (51 pages)

[Modem Asus PCE-AC88 Quick Start Manual](#)

(2 pages)

[Modem Asus 4G-AC53U Quick Start Manual](#)

Wireless-ac750 lte modem router (44 pages)

[Modem Asus USB SpaceLink Client Quick Start Manual](#)

(6 pages)

Summary of Contents for Asus AAM6000EV E

[Page 1](#) C1137 ADSL User's Guide...

[Page 2](#) ©2002 ADSL 1.00 C1137 2002 ADSL...

[Page 3: Table Of Contents](#)

..... 444 5 TCP/IP 5 2.1.1 Windows
Me5 2.1.2 Windows 20005 TCP/IP 6 2.2.1 Windows Me6
2.2.2 Windows 20006 ADSL7 2.3.17 2.3.2

[Page 4](#) ADSL Asymmetric Digital Subscriber Line technology ADSL ADSL RFC 2364 PPP over ATM RFC 1483 Multi • Protocol over ATM AAL5 RFC 2516 PPP over Ethernet RFC 1577 classical IP over ATM Firmware • DHCP Server,DHCP Relay,NAT,IP Filter,RIP,DNS Relay,ATM OAM •...

[Page 5: Tcp/Ip](#)

2.1 TCP/IP 2.1.1 Windows ME Internet Protocol(TCP/ 192.168.1.2 255.255.255.0 ADSL/ 2.1.2 Windows 2000 TCP/IP 192.168.1.2 255.255.255.0 ADSL/ ADSL...

[Page 6: Tcp/Ip](#)

TCP/IP 2.2.1 Windows ME winipcfg 2.2.2 Windows 2000 ipconfig ADSL...

[Page 7: Adsl](#)

ADSL 2.3.1 ® LINE TEST ADSL-MODEM 1. POWER 2. STATUS Showtime - ADSL (ADSL Handshaking ADSL Down - ADSL 3. LINE ADSL 4. PC 5a. TEST 5b. USB 2.3.2 RESET LINE DEFAULT CONSOLE POWER 1. Line RJ-11 ADSL 2. Reset 3.

[Page 8: Adsl](#)

LINE POWER ADSL ADSL ADSL ADSL...

[Page 9](#) permanent virtual channels PVC) Microsoft Internet Explorer 192.168.1.1 adsl adsl1234 Home BRIDGING ROUTING SERVICES ADMIN ADSL...

[Page 10](#) Home LAN Config,DHCP Mode,DHCP Server, DHCP Relay DSL,ATM VCC, PPP,1483 ,IPOA BRIDGING Bridging,LAN Config,DSL,ATM VCC,1483 ROUTING IP Route,IP Addr, LAN Config,DSL,ATM VCC,PPP,1483 IPOA SERVICES NAT,RIP,IP Filter,DNS ADMIN User Config,Commit&Reboot,Alarm ADSL...

[Page 11: Atm Vc](#)

4.1 ATM VC Interface AAL5 vpi vci Mux Type ADSL/ Max Proto per AAL5: AAL5 PPP,1483 IPoA Action(s): vpi=0;vci=35 ADSL...

[Page 12: Ppp](#)

4.2 PPP PPPoA PPPoE Interface IPF Type public,private,DMZ Protocol: PPPoE PPPoA WAN IP: Gateway IP: ISP server Default Route: Enable Use DHCP: Enable DHCP server WINS,SMTP,POP3,etc Use DNS: Enable DHCP server Oper. Status: Action(s): PPPoE Routed ADSL...

[Page 13](#) 4.3 1483 IETF RFC1483 Interface 1483 IPF Type: public,private,DMZ Lower Interface 1483 ATM VC Config IP Address Net Mask: Use DHCP: DHCP server Default Route: Enable Status: Action: 1483 1483 1483 ADSL...

[Page 14: Ipoa](#)

4.4 IPOA IETF RFC 1483 IETF RFC 1577 Interface IPoA IPoA Type 1577=IETF RFC1577 non 1577=IETF RFC 1483 Lower Interface IPoA ATM VC Peer IP Address: IPF Type: public,private,DMZ Config IP Address Net Mask: Status: Action: IPoA I P o A ADSL...

[Page 15](#) eth-0 DHCP server ADSL/Ethernet ADSL/Ethernet DHCP DHCP System Mode Routing Bridging LAN IP Address IP 192.168.1.1 LAN Network Mask 255.255.255.0 Use DHCP: DHCP DHCP server ADSL...

[Page 16: Ip Route](#)

IP Route Internet Destination NetMask 0.0.0.0. NextHop Destination IFName Route Type Route Origin Dynamic Local ICMP Action 10.1.1.1 ADSL...

[Page 17: Bridging](#)

Bridging eth-0 1483 Admin Commit & Reboot Reboot Mode ADSL...

[Page 18](#) ADSL LINE POWER ADSL ADSL TCP/IP 192.168.1. ADSL ping ADSL c:\ping 192.168.1.1) ADSL FTP IP ftp 192.168.1.1 adsl adsl1234 binary mode put TEPatch.bin ADSL

ADSL...

[Page 19: Adsl](#)

ADSL ADSL Asymmetric Digital Subscriber Line ANSI American National Standards Institute
Address Resolution Protocol Asynchronous Transfer Mode BootP Bootstrap Protocol CHAP
Challenge-Handshake Authentication Protocol DHCP Dynamic Host Configuration Protocol
Discrete Multi-Tone DSLAM Digital Subscriber Line Access Multiplexer IETF RFC Internet
Engineering Task Force Request for Comments IPCP Internet Protocol Control Protocol IPoA...

This manual is also suitable for:

[Aam6000e](#)