



Asus EK1542 User Manual

User manual

1

2

Table Of Contents

3

4

5

6

7

8

9

10

11

12

13

14

15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48

•

[Table of Contents](#)

•

Bookmarks

[Download this manual](#)

Quick Links



EeeKeyboard.indb



ASUS[®]

09
07
03
06
07
09
02
04
05
2
3
4
5
7
8
Q
W
E
R
T
V
U
I
4
5
A
S
D
F
G
H
J
1

S 11 1 1 D

Z
X
C
V
B
N
M
O



EK1542

ASUS®

User Manual

EeeKeyboard PC

easy to learn, work and play

P11
P12
P13
P14
P15
P16
P17
P18
P19
P20
P21
P22
P23
P24
P25
P26
P27
P28
P29
P30
P31
P32
P33
P34
P35
P36
P37
P38
P39
P40
P41
P42
P43
P44
P45
P46
P47
P48
P49
P50
P51
P52
P53
P54
P55
P56
P57
P58
P59
P60
P61
P62
P63
P64
P65
P66
P67
P68
P69
P70
P71
P72
P73
P74
P75
P76
P77
P78
P79
P80
P81
P82
P83
P84
P85
P86
P87
P88
P89
P90
P91
P92
P93
P94
P95
P96
P97
P98
P99
P100
P101
P102
P103
P104
P105
P106
P107
P108
P109
P110
P111
P112
P113
P114
P115
P116
P117
P118
P119
P120
P121
P122
P123
P124
P125
P126
P127
P128
P129
P130
P131
P132
P133
P134
P135
P136
P137
P138
P139
P140
P141
P142
P143
P144
P145
P146
P147
P148
P149
P150
P151
P152
P153
P154
P155
P156
P157
P158
P159
P160
P161
P162
P163
P164
P165
P166
P167
P168
P169
P170
P171
P172
P173
P174
P175
P176
P177
P178
P179
P180
P181
P182
P183
P184
P185
P186
P187
P188
P189
P190
P191
P192
P193
P194
P195
P196
P197
P198
P199
P200
P201
P202
P203
P204
P205
P206
P207
P208
P209
P210
P211
P212
P213
P214
P215
P216
P217
P218
P219
P220
P221
P222
P223
P224
P225
P226
P227
P228
P229
P230
P231
P232
P233
P234
P235
P236
P237
P238
P239
P240
P241
P242
P243
P244
P245
P246
P247
P248
P249
P250
P251
P252
P253
P254
P255
P256
P257
P258
P259
P260
P261
P262
P263
P264
P265
P266
P267
P268
P269
P270
P271
P272
P273
P274
P275
P276
P277
P278
P279
P280
P281
P282
P283
P284
P285
P286
P287
P288
P289
P290
P291
P292
P293
P294
P295
P296
P297
P298
P299
P300
P301
P302
P303
P304
P305
P306
P307
P308
P309
P310
P311
P312
P313
P314
P315
P316
P317
P318
P319
P320
P321
P322
P323
P324
P325
P326
P327
P328
P329
P330
P331
P332
P333
P334
P335
P336
P337
P338
P339
P340
P341
P342
P343
P344
P345
P346
P347
P348
P349
P350
P351
P352
P353
P354
P355
P356
P357
P358
P359
P360
P361
P362
P363
P364
P365
P366
P367
P368
P369
P370
P371
P372
P373
P374
P375
P376
P377
P378
P379
P380
P381
P382
P383
P384
P385
P386
P387
P388
P389
P390
P391
P392
P393
P394
P395
P396
P397
P398
P399
P400
P401
P402
P403
P404
P405
P406
P407
P408
P409
P410
P411
P412
P413
P414
P415
P416
P417
P418
P419
P420
P421
P422
P423
P424
P425
P426
P427
P428
P429
P430
P431
P432
P433
P434
P435
P436
P437
P438
P439
P440
P441
P442
P443
P444
P445
P446
P447
P448
P449
P450
P451
P452
P453
P454
P455
P456
P457
P458
P459
P460
P461
P462
P463
P464
P465
P466
P467
P468
P469
P470
P471
P472
P473
P474
P475
P476
P477
P478
P479
P480
P481
P482
P483
P484
P485
P486
P487
P488
P489
P490
P491
P492
P493
P494
P495
P496
P497
P498
P499
P500
P501
P502
P503
P504
P505
P506
P507
P508
P509
P510
P511
P512
P513
P514
P515
P516
P517
P518
P519
P520
P521
P522
P523
P524
P525
P526
P527
P528
P529
P530
P531
P532
P533
P534
P535
P536
P537
P538
P539
P540
P541
P542
P543
P544
P545
P546
P547
P548
P549
P550
P551
P552
P553
P554
P555
P556
P557
P558
P559
P560
P561
P562
P563
P564
P565
P566
P567
P568
P569
P570
P571
P572
P573
P574
P575
P576
P577
P578
P579
P580
P581
P582
P583
P584
P585
P586
P587
P588
P589
P590
P591
P592
P593
P594
P595
P596
P597
P598
P599
P600
P601
P602
P603
P604
P605
P606
P607
P608
P609
P610
P611
P612
P613
P614
P615
P616
P617
P618
P619
P620
P621
P622
P623
P624
P625
P626
P627
P628
P629
P630
P631
P632
P633
P634
P635
P636
P637
P638
P639
P640
P641
P642
P643
P644
P645
P646
P647
P648
P649
P650
P651
P652
P653
P654
P655
P656
P657
P658
P659
P660
P661
P662
P663
P664
P665
P666
P667
P668
P669
P670
P671
P672
P673
P674
P675
P676
P677
P678
P679
P680
P681
P682
P683
P684
P685
P686
P687
P688
P689
P690
P691
P692
P693
P694
P695
P696
P697
P698
P699
P700
P701
P702
P703
P704
P705
P706
P707
P708
P709
P710
P711
P712
P713
P714
P715
P716
P717
P718
P719
P720
P721
P722
P723
P724
P725
P726
P727
P728
P729
P730
P731
P732
P733
P734
P735
P736
P737
P738
P739
P740
P741
P742
P743
P744
P745
P746
P747
P748
P749
P750
P751
P752
P753
P754
P755
P756
P757
P758
P759
P760
P761
P762
P763
P764
P765
P766
P767
P768
P769
P770
P771
P772
P773
P774
P775
P776
P777
P778
P779
P780
P781
P782
P783
P784
P785
P786
P787
P788
P789
P790
P791
P792
P793
P794
P795
P796
P797
P798
P799
P800
P801
P802
P803
P804
P805
P806
P807
P808
P809
P810
P811
P812
P813
P814
P815
P816
P817
P818
P819
P820
P821
P822
P823
P824
P825
P826
P827
P828
P829
P830
P831
P832
P833
P834
P835
P836
P837
P838
P839
P840
P841
P842
P843
P844
P845
P846
P847
P848
P849
P850
P851
P852
P853
P854
P855
P856
P857
P858
P859
P860
P861
P862
P863
P864
P865
P866
P867
P868
P869
P870
P871
P872
P873
P874
P875
P876
P877
P878
P879
P880
P881
P882
P883
P884
P885
P886
P887
P888
P889
P890
P891
P892
P893
P894
P895
P896
P897
P898
P899
P900
P901
P902
P903
P904
P905
P906
P907
P908
P909
P910
P911
P912
P913
P914
P915
P916
P917
P918
P919
P920
P921
P922
P923
P924
P925
P926
P927
P928
P929
P930
P931
P932
P933
P934
P935
P936
P937
P938
P939
P940
P941
P942
P943
P944
P945
P946
P947
P948
P949
P950
P951
P952
P953
P954
P955
P956
P957
P958
P959
P960
P961
P962
P963
P964
P965
P966
P967
P968
P969
P970
P971
P972
P973
P974
P975
P976
P977
P978
P979
P980
P981
P982
P983
P984
P985
P986
P987
P988
P989
P990
P991
P992
P993
P994
P995
P996
P997
P998
P999
P1000

15G067537200
3/9/10 1:58:19 PM



[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus EK1542

[Keyboard Asus EeeKeyboard PC EK1542 User Manual](#)

(16 pages)

[Asus ROG STRIX SCOPE RX - Mechanical Gaming Keyboard Quick Start](#)

(article)

[Asus ROG Strix Scope RX TKL Wireless Deluxe Quick Start Guide](#)

(article)

[Keyboard Asus Cerberus User Manual](#)

Multi-color backlit gaming keyboard (8 pages)

[Keyboard Asus Cerberus User Manual](#)

Led baklit usb gaming keyboard (7 pages)

[Keyboard Asus Cerberus Quick Start Manual](#)

Mechanical rgb keyboard (48 pages)

[Asus TUF GAMING K5 - Mechanical Gaming Keyboard Quick Start Guide](#)

(article)

[Keyboard Asus Strix Tactic Pro User Manual](#)

(14 pages)

[Keyboard Asus GK1100 Quick Start Manual](#)

Mechanical keyboard (2 pages)

[Keyboard Asus Cerberus MKII User Manual](#)

Multi-color backlit gaming keyboard (8 pages)

[Keyboard Asus ROG STRIX SCOPE TKL Quick Start Manual](#)

(3 pages)

[Keyboard Asus GK1050 User Manual](#)

(21 pages)

[Keyboard Asus ROD STRIX SCOPE TKL GUNDAM LTD Quick Start Manual](#)

(2 pages)

[Keyboard Asus CERBERUS Quick Start Manual](#)

Led baklit usb gaming keyboard (46 pages)

[Keyboard Asus TUF GAMING K1 Quick Start Manual](#)

Membrane gaming keyboard (4 pages)

[Keyboard Asus CERBERUS Quick Start Manual](#)

Multi-color backlit gaming keyboard mkii (48 pages)

Summary of Contents for Asus EK1542

[Page 1](#) Delete Prt Sc Insert SysRq Scr LK Num LK Home PgUp " Enter ' PgDn < > Pause Break Ctrl EK1542 User Manual 15G067537200 EeeKeyboard.indb 1 3/9/10 1:58:19 PM...

[Page 2](#) Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 3: Table Of Contents](#)

Table of Contents Safety informationv EK1542 Specifications summaryvi
Package contents* vii Chapter 1: Getting started Getting to know your
EeeKeyboard PC 1-1 Basic features 1-1 Additional features 1-2
Ultra-wideband features 1-4 Getting your EeeKeyboard PC ready

[Page 4](#) Getting connected Connecting to the Internet3-1 Wired connection
.....3-1 Connecting to a wireless network3-2 Using ASUS Eee Net 3-4
Launching ASUS Eee Net 3-4 Creating a group3-5 Joining a group
.....3-5 Using Bluetooth®...

[Page 5: Safety Information](#)

EeeKeyboard PC in municipal waste. Check DO NOT expose to local regulations for strong magnetic or disposal of electronic electrical fields. products. DO NOT expose to or use near liquids, rain, or moisture. ASUS EeeKeyboard PC EeeKeyboard.indb 5 3/9/10 1:58:26 PM...

[Page 6: Ek1542 Specifications Summary](#)

EK1542 Specifications summary Display 5" , 800 x 480 Touch Panel OS support Windows® XP Home edition Intel® Atom N270 Chipset 945GSE / ICH7-M Memory Onboard DDR2 1GB Storage 16GB / 32GB SSD Multimedia decoder Broadcom 70010/70012 solution 10/100/1000Mbps Wireless video transfer...

[Page 7: Package Contents](#)

User Manual Guide Warranty card AC adapter Power cord Wireless antenna Ultra-wideband receiver Ultra-wideband receiver (Wi-Fi+Ultra- AC adapter wideband) * If any of the above items is damaged or missing, contact your retailer. ASUS EeeKeyboard PC EeeKeyboard.indb 7 3/9/10 1:58:56 PM...

[Page 8: Chapter 1: Getting Started](#)

Chapter 1 Getting started Getting to know your EeeKeyboard PC Basic features Prt Sc Delete Insert SysRq Num LK Scr LK Home PgUp " Enter ' PgDn < > Pause Break Ctrl Built-in speakers The EeeKeyboard PC is equipped with two built-in high quality stereo speakers.

[Page 9: Additional Features](#)

LED indicators These indicators display the status of the battery, wireless connection, and storage device. Battery indicator: Indicates the battery status. • Solid green: Battery is fully-charged. • Solid yellow: Battery is charging. • Blinking yellow: Battery is charging but still at low level. •...

[Page 10](#) Display (Monitor) output Insert a VGA cable into this port to connect a standard VGA-compatible device such as a monitor or projector to allow viewing on a larger external display. ASUS EeeKeyboard PC EeeKeyboard.indb 3 3/9/10 1:59:12 PM...

[Page 11: Ultra-Wideband Features](#)

Ultra-wideband features NOTE: If the receiver would not keep firmly in place, gently wipe the receiver's bottom with a clean and mildly soapy damp cloth. LED indicators These indicators display the Ultra-wideband connection status. Ultra-wideband indicator: Indicates the Ultra-wideband connection status. •...

[Page 12: Getting Your Eeekeyboard Pc Ready](#)

EeeKeyboard PC from accidentally turning ON during transport. To turn the battery on/off: Locate the battery switch at the back of the EeeKeyboard PC. Use a pointed object such as a ballpen to switch on/off the EeeKeyboard PC. ASUS EeeKeyboard PC EeeKeyboard.indb 5 3/9/10 1:59:20 PM...

[Page 13: Charging The Battery](#)

Charging the battery To charge the battery: Connect the AC power cord to the AC adapter. Connect the AC adapter to the DC-in port at the back of your EeeKeyboard PC. Connect the AC adapter to a power outlet. IMPORTANT! •...

[Page 14: Turning Your Eeekeyboard Pc On](#)

The system restarts and Easy Mode screen automatically launches. NOTE: For more details about using the Easy Mode screen, refer to the section The Easy Mode screen in Chapter 2. ASUS EeeKeyboard PC EeeKeyboard.indb 7 3/9/10 1:59:35 PM...

[Page 15: Turning Your Eeekeyboard Pc Off](#)

Turning your EeeKeyboard PC OFF Putting on Hibernate mode To put on Hibernate mode: • Press the Power key to put your EeeKeyboard PC on hibernate mode. To wake up the system, simply press the Power again. Hibernate mode powers down the system and the system quickly resumes its former state of operation within seconds after turning it back on.

[Page 16: Setting Up Your Ultra-Wideband Connection](#)

Connect all the necessary devices for your Ultra-wideband connection. NOTE: If your external display freezes or fails to respond, try disconnecting and reconnecting the receiver's AC adapter to the receiver to reestablish the Ultra-wideband connection. ASUS EeeKeyboard PC EeeKeyboard.indb 9 3/9/10 1:59:40 PM...

[Page 17](#) From the Easy Mode screen, tap the Ultra-wideband icon your EeeKeyboard PC automatically connects to the Ultra-wideband receiver. The LED on the Ultra-wideband receiver turns white to indicate a successful connection. TIP: You may purchase an additional Ultra-wideband receiver to wirelessly connect another device to your EeeKeyboard PC.

[Page 18: Connecting Devices](#)

HDTV. VGA-compatible devices such as a monitor or projector to • allow viewing on a larger external display. NOTE: Blu-ray disc format is not supported. ASUS EeeKeyboard PC 1-11 EeeKeyboard.indb 11 3/9/10 1:59:48 PM...

[Page 19: Connecting An External Display Wirelessly](#)

NOTE: You can also connect devices to your EeeKeyboard PC wirelessly. For more details, refer to the following sections in this chapter: • Setting up your Ultra-wideband connection • Connecting an external display wirelessly • Chapter 3: Getting connected Connecting an external display wirelessly To connect an external display wirelessly: Ensure that you have set up your Ultra-wideband connection.

[Page 20: Connecting Two External Displays](#)

IMPORTANT! When you connect two external displays to your EeeKeyboard PC either via wired or wireless connection, only one external monitor has a display output. Press (<Fn> +< F8>) on your EeeKeyboard PC to toggle between the external displays. ASUS EeeKeyboard PC 1-13 EeeKeyboard.indb 13 3/9/10 1:59:50 PM...

[Page 21: Chapter 2: Using Your Eeekeyboard Pc](#)

Chapter 2 Using your EeeKeyboard PC The Easy Mode screen With the tap of your finger or fingers on the touch panel, the Easy Mode screen enables you to quickly access the Internet, view your photos in slideshow format, play songs on your playlist, view your videos, and launch MSN Messenger or Skype.

[Page 22](#) TV & Monitor Tap this icon to quickly launch your commonly-used applications to the external display. Icons on this page only appear when an external display is connected to your EeeKeyboard PC. Tap this icon to quickly access popular online messaging, social networking, and e-mail services websites.

[Page 23](#) Tap this icon to use your finger or fingers to navigate the external display from your EeeKeyboard PC. This icon only appears when your EeeKeyboard PC is connected to an external display. ASUS EeeKeyboard PC EeeKeyboard.indb 3 3/9/10 1:59:59 PM...

[Page 24: Using The Touch Panel](#)

Using the touch panel The Touchpad mode screen The Touchpad icon enables you to use touch gestures to navigate your external display from your EeeKeyboard PC. IMPORTANT! The Touchpad icon only appears when your EeeKeyboard PC is connected to an external display. Chapter 2: Using your EeeKeyboard PC EeeKeyboard.indb 4 3/9/10 2:00:01 PM...

[Page 25](#) Enables you to go back to the previous page. Move your finger or fingers on this screen to navigate your external display from your EeeKeyboard PC. Scrolls up in documents or webpages. Scrolls down in documents or webpages. ASUS EeeKeyboard PC EeeKeyboard.indb 5 3/9/10 2:00:04 PM...

[Page 26: Using The Touch Gestures](#)

Using the touch gestures Touch gestures are movements that you make with your finger or fingers to select items or navigate around your EeeKeyboard PC's 5" touch panel. NOTE: Use light pressure when making a touch gesture. IMPORTANT! Do not use any objects in place of your finger or fingers to operate the touch panel.

[Page 27](#) Previous page Next page Keeping your index and middle Keeping your index and middle fingers together, move your fingers fingers together, move your in a leftward motion. fingers in a rightward motion. ASUS EeeKeyboard PC EeeKeyboard.indb 7 3/9/10 2:00:09 PM...

[Page 28: Using The Keypad](#)

Using the keypad NOTE: The keys on the keypad vary with country/region. Function keys Use the Function key combined with another specific key to perform an action. Sleep: Puts the system on Sleep/Standby Mode. NOTE: Press any key to wake up the system. Wireless/Bluetooth: Toggles the internal wireless LAN or Bluetooth ON or OFF.

[Page 29](#) Stop: Stops the media file, such as video or audio file, that is currently playing. Play/Pause: Plays or pauses the media file that is currently playing. Previous: Goes back to the previous track of the currently playing media file. ASUS EeeKeyboard PC EeeKeyboard.indb 9 3/9/10 2:00:15 PM...

[Page 30: Special Keys](#)

Next: Goes to the next track of the currently playing media file. Home Page Up: Scrolls up in documents or in webpages. PgUp Page Down: Scrolls down in documents or in webpages. PgDn Super Hybrid Engine Key: Shows the various power-saving modes. Special keys Displays the Windows®...

[Page 31: Keypad Overlay](#)

Shift key and the key that you want to use. > Delete Prt Sc Insert Scr LK SysRq Num LK Home PgUp " Enter ' PgDn < > Pause Break Ctrl ASUS EeeKeyboard PC 2-11 EeeKeyboard.indb 11 3/9/10 2:00:30 PM...

[Page 32: Updating The Bios](#)

Updating the BIOS ASUS Update, a pre-installed utility in your EeeKeyboard PC, allows you to manage, save, and update the EeeKeyboard PC BIOS in Windows® environment. TIPS: • ASUS Update requires an Internet connection either through a network or an Internet Service Provider (ISP).

[Page 33: Recovering Your System](#)

Select the ASUS FTP site nearest you to avoid network traffic, or tap Auto Select then tap Next. c. From the FTP site, select the BIOS version that you wish to download then tap Next. Updating from a BIOS file a.

[Page 34](#) Follow the onscreen instructions to complete the process. Adjust the screen to a suitable display resolution. NOTES: • The ASUS Recovery DVD is for the ASUS EeeKeyboard PC only. DO NOT use it on other systems. • Visit the ASUS website at www.asus.com for updates.

[Page 35: Chapter 3: Getting Connected](#)

Chapter 3 Getting connected Connecting to the Internet Wired connection Use an RJ-45 cable to connect your EeeKeyboard PC to an ADSL modem or a local area network (LAN). IMPORTANT! On the Easy Mode screen, tap the Fun icon then select Windows Desktop to enter the Windows® environment.

[Page 36: Connecting To A Wireless Network](#)

Connecting via the Local Area Network (LAN) To connect via LAN: • Connect one end of the RJ-45 cable to your LAN and the other end to the LAN port at the back of the EeeKeyboard PC.

NOTE: If you have difficulty connecting to the Internet via LAN, contact your network administrator.

[Page 37](#) You may now start to surf the Internet, send and receive e-mail messages, or chat online using the Easy Mode screen on your EeeKeyboard PC. NOTE: For more details, refer to the section The Easy Mode screen in Chapter 2. ASUS EeeKeyboard PC EeeKeyboard.indb 3 3/9/10 2:00:44 PM...

[Page 38: Using Asus Eee Net](#)

Using ASUS Eee Net ASUS Eee Net is a program that allows you to create a home network and file sharing system. IMPORTANT! • Before using ASUS Eee Net, ensure the following: • You have wired or wireless Internet connection.

[Page 39: Creating A Group](#)

Installation File > Get the Eee Net installation on the Eee Net screen. To create a group: Launch ASUS Eee Net. From the Eee Net screen, tap Group > Create a Group. Key in a unique name for your Group Name and assign a password for your Group Password.

[Page 40: Using Bluetooth](#)

Using Bluetooth® Bluetooth® allows your EeeKeyboard PC to wirelessly communicate with other Bluetooth devices, such as computers and mobile devices, within a short range of about ten meters or 30 feet. NOTE: By default, the Bluetooth function is turned on on your EeeKeyboard PC.

[Page 41: Adding Bluetooth Devices](#)

From the list of available Bluetooth devices, select the device you want to use with your EeeKeyboard PC, then click Next. Select Don't use a passkey and click Next to add the device. Click Finish when done. ASUS EeeKeyboard PC EeeKeyboard.indb 7 3/9/10 2:00:50 PM...

[Page 42: Appendices](#)

Notices REACH Complying with the REACH (Registration, Evaluation, Authorisation, and Restriction of Chemicals) regulatory framework, we published the chemical substances in our products at ASUS REACH website at [http:// green.asus.com/english/REACH.htm](http://green.asus.com/english/REACH.htm). Federal Communications Commission Statement This device complies with FCC Rules Part 15. Operation is subject to the following two conditions: •...

[Page 43](#) • Reorient or relocate the receiving antenna. • Increase the separation between the equipment and receiver. • Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. • Consult the dealer or an experienced radio/TV technician for help. WARNING! The use of a shielded-type power cord is required in order to meet FCC emission limits and to prevent interference to the nearby radio and television reception.

[Page 44](#) Radio test suites according to [EN 300 328-2] & [EN 302 065] CE Mark Warning This is a Class B product, in a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures. ASUS EeeKeyboard PC EeeKeyboard.indb 3 3/9/10 2:00:52 PM...

[Page 45](#) Wireless Operation Channel for Different Domains N. America 2.412-2.462 GHz, 3.1~10.6 GHz Japan 2.412-2.484GHz, 4.2~4.8 GHz, 7.25~10.25 GHz Europe ETSI 2.412-2.472 GHz, 4.2~4.8 GHz, 6~8.5 GHz France Restricted Wireless Frequency Bands Some areas of France have a restricted frequency band. The worst case maximum authorized power indoors are: •...

[Page 46](#) Operation is subject to the following two conditions: • This device may not cause interference. • This device must accept any interference, including interference that may cause undesired operation of the device. ASUS EeeKeyboard PC EeeKeyboard.indb 5 3/9/10 2:00:53 PM...

[Page 47: Asus Contact Information](#)

15 Li-Te Road, Peitou, Taipei, Taiwan 11259 Telephone +886-2-2894-3447 +886-2-2890-7798 Website www.asus.com.tw Technical Support Telephone +86-21-3842-9911 Online support support.asus.com ASUS COMPUTER INTERNATIONAL (America) Address 800 Corporate Way,

Fremont, CA 94539, USA Telephone +1-510-739-3777 +1-510-608-4555 Website usa.asus.com
Technical Support Telephone +1-812-282-2787...

[Page 48](#) ASUS COMPUTER GmbH (Germany and Austria) Address Harkort Str. 21-23, D-40880
Ratingen, Germany +49-2102-9599-11 Online contact www.asus.com.de/sales Technical
Support Telephone (Component) +49-1805-010923* Telephone (System/ Notebook/Eee/LCD)
+49-1805-010920* Support fax +49-2102-959911 Online support www.asus.com.de/support
Website www.asus.com.de/news * EUR 0.14/minute from a German fixed landline; EUR
0.42/minute from a mobile phone.

This manual is also suitable for:

[Eeekeyboard pc ek1542](#)