

Asus Crosshair II Formula - Republic of Gamers Series Motherboard User Manual

User manual

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44

•

[Table of Contents](#)

•

Bookmarks

Quick Links

1 [Intel Lga 775](#)

2 [Amd Socket Am2](#)


3 [Motherboards](#)

4 [RAM](#)

5 [Power Supplies](#)

6 [Awardbios Flash](#) [Bios](#)

[Download this manual](#)

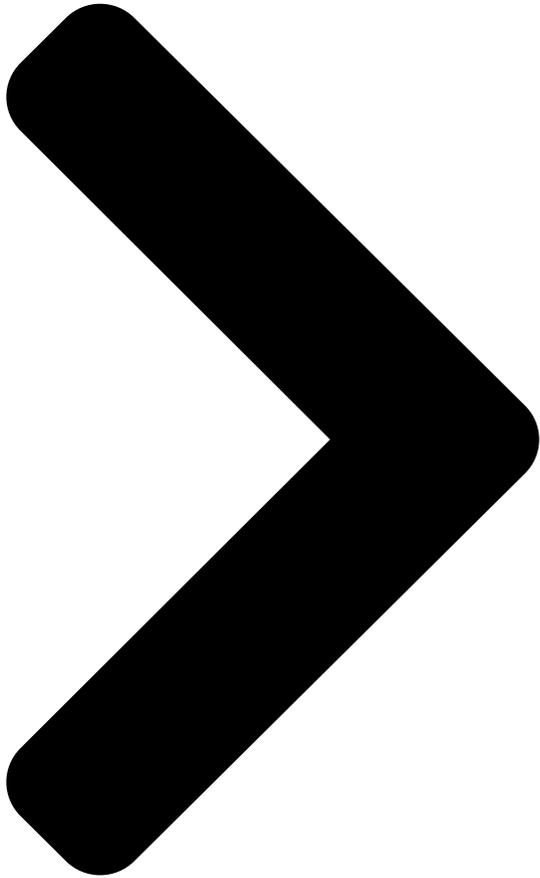

□ □ □ □ □

□ □ □ □



Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus Crosshair II Formula - Republic of Gamers Series Motherboard

[Motherboard Asus M2N-X User Manual](#)

Motherboard installation guide (92 pages)

[Motherboard Asus M2N-X PLUS User Manual](#)

User manual (90 pages)

[Motherboard Asus E3746 Hardware User Manual](#)

Republic of gamers series (196 pages)

[Motherboard Asus M3N-HT - Deluxe/HDMI Motherboard - ATX User Manual](#)

Deluxe series (178 pages)

[Motherboard Asus P5K3 Deluxe Wifi-AP User Manual](#)

(176 pages)

[Motherboard Asus P5K Pro User Manual](#)

Atx motherboard (166 pages)

[Motherboard Asus M2N SLI - Deluxe AiLifestyle Series Motherboard User Manual](#)

User manual (146 pages)

[Motherboard Asus M3N78-EMH HDMI - Motherboard - Micro ATX User Manual](#)

User manual (102 pages)

[Motherboard Asus M3A78-EMH HDMI User Manual](#)

User manual (100 pages)

[Motherboard Asus P5KPL SE User Manual](#)

Motherboard (94 pages)

[Motherboard Asus M4N72-E - Motherboard - ATX User Manual](#)

Nvidia nforce 750a sli chipset (72 pages)

[Motherboard Asus P5KPL User Manual](#)

(68 pages)

[Motherboard Asus P5KPL-AM - SE Motherboard And Intel Core 2 Duo User Manual](#)

User manual (62 pages)

[Motherboard Asus M2N68 SE User Manual](#)

User manual (60 pages)

[Motherboard Asus M2N-SLI DELUXE Quick Start Manual](#)

Motherboard installation guide (41 pages)

[Motherboard Asus P5KPL-AM Quick Start Manual](#)

(4 pages)

Summary of Contents for Asus Crosshair II Formula - Republic of Gamers Series Motherboard

Page 13: [BIOS](#)

BIOS 1. BIOS 2. BIOS 3. BIOS 4. BIOS...

Page 14: [BIOS](#)

5. BIOS 1. BIOS PCB 2. BIOS 1. BIOS A. BIOS B. BIOS...

Page 15 2. BIOS 230V 115V AC 115V AC 230V CPU...

Page 16: [BIOS](#)

BIOS 1. PCI 2. BIOS 3. BIOS 4. BIOS 1. BIOS 2. BIOS PCI-E x1 BIOS...

Page 17: [BIOS](#)

BIOS 1.7.1 PATA CD-ROM DVD-ROM 5. BIOS 4-pin 1. BIOS 5.25" 2. BIOS 6. CD_IN CD 3. BIOS 4. BIOS PIN1 BIOS...

Page 18: [Sata Cd-Rom Dvd-Rom](#)

1.7.2 SATA CD-ROM DVD-ROM 1. BIOS 5.25" 4. BIOS SATA BIOS 2. BIOS 3. BIOS 5. BIOS SATA 6. CD_IN CD BIOS...

Page 19: [BIOS](#)

1.7.3 BIOS 5. BIOS 1. BIOS 3.5" 2. BIOS 3. BIOS 4. BIOS PIN1 BIOS PIN1 BIOS PIN1 BIOS...

Page 20: [Pata](#)

1.7.4 PATA 1. BIOS 2. BIOS 3. IDE BIOS PIN1 BIOS 4. BIOS BIOS...

Page 21 BIOS PATA 1. BIOS 3. BIOS IDE IDE 40 80 ATA66/100 2. BIOS PATA BIOS 80 BIOS 40 BIOS...

Page 22: [Sata](#)

5. BIOS 6. BIOS IDE IDE Master/Slave 80 CS Cable Select Master 1.7.5 SATA BIOS 1. BIOS 2. BIOS BIOS...

Page 23 3. SATA BIOS L BIOS 4. BIOS SATA BIOS 1. SATA Serial ATA BIOS 2. SATA BIOS SATA BIOS...

Page 24 SATA BIOS 1. SATA BIOS 2. SATA BIOS 3. SATA BIOS 4. BIOS SATA BIOS 5. SATA BIOS 6. BIOS SATA BIOS...

Page 25: 1. RESET(Power LED)

1. RESET(Reset Switch) PLED(Power LED) PWR SW(Power Switch) IDE_LED(IDE Hard Disk Active LED) SPEAKER(Speaker Connector) 20-8 pin PLED SPEAKER PANEL RESET IDE_LED PWR SW Requires an ATX power supply. 1 PIN1 10-1 pin PWR LED PWR BTN M2N-X F_PANEL HD LED RESET

Page 26: 2. Asus Q-Connector

2. Asus Q-Connector Q-Connector 24-pin ATX 24-pin 20-pin 4-pin ATX+12V 20-pin ATX

Page 27: 1. 20-pin + 4-pin 20-pin 4-pin 24-pin 20-pin 4-pin 20-pin + 4-pin 20-pin 24-pin 4+20 (24) pin 4-pin

Page 28: 1.10

1.10

Page 29: 1.11

1.11 CPU AMI BIOS Award BIOS VGA

Page 30: AFUDOS

Page 31: AFUDOS Bios

1. AFUDOS afudos.exe DOS afudos /o[filename] filename A:\>afudos /oOLDBIOS1.rom <Enter> BIOS A:\>afudos /oOLDBIOS1.rom AMI Firmware Update Utility - Version 1.19(ASUS V2.07(03.11.24BB)) Copyright (C) 2002 American Megatrends, Inc. All rights reserved. Reading flash ..done Write to file..ok A:\>

Page 32: 2. AFUDOS.EXE BIOS 3. DOS afudos /i[filename] filename BIOS A:\>afudos /iP5B-VM DO.ROM 4. AFUDOS BIOS A:\>afudos /iP5B-VM DO.ROM AMI Firmware Update Utility - Version 1.19(ASUS V2.07(03.11.24BB)) Copyright (C) 2002 American Megatrends, Inc. All rights reserved. WARNING!! Do not turn off power during flash BIOS Reading file ..done Reading flash ..done Advance Check ..Erasing flash ..done BIOS

Page 33: Awardbios Flash Bios

3. DOS A:> AwardBIOS Flash Utility for ASUS V1.14 awdf flash <Enter> (C) Phoenix Technologies Ltd. All Rights Reserved Award BIOS For C51PV-MCP51-M2A-VM HDMI-00 DATE:04/13/2006 Flash

Page 34: 7. BIOS <N> BIOS 8. AwardBIOS Flash Utility for ASUS V1.14 BIOS (C) Phoenix Technologies Ltd. All Rights Reserved BIOS For C51PV-MCP51-M2A-VM HDMI-00 DATE:04/13/2006 Flash Type - PMC Pm49FL004T LPC/FWH File Name to Program: M2A-VM HDMI.bin...

Page 35: Windows BIOS

Windows BIOS 1. BIOS 2. BIOS 3. BIOS BIOS 4. BIOS 5. BIOS

4. ...

Page 44: ...

1. ... 2. ...

This manual is also suitable for:

G-surf365I220gcM2a-mxM2a74-am seM2n-mx dvi2M2n-mx se ... Show all