

Asus Update - Asus CUBX-E User Manual

Socket 370 atx motherboard

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101

•

[Table of Contents](#)

•

Bookmarks



6. SOFTWARE REFERENCE

6.2 ASUS Update

ASUS Live Update is a utility that allows you to update your motherboard's BIOS and drivers. The use of this utility requires that you are properly connected to the Internet through an Internet Service Provider (ISP).

1. Start ASUS Update

Launch the utility from Start | Programs | ASUS Utility | ASUS Update Vx.xx.

2. Select an update method.

3. If you selected updating/downloading from the



Internet, you will need to select an Internet site.
Choose the site that is closest to you or click
Auto Select.

If you selected Update from a file, you will
be prompted to locate the file.

84

6

ASUS CUBX-L/CUBX-E User's Manual

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
81
82
83
84
85
86
87
88

Quick Links:

[Specifications](#)

[The Asus Cubx-L/Cubx-E Motherboard](#)

[Motherboard Components](#)

[Component Locations](#)

[Cubx-L/Cubx-E Motherboard Layout](#)

[Central Processing Unit \(Cpu\)](#)

Related Manuals for Asus CUBX-E

[Motherboard Asus CUBX User Manual](#)

Socket 370 atx motherboard (112 pages)

[Motherboard Asus JUMPERFREE PC133 User Manual](#)

Jumperfree pc133/vc133 133/100/66 mhz fsb socket 370 motherboard (92 pages)

[Motherboard Asus CUW-RM User Manual](#)

Intel 810 microatx motherboard (128 pages)

[Motherboard Asus CUR-DLSR User Manual](#)

Dual socket 370 motherboard (104 pages)

[Motherboard Asus CUPE2-M User Manual](#)

Intel 815ep microatx motherboard (102 pages)

[Motherboard Asus CUSL2-M User Manual](#)

Intel 815e microatx motherboard (128 pages)

[Motherboard Asus CUSL2-C BP User Manual](#)

Intel 815ep atx motherboard (106 pages)

[Motherboard ASUS CUSL2-C User Manual](#)

Intel 815ep atx motherboard (122 pages)

[Motherboard Asus CUV266 User Manual](#)

Jumperfree ddr sdram 133mhz fsb agp pro/4x socket 370 motherboard (104 pages)

[Motherboard Asus CUV4X-E - CUV4X-E User Manual](#)

Jumperfree pc133/vc133 133mhz fsb agp pro/4x socket 370 motherboard (100 pages)

[Motherboard Asus CUWE User Manual](#)

Intel 810e atx motherboard (136 pages)

[Motherboard Asus CUV4X-DLS User's User Manual](#)

Jumperfree pc133/vc133 133mhz fsb agp pro/4x dual socket 370 motherboard (100 pages)

[Motherboard Asus CUV266-DLS User Manual](#)

Jumperfree ddr sdram 133mhz fsb agp pro/4x dual socket 370 motherboard (92 pages)

[Motherboard Asus CUV4X-ME User Manual](#)

Jumperfree pc-133 agp/4x motherboard (104 pages)

[Motherboard ASUS CUV4X-D User Manual](#)

Jumperfree pc133/vc133 133 mhz fsb agp pro/4x dual socket 370 motherboard (92 pages)

[Motherboard ASUS CUV4X-V User Manual](#)

Jumperfree pc133/vc133 agp pro/4x motherboard (110 pages)

Related Content for Asus CUBX-E

[M2N-X Asus Update Utility](#)

Asus M2N-X

[A7N8X Deluxe 2.0 Asus Live Update](#)

Asus A7N8X Deluxe 2.0

[P5LD2-VM/CR Asus Update Utility](#)

Asus P5LD2-VM/CR

[M3A78 Asus Update Utility](#)

Asus M3A78

[P5S-MX SE Asus Update Utility](#)

Asus P5S-MX SE

[P4S333-VF Asus Update](#)

Asus P4S333-VF

[M5A78L-M LE/USB3 Asus Update Utility](#)

Asus M5A78L-M LE/USB3

This manual is also suitable for:

[Cubx-I](#)