

TOSHIBA

Toshiba TDPMT8U User Manual

Owners manual

1
Table Of Contents
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42

--

•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

[Download this manual](#)

Quick Links



Enlarged version

Declaration of Conformity

Trademarks

FCC Warning

Canada

Safety Certifications

1



Manufacturer: Toshiba Corporation
1-1, Shibaura 1-Chome, Minato-ku, Tokyo, Japan

We declare under our sole responsibility that the Toshiba TDP-MT8 projector conforms to the following directives and norms:

EMC Directive 89/336/EEC, Amended by 93/68/EEC

EMC: EN 55022

EN 55024

EN 61000-3-2

EN 61000-3-3

Low Voltage Directive 73/23/EEC, Amended by 93/68/EEC

Safety: EN 60950: 2000

October, 2002

Apple, Macintosh, and PowerBook are trademarks or registered trademarks of Apple Computer, Inc. IBM is a trademark or registered trademark of International Business Machines, Inc. Microsoft, PowerPoint, and Windows are trademarks or registered trademarks of Microsoft Corporation. Digital Light Processing is a trademark or registered trademark of Texas Instruments. Faroudja, DCDi, and TrueLife are trademarks or registered trademarks of Faroudja.



Note: This equipment has been tested and found to comply with the requirements for a Class B digital device, pursuant to part 15 of the FCC rules, which provides reasonable protection against harmful interference to radio communications. However, if not installed and used in accordance with the instructions, this equipment may cause harmful interference to radio or television reception. If you experience interference, you can probably eliminate it by turning the equipment off and on, the user may need to take one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/television technician for help.

Changes or modifications not expressly approved by the user's authority to operate the equipment may void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian Interference-Causation Limits. Cet appareil numérique de la classe B est conforme avec les limites canadiennes d'émission des interférences.

UL, CUL, TÜV, NOM, IRAM, GOST, S-JQ.

Table of Contents

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba TDPMT8U

[Projector Toshiba TDP-MT8U Specifications](#)

Digital light processing projector (2 pages)

[Projector Toshiba TDP-MT8 Service Manual](#)

(97 pages)

[Projector Toshiba TDP-MT8 User Manual](#)

Home cinema dlp technology (42 pages)

[Projector Toshiba TDP- T80 Service Manual](#)

(93 pages)

[Projector Toshiba TDP-MT200 Owner's Manual](#)

Toshiba dlp projector owner's manual tdp-mt200 (44 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Toshiba projector tdp-mt500 owner's manual (42 pages)

[Projector Toshiba TDP-MT500 Owner's Manual](#)

Home projector (40 pages)

[Projector Toshiba TDP TDP-MT700 Owner's Manual](#)

Toshiba owner's manual video projector tdp-mt700 (34 pages)

[Projector TOSHIBA TDP-MT700 Owner's Manual](#)

Home theater projector (36 pages)

[Projector Toshiba TDP-MT700 Service Manual](#)

(49 pages)

[Projector Toshiba TDP MT200 Specifications](#)

Dlp projector (2 pages)

[Projector Toshiba TDP MT700 Specifications](#)

Hd dlp home theater projector (2 pages)

[Projector Toshiba PROJECTORS Brochure & Specs](#)

Home cinema projectors (8 pages)

[Projector Toshiba TDP-MT5 User Manual](#)

(78 pages)

[Projector Toshiba TDP-S3 Service Manual](#)

(108 pages)

[Projector Toshiba Projector Manual](#)

(43 pages)

Summary of Contents for Toshiba TDPMT8U

[Page 1](#) MT8 User's Guide.fm Page 1 Friday, November 22, 2002 9:09 AM Declaration of Conformity FCC Warning Trademarks Canada Safety Certifications...

[Page 2: Table Of Contents](#)

MT8 User's Guide.fm Page 2 Friday, November 22, 2002 9:09 AM Table of Contents Important Operating Considerations Introduction Positioning the projector Video connections Connecting a video device Displaying a video image Do not place objects in the areas along the side and in the front of the projector Connecting a computer Shutting down the projector 2 ft (.6m)

[Page 3: Introduction](#)

MT8 User's Guide.fm Page 3 Friday, November 22, 2002 9:09 AM Introduction Projector components and features keypad remote control receiver (IR) air intake vent elevator foot release Included items zoom focus heat vent projector I/O panel lens cap remote remote control receiver (IR) exhaust leveling...

[Page 4](#) MT8 User's Guide.fm Page 4 Friday, November 22, 2002 9:09 AM Connector Panel remote control IR input receiver (IR) video/computer video video 1 & 2 s-video 12v triggers IR in trigger 1 M1-DA vesa video trigger 2 serial control s-video component component power...

[Page 5: Positioning The Projector](#)

MT8 User's Guide.fm Page 5 Friday, November 22, 2002 9:09 AM Positioning the projector 10' high image bottom of image 1.6' above lens lens center...

[Page 6: Video Connections](#)

MT8 User's Guide.fm Page 6 Friday, November 22, 2002 9:09 AM Video connections video M1-DA VESA s-video IR in trigger 1 M1-DA vesa video trigger 2 serial control s-video component component video Table 1: Video connections Connector label Input signal Connector on projector...

[Page 7: Connecting A Video Device](#)

MT8 User's Guide.fm Page 7 Friday, November 22, 2002 9:09 AM Connecting a video device connect component cable M1-DA IR in trigger 1 vesa video trigger 2 serial control s-video component component IR in M1-DA vesa trigger 1 video trigger 2 serial control s-video component...

[Page 8: Displaying A Video Image](#)

MT8 User's Guide.fm Page 8 Friday, November 22, 2002 9:09 AM Displaying a video image remove lens cap press Power Power ? No startup screen? turn on video device Source adjust height rotate leveling foot elevator foot adjust distance...

[Page 9](#) MT8 User's Guide.fm Page 9 Friday, November 22, 2002 9:09 AM adjust zoom and focus zoom focus adjust keystone Keystone Keystone Contrast Brightness Color Tint adjust Picture menu...

[Page 10: Connecting A Computer](#)

MT8 User's Guide.fm Page 10 Friday, November 22, 2002 9:09 AM Connecting a computer connect computer cable IR in M1-DA trigger 1 vesa video trigger 2 serial control s-video component component IR in M1-DA vesa trigger 1 video trigger 2 serial control s-video component...

[Page 11: Shutting Down The Projector](#)

MT8 User's Guide.fm Page 11 Friday, November 22, 2002 9:09 AM Shutting down the projector Troubleshooting your setup Power Save Power Table 2: LED behavior and meaning Turning off the projector LED color/behavior Meaning Power solid green The projector is plugged in, or the projector has been turned on and the software has initialized.

[Page 12](#) MT8 User's Guide.fm Page 12 Friday, November 22, 2002 9:09 AM Problem Solution Result Plug power cable in and remove lens cap press Power button No startup screen Correct image Correct image Image not centered on screen Move projector, adjust zoom, adjust height zoom Adjust horizontal or vertical position in Picture>Advanced menu...

[Page 13](#) MT8 User's Guide.fm Page 13 Friday, November 22, 2002 9:09 AM Square image Adjust keystone on keypad Image not square Change aspect ratio to 16:9 in Correct image Picture>Aspect ratio menu Image does not fit 16:9 screen Turn Overscan on in the Picture>Advanced menu Correct image Edges of image distorted...

[Page 14](#) MT8 User's Guide.fm Page 14 Friday, November 22, 2002 9:09 AM 1. Adjust color, tint, color temperature, 1. Projected colors don't match source brightness, or contrast in the menus. 2. Pick another gamma setting 2. Colors are washed out or too deep 3.

[Page 15](#) MT8 User's Guide.fm Page 15 Friday, November 22, 2002 9:09 AM Change Video Standard in Correct image Video image "torn" and fragmented Picture>Advanced menu A A B B Make sure vents aren't blocked; allow Unplug projector; wait one minute; plug in projector to cool for one minute Lamp won't turn on, LED blinking red (page 11) projector and turn it on: lamp lights...

[Page 16](#) MT8 User's Guide.fm Page 16 Friday, November 22, 2002 9:09 AM Computer-specific troubleshooting Press the Source button Computer image projected Only startup screen appears Activate laptop's external port or restart lapto No computer image, just the words "Signal out of Adjust computer refresh rate in Control Computer image projected range"...

[Page 17](#) MT8 User's Guide.fm Page 17 Friday, November 22, 2002 9:09 AM Set your computer's display resolution to Image clear and not cropped Image fuzzy or cropped the native resolution of the projector (Start>Settings>Control Panel>Display>Settings tab, select 1280x720) For a laptop, disable laptop monitor or turn-on dual-...

[Page 18: Using The Keypad Buttons](#)

MT8 User's Guide.fm Page 18 Friday, November 22, 2002 9:09 AM Using the keypad buttons Power Menu Select menu navigation buttons Up/down arrows Auto image Presets Keystone Brightness Resize Source...

[Page 19: Using The Remote Control](#)

MT8 User's Guide.fm Page 19 Friday, November 22, 2002 9:09 AM Using the remote control backlight button navigation buttons Menu Select Power Brightness Contrast Blank Source Resize Auto Image Preset Overscan Troubleshooting the remote...

[Page 20: Optimizing Video Images](#)

MT8 User's Guide.fm Page 20 Friday, November 22, 2002 9:09 AM Optimizing video images Customizing the projector Settings>System Set- tings>System Resize...

[Page 21: Using The Menus](#)

MT8 User's Guide.fm Page 21 Friday, November 22, 2002 9:09 AM Using the menus Menu button Select Select Keypad navigation Main menu Select buttons Select Menu Picture menu Dots Settings menu About menu...

[Page 22: Picture Menu](#)

MT8 User's Guide.fm Page 22 Friday, November 22, 2002 9:09 AM Picture menu Select increasing keystone decreasing keystone Keystone Contrast Brightness Color Tint Aspect Ratio Aspect ratio Resize Native...

[Page 23](#) MT8 User's Guide.fm Page 23 Friday, November 22, 2002 9:09 AM 16:9: 16:9 16:9 image 16:9 image input 16:9 aspect ratio 4:3 image input 4:3 image on 16:9 screen 4:3 aspect ratio Letterbox: letterbox image input 16:9 image fills 16:9 screen black bars letterbox aspect ratio...

[Page 24](#) MT8 User's Guide.fm Page 24 Friday, November 22, 2002 9:09 AM Presets Presets Settings>Service Save Settings Save User Presets...

[Page 25](#) MT8 User's Guide.fm Page 25 Friday, November 22, 2002 9:09 AM Advanced settings TrueLife Chroma Detail Advanced Luma Detail Noise Reduction Noise reduction NTSC 2:2 Pulldown 2:2/3:2 Off...

[Page 26](#) MT8 User's Guide.fm Page 26 Friday, November 22, 2002 9:09 AM Color Space Color Space Color Temperature Color Temperature Color Control Gamma Color Control NOTE Gamma Video Standard Video Standard...

[Page 27](#) MT8 User's Guide.fm Page 27 Friday, November 22, 2002 9:09 AM Overscan Phase Tracking Horizontal/Vertical Position...

[Page 28: Settings Menu](#)

MT8 User's Guide.fm Page 28 Friday, November 22, 2002 9:09 AM Settings menu Sources Sources Settings menu System Source Enable Source 1 Rear: Ceiling NOTE Auto Power System menu Display Messages High Power...

[Page 29](#) MT8 User's Guide.fm Page 29 Friday, November 22, 2002 9:09 AM Translucent OSD Chime Power System menu Power Save Startup logo Startup Logo: Blank Screen Blank Blank Screen Language Language...

[Page 30: Maintenance](#)

MT8 User's Guide.fm Page 30 Friday, November 22, 2002 9:09 AM Service Select Factory Reset Service menu Test Pattern Blank Service Code Maintenance Cleaning the lens clean the lens with a soft dry cloth and non-abrasive cleaner...

[Page 31: Replacing The Projection Lamp](#)

MT8 User's Guide.fm Page 31 Friday, November 22, 2002 9:09 AM Replacing the projection lamp Lamp hours used turn off and unplug the projector wait 60 minutes CAUTION loosen the screw on lamp module bail wire...

[Page 32](#) MT8 User's Guide.fm Page 32 Friday, November 22, 2002 9:09 AM WARNINGS Power Resetting the lamp timer Brightness IR in trigger 1 M1-DA vesa video trigger 2 Using the security lock serial control s-video component component security lock...

[Page 33: Appendix](#)

MT8 User's Guide.fm Page 33 Friday, November 22, 2002 9:09 AM Appendix Accessories Specifications Standard Accessories (ship with the projector) Shipping Box (with packaging) ° ° Power Cable (country-dependent) Temperature Operating 50 to 95 F (10 to 35 C) at 0 - 10,000 feet °...

[Page 34: Red Led Behavior And Projector Errors](#)

MT8 User's Guide.fm Page 34 Friday, November 22, 2002 9:09 AM Red LED behavior and projector errors Projected image size Table 4: Range of projection distances for a given screen size Table 3 Projection Distance 16:9 Screen Screen Maximum Minimum Table 3: Red LEDs dimensions diagonal...

[Page 35: Source Compatibility](#)

MT8 User's Guide.fm Page 35 Friday, November 22, 2002 9:09 AM Source compatibility Table 5: Table 6: Source Compability Projector Inputs and Outputs Video Component and RGB HDTV (720p, 1035i, 1080p, 1080p-24Hz) 2-Component HDTV, EDTV, and Standard TV component DVI/HDCP for digital video and encrypted digital video (Gold RCA) Component EDTV (480p, 576p progressive scan), SECAM: M, Component, Composite and S-Video standard...

[Page 36: Projector Dimensions For Ceiling Mount Installations](#)

MT8 User's Guide.fm Page 36 Friday, November 22, 2002 9:09 AM Projector dimensions for ceiling mount installations 2.1" 53.7mm 2.3" 57.8mm 8.7" 221.4mm 2.6" 11.3" 4.3" 64.9mm 288.1mm 109.5mm 0.14" 3.6mm 8.5" 216mm 12.3" 312.7mm dimensions of optional cable cover: 12.4 x 3.9 x 3.2" (315 x 100 x 82mm) total length with optional cable cover: 16.2"...

[Page 37: Rs-232 Terminal Specifications](#)

MT8 User's Guide.fm Page 37 Friday, November 22, 2002 9:09 AM RS-232 terminal specifications Communication configuration Function Command Response Brightness (BRT?) (0-22, 10) Lamp hours (LMP?) (0-9999, 421) Setting Value Bits per second 19,200 Data bits Parity None Stop bits Flow control None Emulation...

[Page 38](#) MT8 User's Guide.fm Page 38 Friday, November 22, 2002 9:09 AM Supported commands Color Temp 0 = 9300 1 = 8200 Function Command Range Default 2 = 6500 Aspect Ratio Contrast 8-252 0 = Native 1 = 16:9 2 = 4:3 Display Messages 3 = Letterbox Factory Reset (Write only)

[Page 39](#) MT8 User's Guide.fm Page 39 Friday, November 22, 2002 9:09 AM Language 0-11 Skintone Bypass Enable 0 = English Source 1 = French 0 = Video 1, M1 2 = German 1 = Video

2, VESA 3 = Spanish 2 = Video 3, Com- 4 = Chinese Tradi- ponent 1 tional...

[Page 40](#) MT8 User's Guide.fm Page 40 Friday, November 22, 2002 9:09 AM connecting Numerics computer 10 12v triggers 4, 35 power cable 7 16x9 4, 13, 20, 22, 23 video device 7 4x3 23 connector panel 4 4x3 aspect trigger 4 D65 colors 9 adjusting image 9, 22 dimensions of projector 36...

[Page 41](#) MT8 User's Guide.fm Page 41 Friday, November 22, 2002 9:09 AM image Native 22 display video 8 Natural Wide 23 focussing 9 no computer image 16 size 5 no startup screen 12 zooming 9 Noise Reduction 25 inputs 35 NTSC Pulldown 25 IR repeater 4 offset 5 keystone 9, 22...

[Page 42](#) MT8 User's Guide.fm Page 42 Friday, November 22, 2002 9:09 AM maintaining 30 shutting down the projector 11 menus 21 Skintone Bypass 25 optimizing images 20 solid green 11 optional accessories 33 solid red 11 overview 3 source compatibility 35 positioning 5, 8 Source troubleshooting 12, 16 remote control 19...

This manual is also suitable for:

[Tdp-mt8](#)