

Playing Back Image In The Memory Card - Sanyo POAMD07MCI - Digital AV Player Install And Operation Instructions

Media card imager kit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108

•

[Table of Contents](#)

•

Bookmarks

Available languages

- EN
- FR
- DE
- ES
- IT
- JP

More



IMAGE PLAYBACK (OPERATING PROJECTOR)

1

Attach Imager Box to your projector properly (P5), and turn the projector on. Refer to Owner's Manual of your projector for operation.

2

Load a memory card into CF Card Slot of Imager Box. (P6)

3

Projector automatically turns to MCI mode and shows the image data in a memory card.

NOTE ; Refer to Owner's Manual of your projector for location of each button and basic operation.

Press MENU button while in MCI mode.

Used to select input either Computer (MCI) or Video. (Refer to P12)

Shows selected item of ON-SCREEN Menu.

MENU BAR

source Used to select image level among Standard, Real and Image 1 ~ 4. (Refer to P15)


Used to display image data in a memory card. (Refer to P13, 14)

Used to adjust size of image to Normal or True, or expand / compress image (Digital zoom +/-). (Refer to P17)

Used to adjust picture image. [Contrast / Brightness / White balance (Red/Green/Blue) / Gamma] (Refer to P16)

Used to change settings of projector or reset Lamp Reset Counter. (Refer to Owner's Manual of your projector.)

Used to adjust volume or mute sound. (Refer to Owner's Manual of your projector.)

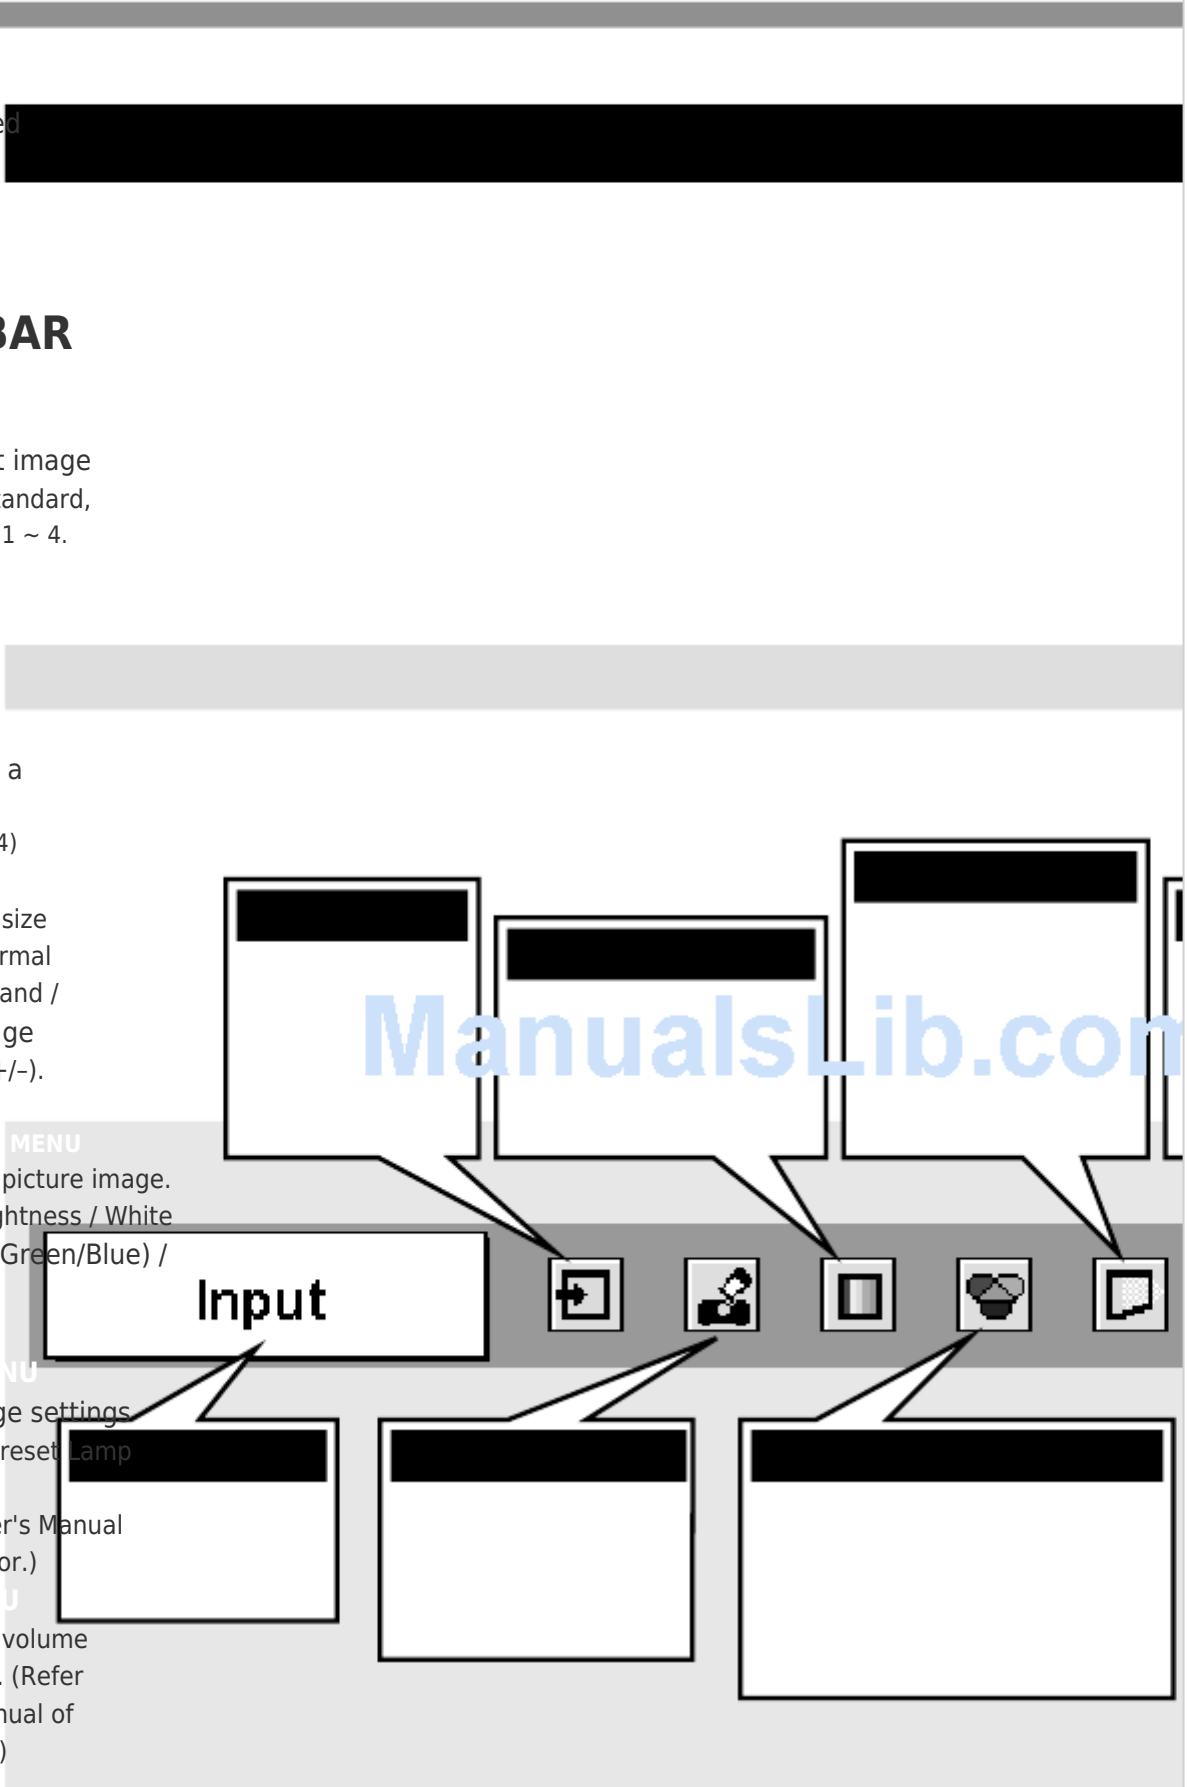

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
8
9
10
11
12
13
14
15

Chapters

[Français 21](#)

[Español 39](#)

[Deutsch 57](#)

[Italiano 75](#)

Related Manuals for Sanyo POAMD07MCI - Digital AV Player

[Digital Photo Frame Sanyo LVF-PF72S User Manual](#)

Sanyo digital photo frame user guide (1 page)

Related Products for Sanyo POAMD07MCI - Digital AV Player

[Sanyo POA-MD13NET2](#)

[Sanyo POA-MD13NET](#)

[Sanyo POA-PN03C](#)

[Sanyo POA-SR-140](#)

[Sanyo POA-HDTM01](#)

[Sanyo POA-PN01A](#)

[Sanyo PJ MASTER POA-PJNM01](#)

[Sanyo POA-PN02C](#)

[Sanyo POA-PN02](#)

[Sanyo POA-SP-SU31](#)

[Sanyo POA-WL12](#)

[Sanyo POA-WL11](#)

[Sanyo POA-SP-SU30](#)

[Sanyo POA-LN02](#)

[Sanyo POA-PN40](#)

[Sanyo POA-PN03C XT35 Series](#)