

Remove Imager Box From Projector; Load And Remove Cf Card - Sanyo POAMD07MCI - Digital AV Player Install And Operation Instructions

Media card imager kit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67
68

69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108

•

[Table of Contents](#)

•

Bookmarks

Available languages

- EN
- FR
- DE
- ES
- IT
- JP

More



Remove Imager Box from Projector

CAUTION : Do not remove the Imager Box from the projector while the projector is

on. It may damage data in a memory card and the card itself.

Press the LATCH BUTTON to the arrow direction. Then pull and remove the Imager Box.



Load and Remove CF Card

Load CF Card

Insert the CF Card into the CF Card slot of the Imager Box until the EJECT BUTTON pops out.

- Do not insert it in the wrong way. It may damage the equipment.

Remove CF Card

1

Press the CF CARD EJECT BUTTON. The CF Card is released.

2

Pull out the CF Card from the Imager Box.

Do not remove a CF Card while the indicator is lighting. It may damage the card and the data

CAUTION

in it.

6

CAUTION :Removing by force may damage the Imager Box.

(Fig -3)

Pull and remove the Imager Box.

CF CARD


EJECT BUTTON

Insert the CF Card with the mark L ahead.

Press the LATCH BUTTON.

INDICATOR

(Fig.-4)

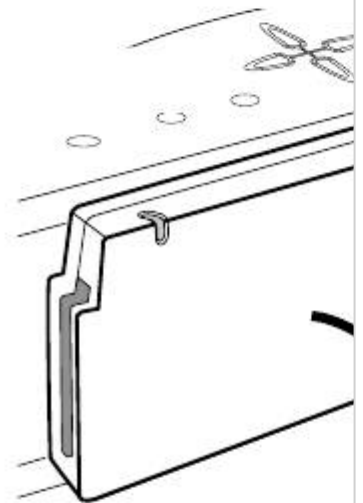

ManualsLib.com

[Previous Page](#)
[Next Page](#)

1
...
3
4
5
6
7
8
9
10

Chapters

[Français 21](#)

[Español 39](#)

[Deutsch 57](#)

[Italiano 75](#)

Related Manuals for Sanyo POAMD07MCI - Digital AV Player

[Digital Photo Frame Sanyo LVF-PF72S User Manual](#)

Sanyo digital photo frame user guide (1 page)

Related Products for Sanyo POAMD07MCI - Digital AV Player

[Sanyo POA-MD13NET2](#)

[Sanyo POA-MD13NET](#)

[Sanyo POA-PN03C](#)

[Sanyo POA-SR-140](#)

[Sanyo POA-HDTM01](#)

[Sanyo POA-PN01A](#)

[Sanyo PJ MASTER POA-PJNM01](#)

[Sanyo POA-PN02C](#)

[Sanyo POA-PN02](#)

[Sanyo POA-SP-SU31](#)

[Sanyo POA-WL12](#)

[Sanyo POA-WL11](#)

[Sanyo POA-SP-SU30](#)

[Sanyo POA-LN02](#)

[Sanyo POA-PN40](#)

[Sanyo POA-PN03C XT35 Series](#)