



Asus DVD-E616P1 User Manual

Dvd-rom drive

1
2
Table Of Contents
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36

--

•

[Table of Contents](#)

•

Bookmarks

--

[Download this manual](#)

Quick Links



DVD-E616P1

DVD-ROM Drive

User Manual

[Table of Contents](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Asus DVD-E616P1

[DVD Drive Asus E976 User Manual](#)

Asus dvd-rom drive atapi / enhanced ide interface user's manual (31 pages)

[DVD Drive Asus DRW-0804P User Manual](#)

Dvd±r/rw drive dual format (46 pages)

[DVD Drive Asus DVD-R/RW Drive DVR-104 User Manual](#)

Asus dvr-104 dvd-r/rw drive user's manual (24 pages)

[DVD Drive Asus DVD-E616P2 User Manual](#)

Dvd-rom drive (34 pages)

[DVD Drive ASUS DRW-0804P-D User Manual](#)

External dvd±r/rw drive dual format (26 pages)

[DVD Drive Asus DRW-24B3ST Quick Manual](#)

(3 pages)

[DVD Drive Asus DRW-0402P/D User Manual](#)

Dvd±r/rw drive dual format (24 pages)

[DVD Drive Asus DRW-1604P User Manual](#)

Dvd+-r/rw drive supports dual format and double layer (24 pages)

[DVD Drive Asus SDRW-08D2S-U Quick Installation Manual](#)

External slim optical drive (28 pages)

[DVD Drive Asus SDRW-08U9M-U Quick Installation Manual](#)

External slim dvd-writer (36 pages)

[DVD Drive Asus SCB-2424A-U User Manual](#)

External slim combo drive 24x/24x/24x cd-rw drive 8x dvd-rom drive (28 pages)

[DVD Drive Asus BW-12D1S-U Quick Installation Manual](#)

External h/h optical drive (24 pages)

[DVD Drive Asus ZenDrive V1M Quick Installation Manual](#)

(20 pages)

[DVD Drive Asus ESEDRW-08-H User Manual](#)

User manual (2 pages)

[DVD Drive Asus SDRW-08D6S-U Quick Installation Manual](#)

External slim optical drive (23 pages)

Summary of Contents for Asus DVD-E616P1

[Page 1](#) DVD-E616P1 DVD-ROM Drive User Manual...

[Page 2: Copyrights/Disclaimer](#)

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 3: Table Of Contents](#)

Contents Copyrights/Disclaimer2 Notices4 ASUS Contact Information5
Safety Information 6 Installation Notices6 Using the Device7
Conventions used in this guide7 Package Contents 8 Welcome!9

[Page 4: Notices](#)

This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications. This class B digital apparatus complies with Canadian ICES-003. ASUS DVD-E616P1 User Manual...

[Page 5: Asus Contact Information](#)

General Support: +1-502-995-0883 Notebook Support: +1-510-739-3777 x5110 Web Site: www.asus.com Support Email: tsd@asus.com ASUS COMPUTER GmbH (Germany and Austria) Address: Harkortstr. 25, 40880 Ratingen, BRD, Germany General Email: sales@asuscom.de (for marketing requests only) General Fax: +49-2102-9599-31 Technical Support Support Hotlines:...

[Page 6: Safety Information](#)

Safety Information Observe the following precautions before installing and using the ASUS DVD-E616P1 Installation Notices Do not place this device in an unstable position, or on vibrating surfaces. Do not place this device under direct sunlight or in humid or damp places.

[Page 7: Using The Device](#)

CAUTION: Information to prevent damage to the components when trying to complete a task. IMPORTANT: Information that you MUST follow to complete a task. NOTE: Tips and additional information to aid in completing a task. ASUS DVD-E616P1 User Manual...

[Page 8: Package Contents](#)

Package Contents Upon opening your ASUS DVD-E616P1 drive package, check if all the following items are present and in good condition. If any of the items is damaged or missing, contact your retailer immediately. • ASUS DVD-E616P1 DVD-ROM Drive •...

[Page 9: Welcome](#)

Welcome! Thank you for buying the ASUS DVD-E616P1 Drive! To ensure proper installation and use of this device, read the instructions and other important information contained in this manual. Product Introduction Specifications The DVD-E616P1 has the following specifications: • Sustained Transfer Rate DVD 16x max.

[Page 10: Front Panel](#)

DVD with the label side up. Press the Eject Button or push the front part of the tray to load the tray back in place. 4. Eject Button Press this button to load or unload a disc. ASUS DVD-E616P1 User Manual...

[Page 11: Rear Panel](#)

This connector is for a 40-pin IDE cable to connect the drive to the IDE interface on the motherboard. 10. DC Input This DC connector is for a 4-pin power cable from the system power supply. ASUS DVD-E616P1 User Manual...

[Page 12: Setting The Jumper Terminals](#)

RESERVED PIN 1 Cover the two pins labeled CS (see illustration) if your computer supports a Cable Select (CSEL) signal. You need an exclusive interface cable for this setting. Refer to your computer manual for details. ASUS DVD-E616P1 User Manual...

[Page 13: Installing The Dvd-Rom Drive](#)

2. Carefully insert the DVD-ROM drive into the bay and push it inward until it is flushed to the chassis front panel. The holes on the sides of the drive should align with the holes on the drive bay. ASUS DVD-E616P1 User Manual...

[Page 14](#) Depending on the space on your chassis, you may need to connect the drive cables before securing the drive into the chassis. For cable connections, proceed to the following section, "Connecting the Drive Cables." ASUS DVD-E616P1 User Manual...

[Page 15: Connecting The Drive Cables](#)

DO NOT apply too much force when fitting the cable plugs. Power Cable 4-pin Audio Cable IDE Cable Replace the computer cover according to your computer manual. ASUS DVD-E616P1 User Manual...

[Page 16: Dvd-Rom Drive Basics](#)

1. Press the eject button on the front of the drive to eject the tray. 2. When the drive tray ejects out of the drive, place the disc on the tray with the label (printed) side up. ASUS DVD-E616P1 User Manual...

[Page 17: Ejecting A Disc From The Drive](#)

1. Press the eject button on the front of the drive to eject the tray. 2. Carefully remove the disc from the tray. 3. Press the drive eject button or lightly push the center of the drive tray to load the tray back into the drive. ASUS DVD-E616P1 User Manual...

[Page 18: Using The Emergency Eject Pinhole](#)

1. Insert a paper clip or any pointed rod small enough to fit into the emergency pinhole. 2. Carefully pull the tray out and remove the disc. Do not force the tray open; wait until the eject pin has dislodged the tray to avoid breaking the tray panel. ASUS DVD-E616P1 User Manual...

[Page 19: Using Compact Discs](#)

Cleaning a Disc Spray the disc with compressed air for about five seconds to get rid of the dust on a disc. Handling a Disc Hold a disc by the edges. Do not touch the disc surface. ASUS DVD-E616P1 User Manual...

[Page 20: Technical Information](#)

ATAPI terminal 40-pin Audio out 4-pin (analog) Audio No. of channels 2 (stereo) Sampling frequency 44.1 kHz Quantization 16 bits Distortion 0.2% max. (at 1 kHz) S/N ratio 70 dB Output: Line Out 0.7 V rms (typical) ASUS DVD-E616P1 User Manual...

[Page 21: Dvd Region Codes](#)

Region Code Area U.S., U.S. Territories, Canada Europe, Middle East, Japan, Egypt, S. Africa, Greenland South Eastern Asia, Taiwan, Hong Kong, Korea Australia, New Zealand, Latin America, Pacific Islands (former Russia), Eastern Europe, India, Africa, North Korea China ASUS DVD-E616P1 User Manual...

[Page 22](#) ASUS DVD-E616P1 User Manual...

[Page 23: Quick Installation Guide](#)

DVD-E616P1 DVD-ROM Drive Quick Installation Guide In 12 Languages...

[Page 24](#) Quick Installation Guide Hardware Installation 1. Turn off your computer and any peripheral devices connected to it. 2. Use a grounded wrist strap or touch a safely grounded object or a metal object, such as the power supply case, before handling the device to avoid damaging it due to static electricity.

[Page 25](#) Guide d'Installation Rapide Installation Matérielle 1. Eteignez votre ordinateur et tous les périphériques connectés. 2. Utilisez un bracelet anti-statique relié à la terre ou touchez un objet relié à la masse ou un objet métallique, tel le boîtier d'alimentation, avant de manipuler l'équipement pour éviter de l'endommager à...

[Page 26](#) Schnellinstallationsanleitung Hardwareinstallation 1. Schalten Sie Ihren Computer und alle angeschlossenen Peripheriegeräte aus. 2. Um Schäden durch statische Elektrizität zu vermeiden, tragen Sie bitte eine geerdete Manschette oder berühren Sie einen richtig geerdeten Gegenstand oder Metallgegenstand wie z.B. das Netzteilgehäuse, bevor Sie das Gerät in die Hand nehmen.

[Page 27](#) Guida all'installazione rapida Installazione dell'hardware 1. Spegner il computer e tutte le periferiche ad esso collegate. 2. Prima di maneggiare il dispositivo provocando danni causati dall'energia statica, indossare una fascetta antistatica, oppure toccare un oggetto

protetto con massa a terra, o un oggetto metallico come la scatola d'alimentazione. 3.

[Page 28](#) Guía de instalación rápida Instalación del hardware 1. Apague su equipo y cualquier dispositivo periférico que se encuentre conectado al mismo. 2. Utilice una muñequera de toma de tierra o toque un objeto a tierra seguro o un objeto de metal, como por ejemplo la carcasa de la fuente de alimentación, antes de manipular el dispositivo para evitar dañarlo debido a la electricidad estática.

[Page 31](#) ®...

[Page 32](#) Snelle installatiegids Hardware-installatie 1. Zet de computer uit en maak alle verbindingen los. 2. Gebruik een geaard polsbandje of raak een goed geaard voorwerp aan, zoals een radiator, voordat u de onderdelen hanteert. U zou anders schade kunnen veroorzaken door statische elektriciteit. 3.

[Page 33](#) нст укция по монтажу онтаж п ивода DVD-дисков Установка п ог амного обеспечения...

[Page 34](#) Snabbinstallationsguide Installation av maskinvara 1. Stäng av datorn och all ansluten kringutrustning. 2. Använd en jordad handledsrem eller rör vid ett säkert jordat föremål eller ett metallföremål som t ex strömkällans hölje, innan du hanterar enheten för att inte skada den med statisk elektricitet. 3.