



# Complete The Installation - Whirlpool XHPC155YC Installation Instructions Manual

15.5" laundry pedestal with chrome handle and storage drawer



1  
2  
3  
4  
5  
6  
7  
8  
9  
10  
11  
12  
13  
14  
15  
16

• PAGE

7



 
- 


[Table of Contents](#)

•

## Bookmarks

Available languages

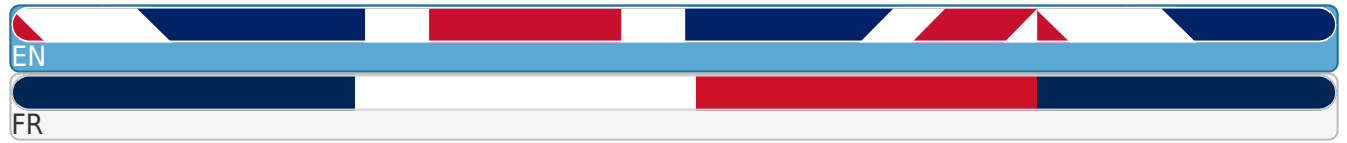

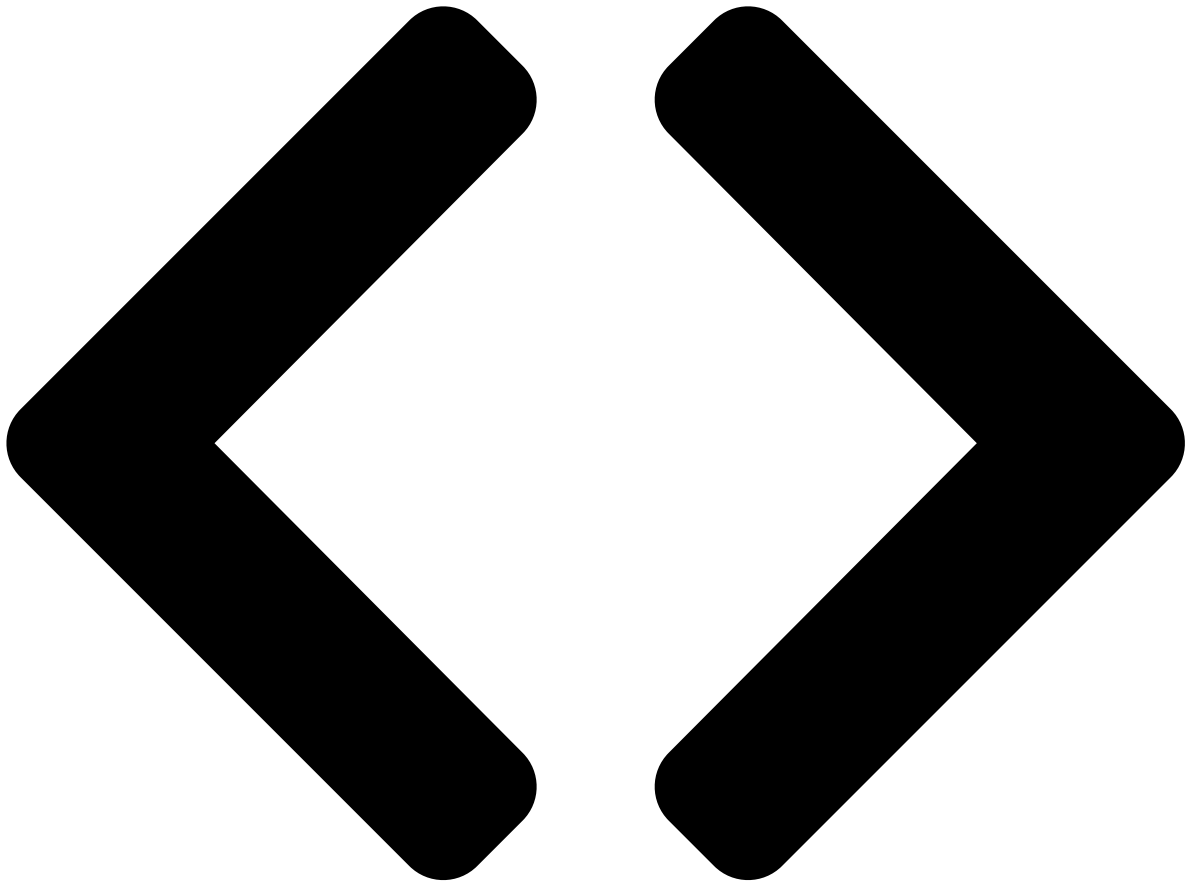

Enlarged version



---

## COMPLETE THE INSTALLATION

1.

 
 
### align sides of pedestal

Align the sides of the pedestal so that they are even with the sides of the washer/dryer. Reach inside the pedestal opening and securely tighten all four pedestal screws.

2.

### Prepare pedestal feet

Using a 1/4" hex head ratchet or open end wrench, lower the feet approximately 1" (25 mm) away from the bottom of the

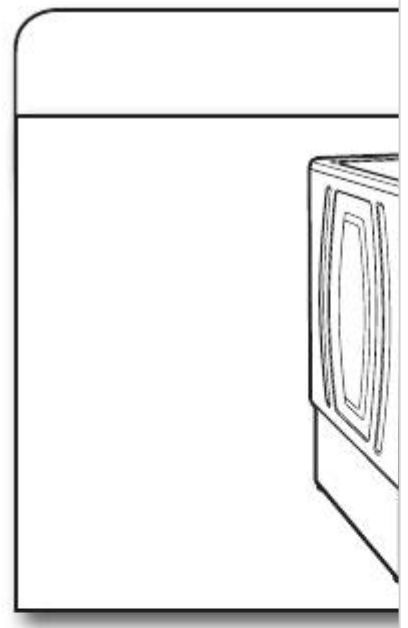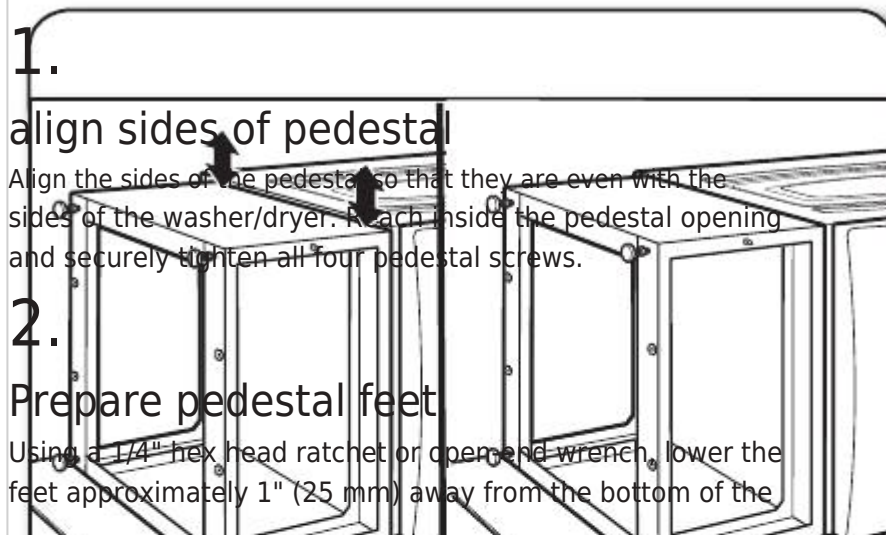

pedestal.

1"  
(25 mm)

3.

### Stand the washer/dryer upright

Tip the washer/dryer back to its upright position. Remove any remaining packaging material. Set the pedestal box aside for use if installing another pedestal. Once both the washer and dryer have been installed, dispose of/recycle all packaging material.

level the washer/dryer

1.

 
move close to final location

Follow the installation instructions that came with your model to finish installing or reinstalling your washer/dryer (i.e., hoses, vents, etc.).

note: Be sure to remove the transport bolts from the back of the washer.

7

[Table of Contents](#)

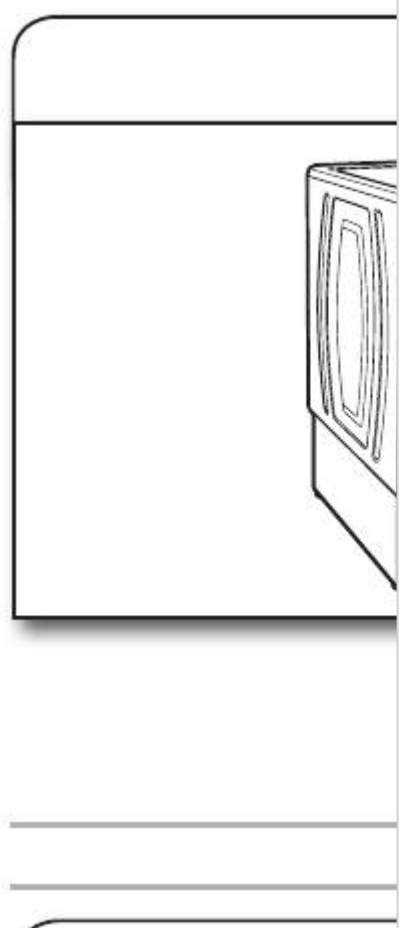

[Previous Page](#)  
[Next Page](#)

1  
...  
4  
5  
6  
7  
8  
9  
10  
11

Quick Links:

[Installation Requirements](#)

[Tools and Parts](#)

[Installing the Pedestal](#)

[Complete the Installation](#)

## Related Manuals for Whirlpool XHPC155YC

[Laundry Accessories Whirlpool WFP2715HW0 Installation Instructions Manual](#)

15.5" pedestal (18 pages)

[Laundry Accessories Whirlpool LRF4001RY Use And Care Manual](#)

Fabric freshener (40 pages)

[Laundry Accessories Whirlpool 279827 Installation And Wiring Instructions](#)

Dryer motor kit (4 pages)

[Laundry Accessories Whirlpool 279787 Installation And Wiring Instructions](#)

Dryer motor kit (4 pages)

[Laundry Accessories Whirlpool LRF4001RY Quick Start Manual](#)

New fabric freshener (2 pages)

[Laundry Accessories Whirlpool For use only with front load washer and dryers Installation Instructions Manual](#)

Stack kit for use only with front load washer and dryers (16 pages)

[Laundry Accessories Whirlpool W10198562A Installation Instructions Manual](#)

15.5" (39.4 cm) washer/dryer pedestal (12 pages)

[Laundry Accessories Whirlpool PEDESTAL Installation Instructions Manual](#)

(16 pages)

[Laundry Accessories Whirlpool W10323246 Installation Instructions Manual](#)

4-way vent kit front load dryer match with full front panel - side and bottom exhaust venting (18 pages)

[Laundry Accessories Whirlpool W10110902 Use And Care Manual](#)

Laundry worksurface (12 pages)

[Laundry Accessories Whirlpool WHP1500SCB Installation Instructions Manual](#)

15.5" (39.4 cm) washer/dryer pedestal (24 pages)

[Laundry Accessories Whirlpool WVP5000SQ Use And Care Manual](#)

Symphony series laundry tower (12 pages)

## Related Content for Whirlpool XHPC155YC

[For use only with front load washer and dryers Installation Requirements](#)

[Whirlpool For use only with front load washer and dryers WVP5000SQ Installation Requirements](#)

[Whirlpool WVP5000SQ W10110902 Installation Requirements](#)

[Whirlpool W10110902 279787 Installation And Wiring](#)

[W10198562A Installation Instructions](#)

[Whirlpool W10198562A](#)

This manual is also suitable for:

[Xhpc155yuMvwc700vj](#)

