



Asus ESC4000 G2 GPU Quick Start Manual

Cache vault accessory kit

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16

• PAGE

1



-

[Table of Contents](#)

•

Bookmarks

Quick Links

[Download this manual](#) See also: [User Manual](#)



Cache Vault Accessory Kit

Quick Start Guide

The ASUS logo is positioned between the two lines of the title. It features the word "ASUS" in a bold, black, sans-serif font. The letter "A" is stylized with a diagonal slash through it. A registered trademark symbol (®) is located to the upper right of the "S".

Copyright © 2012 ASUSTeK COMPUTER INC. All Rights Reserved.

No part of this manual, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any

means, except documentation kept by the purchaser for backup purposes, without the express written permission of ASUSTeK COMPUTER INC. ("ASUS").

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless

such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

ASUS PROVIDES THIS MANUAL "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OR CONDITIONS OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL ASUS, ITS DIRECTORS, OFFICERS, EMPLOYEES OR AGENTS BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES (INCLUDING DAMAGES FOR LOSS OF PROFITS, LOSS OF BUSINESS, LOSS OF USE OR DATA, INTERRUPTION OF BUSINESS AND THE LIKE), EVEN IF ASUS HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES ARISING FROM ANY DEFECT OR ERROR IN THIS MANUAL OR PRODUCT.



SPECIFICATIONS AND INFORMATION CONTAINED IN THIS MANUAL ARE FURNISHED FOR INFORMATIONAL USE ONLY, AND ARE SUBJECT TO CHANGE AT ANY TIME WITHOUT NOTICE, AND SHOULD NOT BE CONSTRUED AS A COMMITMENT BY ASUS. ASUS ASSUMES NO RESPONSIBILITY OR LIABILITY FOR ANY ERRORS OR INACCURACIES THAT MAY APPEAR IN THIS MANUAL, INCLUDING THE PRODUCTS AND SOFTWARE DESCRIBED IN IT.

Products and corporate names appearing in this manual may or may not be registered trademarks or copyrights of their respective companies, and are used only for identification or explanation and to the owners' benefit, without intent to infringe.

Contents

[Package](#)

contents	2
Installing the Cache Vault Kit on the holder and the PIKE card	3
Installing the Cache Vault Power Module on the steel clip and holder	3
Standard installation of Cache Vault power module	3
Installing the Cache Vault Flash Module on the PIKE 2208 card	4
Installing the Cache Vault Kit on specific ASUS server systems	5
Installing the kit on RS720-X7/RS8, RS720-E7/RS12, RS720-E7/RS12-E server systems	5
Installing the kit on TS700-X7/PS4, TS700-E7/RS8 server systems	5
Installing the kit on RS920-E7/RS8, RS926-E7/RS8 server systems	6
Installing the kit on ESC4000 G2 GPU server system	7

15060-09V10000

First Edition (V1) T7843

November 2012

[Next Page](#)

1
2
3
4
5

Chapters

English 1

□□ 9

Related Manuals for Asus ESC4000 G2 GPU

[Server Asus ESC4000 G2 User Manual](#)

2u rackmount server (200 pages)

[Server Asus ESC4000 G2 User Manual](#)

2u rackmount server (162 pages)

[Server Asus RS920-E7/RS8 User Manual](#)

2u rackmount server (200 pages)

[Server Asus TS700-X7/PS4 User Manual](#)

Pedestal/5u rackmount server (200 pages)

[Server Asus RS720-E7/RS12-E User Manual](#)

2u rackmount server (190 pages)

[Computer Hardware Asus PIKE 2208 User Manual](#)

Lsisas raid card (86 pages)

[Server Asus ESC4000 IB Configuration Manual](#)

Esc4000 series (22 pages)

[Server Asus RS720-X7 Configuration Manual](#)

(20 pages)

[Storage Asus RS720-E7/RS12 Configuration Manual](#)

(20 pages)

[Server Asus RS720-E7 RS12 Compatibility Chart](#)

User manual (1 page)

[Asus Pen 2.0, SA203H - Active Stylus Manual](#)

(article)

[Accessories Asus ROG RYUO III ARGB Series Quick Start Manual](#)

(26 pages)

[Asus Active Stylus SA200H Manual](#)

(article)

[Accessories Asus ABTU016 User Manual](#)

(75 pages)

[Accessories Asus Xtion Quick Start Manual](#)

(124 pages)

[Accessories asus Xtion User Manual](#)

(300 pages)

Summary of Contents for Asus ESC4000 G2 GPU

[Page 1: Table Of Contents](#)

Product warranty or service will not be extended if: (1) the product is repaired, modified or altered, unless such repair, modification or alteration is authorized in writing by ASUS; or (2) the serial number of the product is defaced or missing.

[Page 2: Package Contents](#)

⑧ caps*) ASUS Accessory Kit Steel bracket (1 x Full- Screws (3): 2 screws for the Screws (4): 3 screws** for ASUS height, 1 x Half-height) steel bracket steel CVPM clip holder * Use these screws (2) and screw caps when installing LSI steel ⑧...

[Page 3: Installing The Cache Vault Kit On The Holder And The Pike Card](#)

(2). Standard installation of Cache Vault power module Some specific ASUS server systems have a specific space for installing Cache Valut Power module, allowing you the use of all your system’s expansion slots. For generally standard installation, please follow the steps below.

[Page 4: Installing The Cache Vault Flash Module On The Pike 2208 Card](#)

Install the Cache Vault Power Module on your server system. The images shown below are for reference only. Installed on a 2U server system. Installed on a 5U server system. Installing the Cache Vault Flash Module on the PIKE 2208 card Place the PIKE 2208 card on a flat, stable surface.

[Page 5: Installing The Cache Vault Kit On Specific Asus Server Systems](#)

After installing the Cache Vault Falsh Module on the PIKE 2208 card, and installing the Cache Vault Power Module on the steel CVPM clip and holder, install these two assemblies to the specific ASUS server systems as instructed below. Installing the kit on RS720-X7/RS8, RS720-E7/RS12, RS720-E7/...

[Page 6: Installing The Kit On Rs920-E7/Rs8, Rs926-E7/Rs8 Server Systems](#)

Align the two screws on the side of the steel CVPM holder installed with the Cache Vault Power Module to the screw holes of the full-height steel bracket. Secure the holder assembly with the bundled screws (3). Place the holder assembly into the system and secure it with the screw removed earlier in step 1.

[Page 7: Installing The Kit On Esc4000 G2 Gpu Server System](#)

Align the three screw holes on the LSI® steel CVPM clip to the three screw holes on the bracket, and secure the clip with the bundled screws (4). Install the Cache Vault Power Module to the clip and connect the 42”...

[Page 8](#) Take out the riser card bracket from the right side of the server system. Align the screw holes on the holder assembly to the screws holes on the bracket, then secure the holder assembly with a screw. Put the cable through the hole on the bracket.

[Page 9](#) http:// support.asus.com 0800-093-456

[Page 10:](#)

Cache Vault Accessory Kit Cache Vault (1)Cache Vault Cache Vault Flash Module 3 Cache Vault Power Module CVFM02 CVPM02 ⑧ 24 CVPM ⑧ (2)LSI CVPM ⑧ 24”Cable extender Steel CVPM clip/holder...

[Page 11: Cache Vault Pike](#)

Cache Vault Pike Cache Vault PIKE 2208 Cache Vault Cache Vault CVPM ⑧ 1. CVPM LSI CVPM Cache Vault ⑧ 3. LSI CVPM

[Page 12: Cache Vault Pike 2208](#)

2. Cache Vault Pike 2208 2U 5U/ Cache Vault Pike 2208 1. Pike 2208 2. Cache Vault Pike 2208 3. Cache Vault Pike 2208...

[Page 13: Cache Vault](#)

Cache Vault Pike 2208 Cache Vault Pike 2208 Cache Vault RS720-X7/RS8/RS720-E7/RS12/RS720-E7/RS12-E 1. Cache Vault Pike 2208 2. Cache Vault Pike 2208 42 3. Cache Vault Pike 2208 4. Pike 2208...

[Page 14: Rs920-E7/RS8/Rs926-E7/RS8](#)

2. Cache Vault Pike 2208(3) 3. Cache Vault Pike 2208 4. Cache Vault Pike 2208 Cache Vault Pike 2208 5. Cache Vault Pike 2208 RS920-E7/RS8/RS926-E7/RS8 1. Cache Vault Accessory Kit...

[Page 15: Esc4000 G2 Gpu](#)

2. LSI CVM 4) 3. Cache Vault Pike 2208 42 4. Cache Vault Pike 2208 5. Pike 2208 Pike 2208 Pike 2208...

2. Cache Vault Pike 2208 3. Cache Vault Pike 2208 4. Cache Vault Pike 2208 5. Cache Vault Pike 2208 6. Cache Vault Pike 2208 7. Cache Vault Accessory Kit...

This manual is also suitable for:

[Rs920-e7/rs8Rs926-e7/rs8Rs720-e7/rs12-eRs720-x7/rs8Esc4000/fdr g2Ts700-x7/ps4](#) ... [Show all](#)