

FlashAir



Wireless LAN

©  8GB

 
TOSHIBA

Toshiba PFW008U-1ABW User Manual

Configuration software


1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18

19
20
21
22
23
24
25
26
27
28
29




•

 Bookmarks



[Download this manual](#)

Quick Links

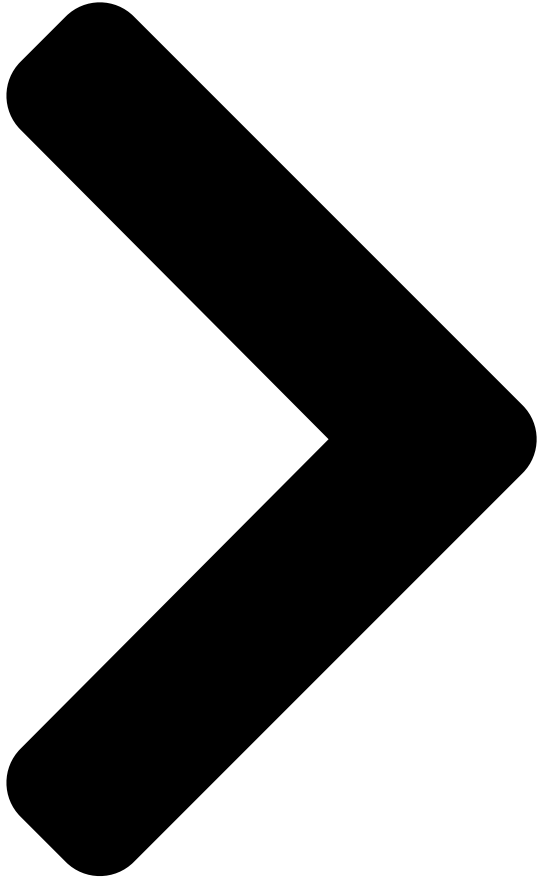

FlashAir™ Configuration Software

User's Manual
TOSHIBA
Leading Innovation >>>
(Windows)

Revision 2

[For the \(MAC\) User's Manual click here](#)

[Next Page](#)

1
2
3
4
5

Related Manuals for Toshiba PFW008U-1ABW

[Software Toshiba RSM 100 Instruction Manual](#)

Pc interface software (173 pages)

[Software Toshiba Strata CIX Programming Manual](#)

Application release 5 (248 pages)

[Software Toshiba e-STUDIO Printer/Fax/Scanner/Copier Brochure](#)

E-studio colour systems (4 pages)

[Software Toshiba dynadock Drivers Update](#)

To version 2.3 (3 pages)

[Software Toshiba HDWC110XK3J1 User Manual](#)

Desktop ext hard drive hdwc110xk3j1 (16 pages)

[Software Toshiba Strata DK424 Quick Reference Manual](#)

For strata dk424 digital business telephone systems (8 pages)

[Software Toshiba MEG50AS Owner's Manual](#)

Toshiba meg50as: user guide (32 pages)

[Software Toshiba 6F3A4508 Instruction Manual](#)

Maintenance tool for drive (53 pages)

[Software Toshiba Strata CIX GVPH Programming Manual](#)

Voice processing system (184 pages)

[Software Toshiba STRATA CIX Remote Call Control User Manual](#)

(24 pages)

[Software Toshiba Strata CIX Programming Manual](#)

Application implementation (100 pages)

[Software Toshiba STRATA CIX System Administrator Manual](#)

Voice assistant (34 pages)

[Software Toshiba AF 512E Manuallines](#)

For af 512e drives (2 pages)

[Software Toshiba Strata CIX SIP Trunking Product Bulletin](#)

(14 pages)

Summary of Contents for Toshiba PFW008U-1ABW

[Page 1](#) FlashAir™ Configuration Software User's Manual (Windows) Revision 2 For the (MAC) User's Manual click here...

[Page 2: Software Installation](#)

3. Insert FlashAir™ ("Product") into SD slot, and go to the Product's directory. 4. Double-click "FlashAir.exe", and installer is launched. Note: The latest FlashAir configuration software can be downloaded from the website below. Please check the website and use the latest version available. URL: <http://www.toshiba.co.jp/p-media/wwsite/flashair.htm>...

[Page 3](#) 5. Choose the appropriate language and Click "Next >".

[Page 4](#) 6. After preparation is finished, the screen below will be displayed. Click "Next >". 7. Choose Destination location for installing Software and click "Next >". In this manual, the destination location is not changed.

[Page 5](#) 8. Click “Install”. 9. After installation is completed, the screen below is displayed. Click “Finish” to complete installation.

[Page 6](#) 10. After the installation is completed, a “FlashAirTool” icon will appear on the desktop of the PC. This completes the Software installation.

[Page 7: Operation Procedure](#)

Operation Procedure Insert the Product into the SD slot and double-click the “FlashAirTool” icon on the desktop of the PC. After the Software starts up, the window below (“Main Window”) is displayed. 3. Card Setting 4. Wireless LAN Startup screen 5.

[Page 8](#) 3. Card Setting When the “Card Setting” button is clicked, the screen below is displayed. (1) Start mode Setting (2) Wireless LAN Setting (3) Card Setting (1) Start mode Setting FlashAir Setting: Start automatically at boot This mode is set as the default setting. The wireless LAN functionality of the Product will run automatically when the device which contains the Product is turned on.

[Page 9](#) Do not use easy-to-guess passwords and please select a strong password. Toshiba recommends you to make a note of your SSID and security key. (3) Card Setting If there is no connection from a device (e.g.

[Page 10](#) wireless LAN functionality will be automatically turned off. This results in the Product working as a normal SDHC memory card only. Please click “Apply” to save the Card Setting.

[Page 11](#) 4. Wireless LAN Startup screen You can select an image for the Wireless LAN Startup screen when you set the “Start mode Setting” as “Start with control image”. Current Image Sample images File selection field Six sample images, which are preloaded, or any image, can be set as the Wireless LAN Startup screen. Click an image from the samples and click “Change”...

[Page 12](#) 5. Format the Card This feature is to format the Product and reset it to the factory default. This feature may cause all the data and initial settings stored in the Product to be lost. Back up your data on multiple types of storage media before using this feature. Initial setup of the Product is required again after formatting.

[Page 13](#) While the window below is displayed, the Product is being reset to the factory default. After formatting is completed, the window below will be displayed. Follow the instructions in this window, take out the Product from SD slot and insert it again. Then click “OK”.

[Page 14](#) This feature is to update the software of the Product. Download the latest version of the software from the website (<http://www.toshiba.co.jp/p-media/wwsite/flashair.htm>) and store it to your PC. Click “Browse” and select the stored file. After selecting the stored file, click the “Update” button.

[Page 15](#) * Windows®, Windows Vista® are registered trademarks of Microsoft Corporation in the United States and other countries. * SDHC Logo is a trademark of SD-3C, LLC. * FlashAir is a trademark of Toshiba Corporation. * All other company/product names may be registered trademarks of their respective companies. * Copyright © 2012 TOSHIBA CORPORATION. All Rights Reserved.

[Page 16](#) FlashAir™ Configuration Software User’s Manual (Mac) Revision 2 For the (Windows) User's Manual click here...

[Page 17](#) 2. Required SD Interface Devices: SD Slot on personal computers (“PC”) / USB SD reader. Please ensure your SD Interface Device is compatible with the SDHC interface. 3. Configuration Software can be downloaded from the website below. URL: <http://www.toshiba.co.jp/p-media/wwsite/flashair.htm> 4. Save downloaded file into your PC. 5. Double-click “FlashAirTool.zip”, and installer is launched.

[Page 18](#) Operation Procedure: Insert the Product into the SD slot and double-click the “FlashAirTool” icon on desktop of the PC. After the Software starts up, the window below (“Main

Window”) is displayed. 3. Card Setting 4. Wireless LAN Startup screen 5. Format the Card 6.

[Page 19](#) 3. Card Setting When the “Card Setting” button is clicked, the screen below is displayed. (1) Start mode Setting (2) Wireless LAN Setting (3) Card Setting...

[Page 20](#) (1) Start mode Setting □ FlashAir Setting: Start automatically at boot This mode is set as the default setting. The wireless LAN functionality of the Product will run automatically when the device which contains the Product is turned on. “SSID” and “Password” setup on this window will be used for the FlashAir Wireless LAN connection.

[Page 21](#) Do not use easy-to-guess passwords and please select a strong password. Toshiba recommends you to make a note of your SSID and security key. (3) Card Setting If there is no connection from a device (e.g.

[Page 22](#) 4. Wireless LAN Startup screen You can select an image for the Wireless LAN Startup screen when you set the “Start mode Setting” as “Start with control image”. Current Image Sample images File selection field Six sample images, which are preloaded, or any image, can be set as the Wireless LAN Startup screen. Click an image from the samples and click “Change”...

[Page 23](#) 5. Format the card This feature is to format the Product and reset it to the factory default. This feature may cause all the data and initial settings stored in the Product to be lost. Back up your data on multiple types of storage media before using this feature. Initial setup of the Product is required again after formatting.

[Page 24](#) Then, formatting is started.

[Page 25](#) After formatting is completed, the window below will be displayed. Follow the instructions in this window, take out the Product from SD slot and insert it again. Then click “OK”. [How to remove the Product] Before you take the product out, click the “Eject” button] on the Product on the “DEVICE”...

[Page 26](#) This feature is to update the Software of the Product. Download the latest version of the software from the website (<http://www.toshiba.co.jp/p-media/wwsite/flashair.htm>) and store it to your PC. Click “Browse” and select the stored file. After selecting the stored file, click the “Update” button.

[Page 27](#) When the below window is displayed, click “OK”. When the window below is displayed, take out the Product from the SD slot. Then insert the Product in the SD slot again after five (5) seconds, and click “OK”. The Progress window will be displayed when the software updating has started.

[Page 29](#) * Mac OS® X is a trademark or registered trademark of Apple Inc. in the United States and other countries. * SDHC Logo is a trademark of SD-3C, LLC. * FlashAir is a trademark of Toshiba Corporation. * All other company/product names may be registered trademarks of their respective companies. * Copyright © 2012 TOSHIBA CORPORATION. All Rights Reserved.

This manual is also suitable for:

Flashair