

Setting Av Input Mode; Viewing The Digital Signal Meter - Toshiba 40UL605U Owner's Manual

Integrated high definition lcd tv

1

2

3

4

5

6

7

8

Table Of Contents

9

10

11

12

13

14

 
15

16

17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89



•


[Table of Contents](#)

-

Troubleshooting

•

Bookmarks

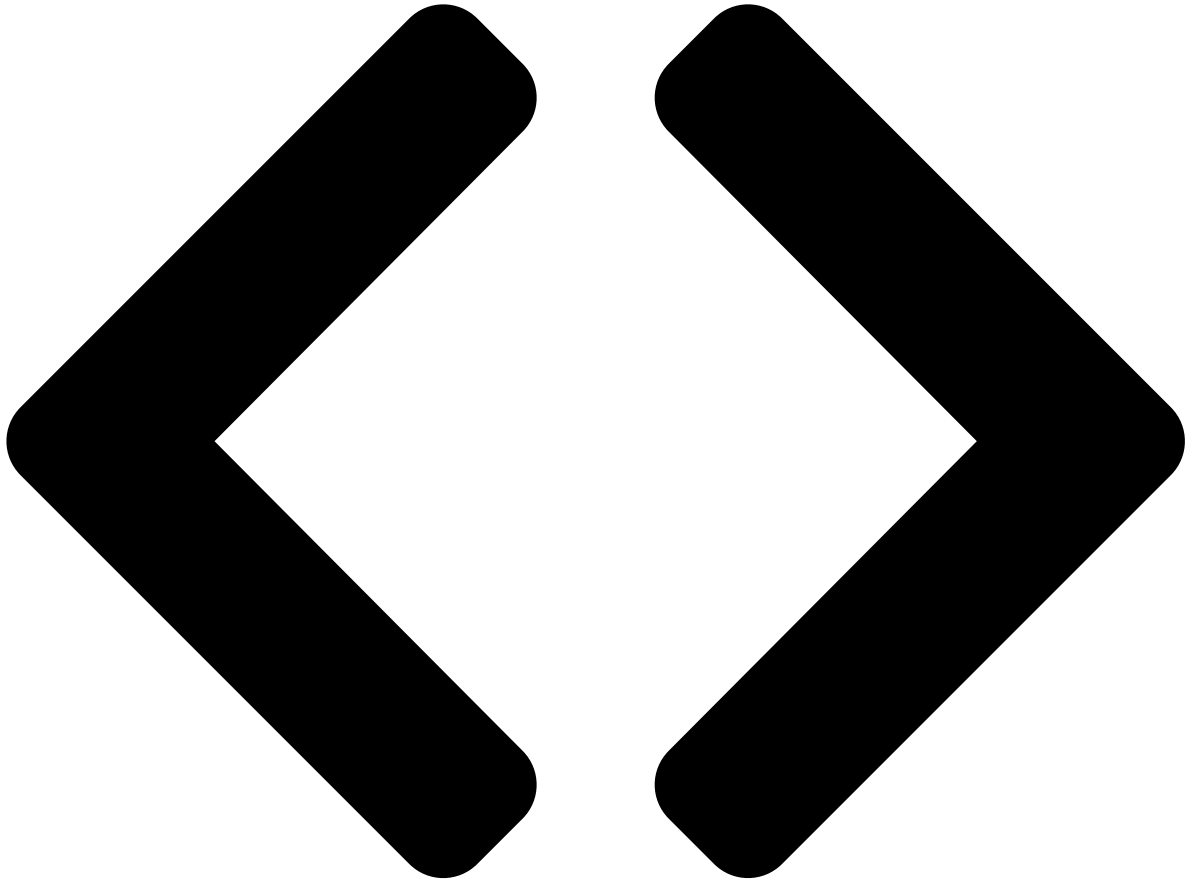

Note: Skipped channels cannot be selected with
or
; however, they can still be accessed
using the number keys on the remote control.

Setting AV Input mode

This setting determines the configuration of the shared AV input on your TV. You can set this input for either ColorStream HD or Video.

Note: Skipped channels cannot be selected with
[CH] or [V]; however, they can still be accessed
using the number keys on the remote control.

1

Setting AV Input mode

From the Preferences menu, highlight AV Input.

2

This setting determines the configuration of the

shared AV input on your TV. You can set this input

Note: If you select the ColorStream HD or Video.

Note: Because the PC and
share the same set of an
PC Audio menu setting
Audio menu setting. If PC
the HDMI 1 Audio setting
If PC Audio is set to "Yes"
setting is set to "Digital"
the menu. (Also see item
"Setting the PC Audio" on

Viewing the digital

have no color or be fuzzy.

®

Setting the HDMI

Chapter 5: Setting up your TV

To set the HDMI audio mode:

1

and open the Sound menu.

Press

Note: Skipped channels cannot be selected with or ; however, they can still be accessed using the number keys on the remote control.

2

Highlight Audio Setup and press

3

Setting AV Input mode

Press S or T to select HDMI 1 Audio and then press W or X to select the HDMI 1 audio mode (Auto, Digital, or Analog). (Auto is the recommended mode.) See "Connecting an HDMI or DVI device to the HDMI input" (page 18).

1 From the Preferences menu, highlight AV Input.

Mode

2 Press ◀ or ▶ to select your desired setting.

When viewing the HDMI 1 input, if digital audio from the HDMI input is available, it will be output. If not, the TV will automatically detect and output analog audio from the PC Audio input.

Auto

When viewing the HDMI 1 input, if

Setting the HDMI® audio mode

When viewing the HDMI 1 input, if

Digital

digital audio from the HDMI input will be output.

When viewing the HDMI 1 input,

Analog
analog audio from the PC Audio input will be output.

4

To save your settings, highlight Done and press

36

Chapter 5: Setting up your TV audio mode



Note: Because the PC and HDMI 1 inputs share the same set of analog audio inputs, the

PC Audio menu setting influences the HDMI 1

Audio menu setting. If PC Audio is set to "No," the HDMI 1 Audio setting changes to "Auto." If PC Audio is set to "Yes," the HDMI 1 Audio setting is set to "Digital" and the TV will automatically detect and output the menu. (Also see item 3 on page 14 and

When viewing the HDMI 1 input

Note: Because the PC and HDMI 1 inputs share the same set of analog audio inputs, the PC Audio menu setting influences the HDMI 1 Audio menu setting. If PC Audio is set to "Yes," the HDMI 1 Audio setting changes to "Digital" and the TV will automatically detect and output the menu. (Also see item 3 on page 14 and

Viewing the digital

You can view the digital signal strength of the CABLE digital TV input so

To view the digital signal

1 Press and open the

2 Highlight Installation and

3 A new set of Installation information will appear. Open the Terrestrial menu, highlight Signal Meter, and press .

4 Press to select the digital channel whose signal strength you want to view.

Note:

- The physical digital signal strength of the Signal Meter screen is a virtual TV channel. It does not affect local broadcasters to which you have entered numbers for your local channels.
- The signal strength of the virtual channel is based on the physical channel.

To close the screen and return to the Terrestrial menu:

Highlight Done and press .

To return to normal viewing:

Press .

"Setting the PC Audio" on page 54.)

Viewing the digital signal meter

Chapter 5: Setting up your TV

You can view the digital signal meter in the ANT/CABLE digital TV input source only.

To view the digital signal meter:

1 Press **CH** or **CH**; however, they can still be accessed using the number keys on the remote control.

Press

Setting AV Input mode

Highlight Installation and press

3 This setting determines the configuration of the shared AV input on your TV. You can set this input for either **ColorStream HD** or **Video**.

A new set of Installation menu icons will appear.

Open the Terrestrial menu, highlight **Signal Meter**, and press **1** From the **Preferences** menu, highlight **AV Input**.

2 Press **◀** or **▶** to select your desired setting.

4

Press **STWX** to select the antenna input and digital channel whose signal you want to check.

Note:

The physical digital channel number listed in the Signal Meter screen may not correspond

to a virtual TV channel number.

To set the HDMI audio mode:

1 Press **MENU** and open the **Sound** menu.

2 Highlight **Audio Setup** and press **OK**.

3 Press **▲** or **▼** to select **HDMI 1 Audio** and then press **◀** or **▶** to select the HDMI 1 audio mode (**Auto**, **Digital**, or **Analog**). (**Auto** is the


recommended mode.) See "Connecting an HDMI

or DVI device to the HDMI input" (page 18).

To return to normal viewing:

Press

(continued)

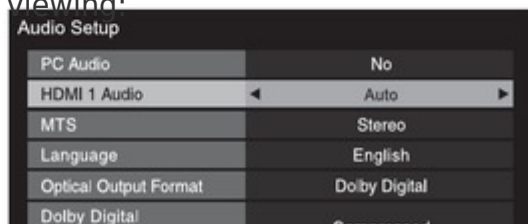

Note: Because the PC audio share the same set of antenna as the **PC Audio** menu setting, the **Audio** menu setting. If **PC Audio** is set to "Yes", the **HDMI 1 Audio** setting in the menu. (Also see item "Setting the PC Audio" on

Viewing the digital signal meter

You can view the digital signal meter in the ANT/CABLE digital TV input source only.

To view the digital signal meter:

1 Press **MENU** and open the

2 Highlight **Installation** and

3 A new set of Installation menu icons will appear. Open the **Terrestrial** menu, highlight **Signal Meter**, and press **OK**.

4 Press **▲▼◀▶** to select the digital channel whose signal you want to check.

Note:

- The physical digital channel number listed in the Signal Meter screen may not correspond to a virtual TV channel number.
- The signal strength between virtual channels on the same physical channel.

[Previous Page](#)
[Next Page](#)

1
...
33
34
35
36
37
38
39
40

Quick Links:

[Connecting a Home Network](#)

Related Manuals for Toshiba 40UL605U

[TV Toshiba 55UL605U Specifications](#)

1080p hd led tv with clearframe 120hz and net tv (2 pages)

[LCD TV Toshiba 40UX600U Owner's Manual](#)

Integrated high definition lcd television (107 pages)

[LCD TV Toshiba 40UX600U Specifications](#)

1080p hd led tv with clearframe 120hz and net tv (2 pages)

[LCD TV TOSHIBA 55UX600U Owner's Manual](#)

Integrated high definition lcd television (101 pages)

[LCD TV Toshiba 40RV52U Service Manual](#)

Lcd color television (18 pages)

[LCD TV Toshiba 32C120U User Manual](#)

Integrated high definition lcd television (130 pages)

[LCD TV Toshiba 40E220U User Manual](#)

Integrated hd lcd television (130 pages)

[LCD TV Toshiba 40XV648U Owner's Manual](#)

Integrated high definition lcd tv (70 pages)

[LCD TV Toshiba 32LV665D Owner's Manual](#)

(52 pages)

[LCD TV Toshiba 32AV700E Owner's Manual](#)

Lcd colour tv (32 pages)

[LCD TV Toshiba 22AV700A Owner's Manual](#)

Integrated digital lcd tv (48 pages)

[LCD TV Toshiba 32P2400 Series Owner's Manual](#)

(32 pages)

[LCD TV Toshiba 32 LK3A Series Operating Instructions Manual](#)

(38 pages)

[LCD TV Toshiba 40L28 Series Operating Instructions Manual](#)

(37 pages)

[LCD TV Toshiba 40LV933G Service Manual](#)

(47 pages)

[LCD TV Toshiba 40L3443DG Service Manual](#)

Lcd color television (36 pages)

Related Content for Toshiba 40UL605U

[48T546 DN Series Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Toshiba 48T546 DN Series

[40L154 DG Series Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Toshiba 40L154 DG Series

[40L344 DG Series Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Toshiba 40L344 DG Series

[48L144 DG Series Appendix B: Av And Hdmi Signal Compatibility \(Input Signal Types\)](#)

Toshiba 48L144 DG Series

[40RV52U Setting The Channel Tnning Mode](#)

Toshiba 40RV52U

[19C100U Setting The Hdmi <'Audio Mode](#)

Toshiba 19C100U

[37AV504D Setting Hotel Mode](#)

Toshiba 37AV504D

This manual is also suitable for:

[46U605U55U605U46U60555U60540U605](#)