

Selecting Stereo/Sap Broadcasts; Adjusting The Audio Quality - Toshiba 40UL605U Owner's Manual


Integrated high definition lcd tv

1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17

Table Of Contents

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

 68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89



•

[Table of Contents](#)

-

Troubleshooting

•

Bookmarks



To use the digital audio selector:

1
and open the Sound menu.
Press

2
Highlight Digital Audio Selector and press

3
Press S or T to select Audio, and press P, W, or X to select the desired service.

4
Press

To use the digital audio selector:

1 Press **MENU** and open the **Sound** menu.

2 Highlight **Digital Audio Selector** and press **OK**.



Note:

- A second audio program on those TV stations that station might broadcast second audio program. will see the current program hear the other language normal audio.
- If you have SAP on and watching is not broadcast program, the station's normal

Selecting stereo/SAP broadcasts

The multi-channel TV sound (MTS) feature allows you to output high-fidelity stereo sound. MTS also can transmit a second audio program (SAP) containing a second language, music, or other audio information (when provided by individual stations).

When the TV receives a stereo or SAP broadcast, the word "STEREO" or "SAP" appears on-screen when is pressed. The MTS feature is only available for analog signals on the ANT/CABLE input.

To use the digital audio selector:

- 1 Press **(MENU)** and open the **Sound** menu.
- 2 Highlight **Digital Audio Selector** and press **(OK)**.

To listen to stereo sound:

- 1 Press **(MENU)** and open the **Sound** menu.
- 2 Press **(OK)** to open the **Digital Audio Selector** menu.
- 3 Press **(UP)** or **(DOWN)** to select **Audio**, and then press **(LEFT)** or **(RIGHT)** to select the desired service.
- 4 Press **(EXIT)**.



To save the new settings, highlight **Done** and press **(OK)**.

To reset the settings to the factory defaults, highlight **Reset** and press **(OK)**.

Note:

You can typically leave the TV in **Stereo** mode because it will automatically output the type of sound being broadcast (stereo or monaural).

If the stereo sound is noisy, select **Mono** to reduce the noise.

Selecting stereo/SAP broadcasts

The multi-channel TV sound (MTS) feature allows you to output high-fidelity stereo sound. MTS also can transmit a second audio program (SAP) containing a second language, music, or other audio information (when provided by individual stations).

When the TV receives a stereo or SAP broadcast, the word "STEREO" or "SAP" appears on-screen when **(INFO)** is pressed. The MTS feature is only available for analog signals on the **ANT/CABLE** input.

To listen to stereo sound:

- 1 Press **(MENU)** and open the **Sound** menu.
- 2 Highlight **Audio Setup** and press **(OK)**.
- 3 In the **MTS** field, select **Stereo**.
- 4 Press **(OK)** to save the new settings, highlight **Done** and press **(OK)**.

48

Chapter 6: Using the TV's features

To reset the settings to the factory defaults, highlight **Reset** and press **(OK)**.

Note:

- You can typically leave the TV in **Stereo** mode because it will automatically output the type of sound being broadcast (stereo or monaural).

Note:

A second audio program (SAP) can be heard only on those TV stations that offer it. For example, a station might broadcast another language as a

Note:

- A second audio program on those TV stations that station might broadcast second audio program. will see the current program hear the other language normal audio.
- If you have SAP on and watching is not broadcast program, the station's not output. However, occasionally at all in **SAP** mode. If this feature to **Stereo** mode.

Using the MTS button

If you press **(MTS)** when : tuned:

- The Analog Audio bar will display Stereo, SAP, Mono as the

If you press **(MTS)** when : tuned:

- The Digital Audio bar will display different audio choices for

If you press **(MTS)** when : selected:

- No Audio bar is displayed

Adjusting the audio

You can adjust the audio quality, bass, treble, and balance.

To adjust the audio quality:

- 1 Press **(MENU)** and open the **Sound** menu.
- 2 Highlight **Audio Setting**.
- 3 Press **(DOWN)** or **(UP)** to highlight **Bass**, **Treble**, or **Balance** and press **(OK)** to adjust.
- 4 Press **(LEFT)** or **(RIGHT)** to adjust:
 - (LEFT)** makes the bass or treble increase the balance (depending on the input).
 - (RIGHT)** makes the bass or treble decrease the balance (depending on the input).

second audio program. If you have SAP on, you will see the current program on the screen but hear the other language instead of the program's normal audio.

If you have SAP on and the station you are watching is not broadcasting a second audio program, the station's normal audio will be output.

However, occasionally there is no sound at all in SAP mode. If this happens, set the MTS feature to Stereo mode.

To use the digital audio selector:

- 1 Press **(MENU)** and open the **Sound** menu.
- 2 Highlight **Digital Audio Selector** and press **(OK)**.

Using the MTS button

If you press

when an analog channel is tuned:

The Analog Audio bar will appear and will display Stereo, SAP, Mono as the options.

If you press

when a digital channel is tuned:

The Digital Audio bar will appear and will offer different audio choices for the digital channel.

If you press

when an external input is selected:

No Audio bar is displayed.



Selecting stereo/SAP broadcasts

The multi-channel TV sound (MTS) feature allows you to output high-fidelity stereo sound. MTS also can transmit a second audio program (SAP) containing a second language, music, or other audio information (not provided by individual stations).

When the TV broadcasts a stereo or SAP broadcast, the word "STEREO" or "SAP" appears on-screen when the MTS feature is only available for analog signals on the ANT/CABLE input.

To listen to stereo sound:

- 1 Press **(MENU)** and open the **Sound** menu.
- 2 Highlight **Audio Setup** and press **(OK)**.
- 3 In the **MTS** field, select **Stereo**.
- 4 To save the new settings, highlight **Done** and press **(OK)**. To reset the settings to the factory defaults, highlight **Reset** and press **(OK)**.

Note:

- You can typically leave the TV in **Stereo** mode. If the stereo sound being broadcast (stereo or mono) is not clear, you can adjust the balance (depending on the item selected).
- If the stereo sound is noisy, select **Mono** to reduce the noise.

1

and open the Sound menu.

Press

2

Highlight Audio Settings and press

3

Press T or S to highlight the item you want to adjust (Bass, Treble, or Balance).

4

Press W or X to adjust the level.

W makes the bass or treble weaker or increases the balance in the left channel (depending on the item selected). X makes the bass or treble stronger or increases the balance in the right channel (depending on the item selected).

Note:

- A second audio program on those TV stations that station might broadcast second audio program. will see the current program hear the other language normal audio.
- If you have SAP on and watching is not broadcast program, the station's normal output. However, occasionally at all in **SAP** mode. If this feature to **Stereo** mode.

Using the MTS button

If you press **(MTS)** when tuned:

- The Analog Audio bar will display Stereo, SAP, Mono as the options.

If you press **(MTS)** when tuned:

- The Digital Audio bar will offer different audio choices for the digital channel.

If you press **(MTS)** when selected:

- No Audio bar is displayed.

Adjusting the audio

You can adjust the audio quality, bass, treble, and balance.

To adjust the audio quality:

- 1 Press **(MENU)** and open the
- 2 Highlight **Audio Setting**
- 3 Press **▼** or **▲** to highlight adjust (**Bass**, **Treble**, or
- 4 Press **◀** or **▶** to adjust
 - **◀** makes the bass weaker or increases the balance (depending on the item selected).
 - **▶** makes the bass stronger or increases the balance

5

To save the new settings, highlight Done and press
. To reset the settings to the factory defaults,
highlight Reset and press

Chapter 6: Using the TV's features

(continued)

To use the digital audio selector:

Note:

- A second audio program

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
45
46
47
48
49
50
51
52

Quick Links:

[Connecting a Home Network](#)

Related Manuals for Toshiba 40UL605U

[TV Toshiba 55UL605U Specifications](#)

1080p hd led tv with clearframe 120hz and net tv (2 pages)

[LCD TV Toshiba 40UX600U Owner's Manual](#)

Integrated high definition lcd television (107 pages)

[LCD TV Toshiba 40UX600U Specifications](#)

1080p hd led tv with clearframe 120hz and net tv (2 pages)

[LCD TV TOSHIBA 55UX600U Owner's Manual](#)

Integrated high definition lcd television (101 pages)

[LCD TV Toshiba 40RV52U Service Manual](#)

Lcd color television (18 pages)

[LCD TV Toshiba 32C120U User Manual](#)

Integrated high definition lcd television (130 pages)

[LCD TV Toshiba 40E220U User Manual](#)

Integrated hd lcd television (130 pages)

[LCD TV Toshiba 40XV648U Owner's Manual](#)

Integrated high definition lcd tv (70 pages)

[LCD TV Toshiba 32LV665D Owner's Manual](#)

(52 pages)

[LCD TV Toshiba 32AV700E Owner's Manual](#)

Lcd colour tv (32 pages)

[LCD TV Toshiba 22AV700A Owner's Manual](#)

Integrated digital lcd tv (48 pages)

[LCD TV Toshiba 32P2400 Series Owner's Manual](#)

(32 pages)

[LCD TV Toshiba 32 LK3A Series Operating Instructions Manual](#)

(38 pages)

[LCD TV Toshiba 40L28 Series Operating Instructions Manual](#)

(37 pages)

[LCD TV Toshiba 40LV933G Service Manual](#)

(47 pages)

[LCD TV Toshiba 40L3443DG Service Manual](#)

Lcd color television (36 pages)

Related Content for Toshiba 40UL605U

[40L3400U Selecting Stereo/Sap Broadcasts](#)

Toshiba 40L3400U

[Regza 42RV535U Selecting Stereo/Sap Broadcasts](#)

Toshiba Regza 42RV535U

[26AV52R Selecting Stereo/Sap Broadcasts](#)

Toshiba 26AV52R

[32E20U Selecting Stereo/Sap Broadcasts](#)

Toshiba 32E20U

[40G30U Selecting Stereo/Sap Broadcasts](#)

Toshiba 40G30U

[26AV52U Selecting Stereo/Sap Broadcasts](#)

Toshiba 26AV52U

[26HL37 Selecting Stereo/Sap Broadcasts](#)

Toshiba 26HL37

[Regza 40XV645U Selecting Stereo/Sap Broadcasts](#)

Toshiba Regza 40XV645U

This manual is also suitable for:

46ul605u55ul605u46ul60555ul60540ul605