

Disabling The Touchpad Automatically - Asus R300A User Manual

 
User's manual for english edition

| |
|-------------------|
| 1 |
| Table Of Contents |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| 15 |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122



•

Table of Contents

•

Bookmarks



Disabling the touchpad automatically

You can automatically disable the touchpad when an external USB mouse is attached.

To disable the touchpad:

Go to Control Panel. Change view settings to Large Icons then
1.
select Mouse.

Select the ELAN tab.

2.

Tick the box with the Disable when external pointing device

3.

plug in option.

Select Apply to save current changes or Select OK to save changes

4.

then exit.

60

Notebook PC User Manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
57
58
59
60
61
62
63
64

Quick Links:

[Memory \(Ram\)](#)

Related Manuals for Asus R300A

[Laptop Asus S400CA E-Manual](#)

(102 pages)

[Laptop Asus Q301LA E-Manual](#)

User's manual for english edition (126 pages)

[Laptop Asus R301UA E-Manual](#)

(108 pages)

[Laptop Asus X302LA E-Manual](#)

(118 pages)

[Laptop Asus A55A Manual](#)

(118 pages)

[Laptop Asus K95VM Manual](#)

Notebook pc (122 pages)

[Laptop Asus A451CA E-Manual](#)

User's manual for english edition (114 pages)

[Laptop Asus F102BA E-Manual](#)

User's manual for english edition (122 pages)

[Laptop Asus X205T E-Manual](#)

Notebook pc (110 pages)

[Laptop ASUS Notebook PC E-Manual](#)

Notebook pc (120 pages)

[Laptop Asus TP550L User Manual](#)

(118 pages)

[Laptop Asus X540L E-Manual](#)

(112 pages)

[Laptop Asus S400C User Manual](#)

(30 pages)

[Laptop ASUS T100 Series E-Manual](#)

T100 series notebook pc (104 pages)

[Laptop Asus X555B E-Manual](#)

(116 pages)

[Laptop Asus ROG G Series E-Manual](#)

Gaming notebook pc (106 pages)

Related Content for Asus R300A

[U32VJ Disabling The Touchpad Automatically](#)

Asus U32VJ

[R405CA Disabling The Touchpad Automatically](#)

Asus R405CA

[R403C Disabling The Touchpad Automatically](#)

Asus R403C

[ASUSPRO ESSENTIAL P45VA Disabling The Touchpad Automatically](#)

Asus ASUSPRO ESSENTIAL P45VA

[ASUSPRO ESSENTIAL P55VA Disabling The Touchpad Automatically](#)

Asus ASUSPRO ESSENTIAL P55VA

[ASUS ZENBOOK UX31A Disabling The Touchpad Automatically](#)

Asus ASUS ZENBOOK UX31A

[A45VG Disabling The Touchpad Automatically](#)

Asus A45VG

[N76VM Disabling The Touchpad Automatically](#)

Asus N76VM

This manual is also suitable for:

[R402aR402uR502aR502uS401aS401u ... Show all](#)