

Battery Charging Notice - Toshiba PSPA3C-SD402E User Manual

User manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Power and Power-Up Modes

Charging time (hours)

Battery type

Battery pack _____

RTC battery _____

The charging time when the computer is on is affected by ambient temperature, the temperature of the computer and how you use the computer.

If you make heavy use of external devices, for example, the battery might scarcely charge at all during operation. Refer also to the section



Maximizing battery operating time. The same factors affect charge time.

Battery charging notice

The battery may not charge right away under the following conditions:



The battery is extremely hot or cold. To make sure the battery charges to its full capacity, charge the battery at room temperature of 10° to 30°C (50° to 86°F).



The battery is nearly completely discharged. Leave the AC adapter connected for a few minutes and the battery should begin charging. *Once a battery pack is fully charged, it is recommended that you operate the computer only on battery power until the battery pack completely discharges. Doing so extends battery life and helps ensure accurate monitoring of battery capacity.*

The Battery indicator may show a rapid decrease in battery operating time when you try to charge a battery under the following conditions:



The battery has not been used for a long time.



The battery has completely discharged and been left in the computer for a long time.



A cool battery is installed in a warm computer. In such case, follow the steps below.

1. Fully discharge the battery by leaving it in the computer with the power on until the power automatically shuts off.
2. Plug in the AC adapter.
3. Charge the battery until the Battery indicator glows blue.

Repeat these steps two or three times until the battery recovers normal capacity.

Leaving the AC adapter connected will shorten battery life. At least once a week, run the computer on battery power until the battery is fully discharged, then recharge the battery.

6-8

Power on

about 12 or longer

about 24

Power off

about 4 or longer

about 24 with AC or

Battery pack

User's Manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

[1](#)
[...](#)
[97](#)
[98](#)
[99](#)
[100](#)
[101](#)
[102](#)
[103](#)
[104](#)

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[Satellite L500 Battery Charging Notice](#)

Toshiba Satellite L500

[Satellite Pro R50-B Series Battery Charging Notice](#)

Toshiba Satellite Pro R50-B Series

[C70-B Battery Charging Notice](#)

Toshiba C70-B

[C70-C Battery Charging Notice](#)

Toshiba C70-C

[Satellite S50-C Series Battery Charging Notice](#)

Toshiba Satellite S50-C Series

[Satellite Radius 14 L40W-C Battery Charging Notice](#)

Toshiba Satellite Radius 14 L40W-C

[L70-C Battery Charging Notice](#)

Toshiba L70-C

[Satellite C40-B Battery Charging Notice](#)

Toshiba Satellite C40-B

This manual is also suitable for:

[PspaaU-01200sPspadC-ma605cPspagu-00j00xP100](#)