

Lcd Panel; Hard Disk Drive - Toshiba PSPA3C-SD402E User Manual

User manual

| |
|-------------------|
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |
| 7 |
| 8 |
| 9 |
| 10 |
| 11 |
| 12 |
| 13 |
| 14 |
| Table Of Contents |
| 15 |
| 16 |
| 17 |

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Troubleshooting

Keyboard

Keyboard problems can be caused by your setup configuration. For more information refer to Chapter 5,

Problem

Output to screen is garbled.

LCD panel

Problem

Lines appear broken.

No display

Problems above remain unresolved or other problems occur.

Hard disk drive

Problem

Computer does not boot from hard drive.

Slow performance

9-6

The

Keyboard.

Procedure

Make sure the software you are using is not remapping the keyboard. Remapping involves reassigning the meaning of each key. See your software's documentation.

If you are still unable to use the keyboard, consult your dealer.

Procedure

Check if you are in DOS mode. In DOS, lines may appear broken, because of the LCD screen's higher resolution. The Windows display should appear normal.

Press hotkeys Fn + F5 to change the display priority, to make sure it is not set for an external monitor.

Make sure instant security was not activated. Try entering your password, if you have one registered. Or, turn the power off and back on to clear instant security.

Refer to your software's documentation to determine if the software is causing the difficulty.

Contact your dealer if the problems continue.

Procedure

Insert a system diskette and reboot.

There may be a problem with your operating system files. Refer to your operating system documentation.

Your files may be fragmented. Run SCANDISK and defragmenter to check the condition of your files and disk. Refer to your operating system documentation or online HELP for information on running SCANDISK and the defragmenter.

Contact your dealer if the problems continue.

[User's Manual](#)

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1

...

131

132

133

134

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[M645-S4080 Figure 4.41 Removing The Lcd Hinges From The Lcd Panel](#)

Toshiba M645-S4080

[Satellite L630 Series Lcd Panel](#)

Toshiba Satellite L630 Series

[Satellite P500 Lcd Panel](#)

Toshiba Satellite P500

[X200 Series Lcd Panel](#)

Toshiba X200 Series

[Satellite A300 Lcd Panel](#)

Toshiba Satellite A300

[Satellite L350 series Lcd Panel](#)

Toshiba Satellite L350 series

[PORTEGE M780 Lcd Unit/Touch Panel/Digitizer](#)

Toshiba PORTEGE M780

[PORTÉGÉ M750 Lcd Unit/Touch Panel/Digitizer](#)

Toshiba PORTÉGÉ M750

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)