

Diskette Drive; Memory Card - Toshiba PSPA3C-SD402E User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Troubleshooting

Diskette drive

For information on diskette care refer to Chapter 4,

Problem

Some programs run
correctly, but others do
not

You cannot access the
diskette drive probably

causing the

PC Card

Refer also to Chapter 8,

Problem

PC Card error occurs

Memory Card

Refer also to Chapter 8,

Problem

Memory card error
occurs

9-10

Procedure

The software or hardware configuration may be causing a problem. Make sure the hardware configuration match's your software's needs.

Try another disk. If you can access this disk, the original disk (not the disk drive) is problem.

If problems persist, contact your dealer.

Optional

Devices.

Procedure

Reseat the PC Card to make sure it is firmly connected.

Make sure the connection between the external device and the card is firm.

Check the card's documentation.

If problems persist, contact your dealer.

Optional

Devices.

Procedure

Reseat the memory card to make sure it is firmly connected.

Check the card's documentation.

If problems persist, contact your dealer.

Operating

Basics.

User's Manual

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1

...

135

136

137

138

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[T1100 PLUS Diskette Drive Parts](#)

Toshiba T1100 PLUS

[Satellite A500 series Usb Floppy Diskette Drive](#)

Toshiba Satellite A500 series

[Satellite A205 Series Connecting An Optional External Diskette Drive](#)

Toshiba Satellite A205 Series

[Satellite L630 Series Diskette Drive](#)

Toshiba Satellite L630 Series

[Satellite L500 Usb Floppy Diskette Drive](#)

Toshiba Satellite L500

[Portege 2010 Connecting The Optional External Usb Diskette Drive](#)

Toshiba Portege 2010

[Tecra 500CS Connect The External Diskette Drive](#)

Toshiba Tecra 500CS

[L550 Usb Floppy Diskette Drive](#)

Toshiba L550

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)