



# Sound System; Pointing Device - Toshiba PSPA3C-SD402E User Manual

User manual



 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18  
19  
20  
21  
22  
23  
24  
25  
26  
27  
28  
29  
30  
31  
32  
33  
34  
35  
36  
37  
38  
39  
40  
41  
42  
43  
44  
45  
46  
47  
48  
49  
50  
51  
52  
53  
54  
55  
56  
57  
58  
59  
60  
61  
62  
63  
64  
65  
66  
67

68  
69  
70  
71  
72  
73  
74  
75  
76  
77  
78  
79  
80  
81  
82  
83  
84  
85  
86  
87  
88  
89  
90  
91  
92  
93  
94  
95  
96  
97  
98  
99  
100  
101  
102  
103  
104  
105  
106  
107  
108  
109  
110  
111  
112  
113  
114  
115  
116  
117

118  
119  
120  
121  
122  
123  
124  
125  
126  
127  
128  
129  
130  
131  
132  
133  
134  
135  
136  
137  
138  
139  
140  
141  
142  
143  
144  
145  
146  
147  
148  
149  
150  
151  
152  
153  
154  
155  
156  
157  
158  
159  
160  
161  
162  
163  
164  
165  
166  
167

168  
169  
170  
171  
172



•

Table of Contents



- 

Troubleshooting

•

## Bookmarks





---

## Sound system

### Problem

No sound is heard



## Pointing device

If you are using a USB mouse, also refer to the and to your mouse documentation.

## *Touch Pad*

### Problem

On-screen pointer does

not respond to Touch

Pad operation

Double-tapping does

not work

The mouse pointer

moves too fast or too

slow

**User's Manual**

**Procedure**

Adjust the volume control dial.

Check the software volume settings.

Make sure the headphone connection is secure. Check Windows Device Manager. Make sure the sound function is enabled and that settings for I/O address, Interrupt level and DMA are correct for your software and do not conflict with other hardware devices that you have connected to the computer.

If problems persist, contact your dealer.

**Procedure**

The system might be busy. If the pointer is shaped as an hourglass, wait for it to resume its normal shape and try again to move it. You may also press Fn + F9 to enable the Touch Pad and then try again to move it.

Try changing the double-click speed setting in the mouse control utility.

1. Open the Control Panel, select the Printers and Other Hardware icon and press Enter.
2. Select the Mouse icon and press Enter.
3. Click the Buttons tab.
4. Set the double-click speed as instructed and click OK.

Try changing the speed setting in the mouse

control utility.

---

1. Open the Control Panel, select the Printers and Other Hardware icon and press Enter.
  2. Select the Mouse icon and press Enter.
  3. Click the Pointer Options tab.
  4. Set the speed as instructed and click OK.
- If problems persist, contact your dealer.

**Troubleshooting**

**USB**

section in this chapter

**9-11**

[Table of Contents](#)

[Previous Page](#)  
[Next Page](#)



1

...

136

137

138

139

## Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

## Related Content for Toshiba PSPA3C-SD402E

[PT930 Sound System](#)

Toshiba PT930

[Satellite Pro R50-D Series Sound System And Video Mode](#)

Toshiba Satellite Pro R50-D Series

[Satellite Pro L70-B Series Sound System Problems](#)

Toshiba Satellite Pro L70-B Series

[Satellite Radius 12 P20W-C Sound System And Video Mode](#)

Toshiba Satellite Radius 12 P20W-C

[PORTEGE Z30-E Sound System And Video Mode](#)

Toshiba PORTEGE Z30-E

[L70-B Sound System And Video Mode](#)

Toshiba L70-B

[PORTEGE R30-A Series Sound System And Video Mode](#)

Toshiba PORTEGE R30-A Series

[Satellite P75-A Sound System And Video Mode](#)

Toshiba Satellite P75-A

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)