

Front With The Display Open - Toshiba PSPA3C-SD402E User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

•

Troubleshooting

•

Bookmarks



Memory Module Slot

Wireless LAN Cover

Hard Disk Drive



Front with the display open

The following figure shows the front of the computer with the display open. To open the display, slide the display latch on the front of the display and lift up. Position the display at a comfortable viewing angle.

Display

Screen

Power

Button

Left Speaker

User's Manual

Use this socket to install a memory module to increase your computer's memory. Refer to the

[Memory expansion](#)



Optional

This cover protects the Wireless LAN bay and, if installed, the Wireless LAN card.

The removable hard disk drive occupies this bay on the bottom-side of the computer. This is convenient for upgrading to higher capacity drives, or for removing for security purposes when you intend to be away from your computer for a considerable period of time.

DC IN LED

Battery

LED

Power LED

The front with the display open

section in Chapter 8,

Devices.

Internet Button

CD/DVD Button

Play/Pause

Stop

Previous

Next

Touch Pad

Touch Pad Control

Buttons

Hard Disk

Multiple Digital

Drive LED

Media Card Slot

Access LED

The Grand Tour

Right

Speaker

2-7

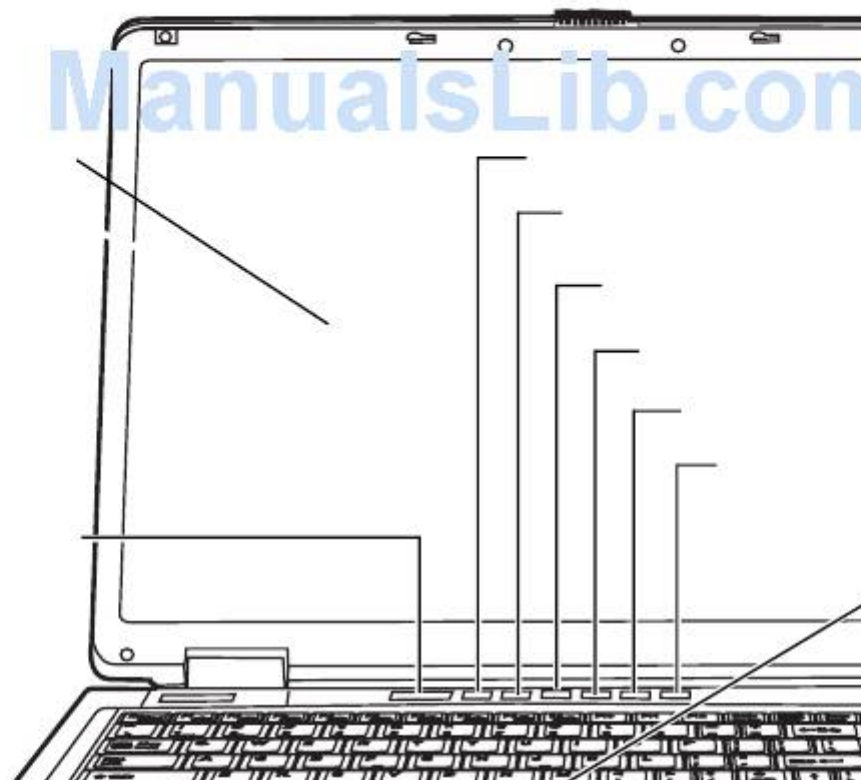


Table of Contents

[Previous Page](#)
[Next Page](#)

1
...
40
41
42
43
44
45
46
47

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[PT930 Front With The Display Open](#)

Toshiba PT930

[Satellite Pro R50-D Series Front With The Display Open](#)

Toshiba Satellite Pro R50-D Series

[Satellite Radius 12 P20W-C Front With The Display Open](#)

Toshiba Satellite Radius 12 P20W-C

[PORTEGE Z30-E Front With The Display Open](#)

Toshiba PORTEGE Z30-E

[L70-B Front With The Display Open](#)

Toshiba L70-B

[Satellite P75-A Front With The Display Open](#)

Toshiba Satellite P75-A

[Satellite L855 Series Front With The Display Open](#)

Toshiba Satellite L855 Series

[L50t Front With The Display Open](#)

Toshiba L50t

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)