

Keyboard Indicators; Optical Disc Drive - Toshiba PSPA3C-SD402E User Manual

User manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



The Grand Tour

Keyboard Indicators

Caps Lock

Scroll Lock

Num Lock

Optical Disc drive



One of the following optical disc drives is installed in the computer, either a DVD-ROM and CD-R/RW drive or a DVD Super Multi drive (providing

either single layer or double layer support, depending on the configuration of your computer). An ATAPI interface controller is used for CD/DVD-ROM operation. When the computer is accessing a disc, an indicator on the drive glows.

Region codes for DVD drives and media

The disc drive and its media are manufactured according to the specifications of six marketing regions. When you purchase DVD-Video, make sure it matches your drive, otherwise it will not play properly.

Code

2-10

Caps Lock

Region

1

Canada, United States

2

Japan, Europe, South Africa, Middle East

3

Southeast Asia, East Asia

4

Australia, New Zealand, Pacific Islands, Central America, South America, Caribbean

5

Russia, Indian Subcontinent, Africa, North Korea, Mongolia

6

China

Scroll Lock

The Caps Lock icon lights when you press the Caps Lock key. When this light is on, pressing a letter key on the keyboard produces an uppercase (capital) letter.

When the Scroll Lock icon lights blue, the Scroll Lock function, as defined within the software you are using, is active.

You can use the keypad for numeric input when the Num Lock icon lights blue.



ManualsLib.com

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
43
44
45
46
47
48
49
50

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[U940 Keyboard Indicators](#)

Toshiba U940

[L550 Keyboard Indicators](#)

Toshiba L550

[Satellite A300 Keyboard Indicators](#)

Toshiba Satellite A300

[TECRA S5 Keyboard Indicators](#)

Toshiba TECRA S5

[Satellite L350 series Keyboard Indicators](#)

Toshiba Satellite L350 series

[NB520 Keyboard Indicators](#)

Toshiba NB520

[TECRA A10 Satellite Pro S300 Series Keyboard Indicators](#)

Toshiba TECRA A10 Satellite Pro S300 Series

[mini NB200 series Keyboard Indicators](#)

Toshiba mini NB200 series

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)