

Writable Discs - Toshiba PSPA3C-SD402E User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Writable discs

This section describes the types of writable discs. Check the specifications of your drive for the type of discs it can write. Use Record Now! to write compact discs. Refer to Chapter 4,

CDs



CD-R discs can be written only once. The recorded data cannot be erased or changed.



CD-RW discs can be recorded more than once. Use either 1, 2, or 4 multi speed CD-RW discs or high-speed 4- to 10-speed discs. The write speed of the ultra-speed CD-RW discs is maximum 24-speed.

DVDs



DVD-R and DVD+R discs can be written only once. The recorded data cannot be erased or changed.



DVD-RW, DVD+RW and DVD-RAM discs can be recorded more than once.

The full-size DVD-ROM and CD-R/RW drive...

The full-size DVD-ROM&CD-R/RW drive module lets you record data to rewritable CDs as well as run either 12 cm (4.72") or 8 cm (3.15") discs without using an adapter.

The read speed is slower at the center of a disc and faster at the other edge.

DVD read

CD read

CD-R write

CD-RW write

User's Manual

Operating

Basics.



8 speed (maximum)

24 speed (maximum)

24 speed (maximum)

24 speed (maximum, ultra-speed media)

The Grand Tour

2-11

ManualsLib.com

[Previous Page](#)
[Next Page](#)

1
...
44
45
46
47
48
49
50
51

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[Satellite P500 Writable Discs](#)

Toshiba Satellite P500

[Satellite Pro R50-B Series Writable Discs](#)

Toshiba Satellite Pro R50-B Series

[C70-B Writable Discs](#)

Toshiba C70-B

[R30-C Writable Discs](#)

Toshiba R30-C

[C70-C Writable Discs](#)

Toshiba C70-C

[L70-C Writable Discs](#)

Toshiba L70-C

[Satellite C40-B Writable Discs](#)

Toshiba Satellite C40-B

[Satellite Pro R50-C Writable Discs](#)

Toshiba Satellite Pro R50-C

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)