

Connecting A Lan Cable; Disconnecting The Lan Cable - Toshiba PSPA3C-SD402E User Manual

User manual

 
1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Operating Basics

Connecting a LAN cable

The computer must be configured properly before connecting to a LAN. Logging onto a LAN using the computer's default settings could cause a malfunction in LAN operation. Check with your LAN administrator regarding set-up procedures.




If you are using Fast Ethernet LAN (100 megabits per second, 100BASE-TX), be sure to connect with a CAT5 cable. You cannot use a CAT3 cable.

If you are using Ethernet LAN (10 megabits per second, 10BASE-T),

you can connect with either a CAT5 or a CAT3 cable.

If you use Gigabit Ethernet LAN (1000 megabits per second, 1000BASE-T), be sure to connect with either a CAT5e or CAT6 cable.

To connect the LAN cable, follow the steps below.

1. Turn off the power to the computer and to all external devices connected to the computer. 
2. Plug one end of the cable into the LAN jack. Press gently until you hear the latch click into place.
3. Plug the other end of the cable into a LAN hub connector. Check with your LAN administrator before connecting to a hub.

Disconnecting the LAN cable

To disconnect the LAN cable, follow the steps below.

1. Pinch the lever on the connector in the computer's LAN jack and pull out the connector.
2. Disconnect the cable from the LAN hub in the same manner. Check with your LAN administrator before disconnecting from the hub.

4-6

Connecting a LAN cable

User's Manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
65
66
67
68
69
70
71
72

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[portege z20t-b Connecting The Lan Cable](#)

Toshiba portege z20t-b

[Satellite C50-C Connecting The Lan Cable](#)

Toshiba Satellite C50-C

[Satellite A500 series Connecting The Lan Cable](#)

Toshiba Satellite A500 series

[SATELLITE R850 Connecting The Lan Cable](#)

Toshiba SATELLITE R850

[NB500 Connecting The Lan Cable](#)

Toshiba NB500

[Satellite L630 Series Connecting Lan Cable](#)

Toshiba Satellite L630 Series

[Satellite P500 Connecting Lan Cable](#)

Toshiba Satellite P500

[Satellite L500 Connecting The Lan Cable](#)

Toshiba Satellite L500

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)