

Express Media Player - Toshiba PSPA3C-SD402E User Manual

User manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Operating Basics


CD/DVD play control buttons

In addition to the power button, the following four buttons control functions of the optical disc drive and digital audio data playback:

Play/Pause

Stop

Next 

Previous 

If Random or Shuffle is selected in Windows or Previous advances to a random selection.

Express Media Player

Express Media Player is a quick play feature that enables users to perform, DVD and CD playback.

Notes for Express Media Player

Express Media Player (CD) and Express Media Player (DVD) Usage



Dirty or scratched CD/DVDs might not be playable. In addition, the CD/DVD might not be removable if the dirt or scratches are serious.



Press the personal computer's power switch for five seconds or more to force it to shut down, you can open the drawer by inserting slender object (about 15mm) into the eject hole. Refer to the Loading compact discs section in Chapter 4,

Express Media Player (DVD) Usage



The DVD-Video will be played in a manner as programmed by the producer. Express Media Player (DVD) plays the disc according to the way the DVD-Video is programmed by the producer, and hence, sometimes it might not work as expected.



() might appear on screen during operation. When () is displayed, it means that Express Media Player (DVD) or DVD-Video prohibits that particular operation from being carried out.



Please also read the instructions that come with the DVD that you want to play.



Depending on the DVD being played, there might be dropping of frames or skipping of audio.



The DVD can only be played on the LCD display of the computer. External video output is not supported.





For DVD titles with parental control, scenes set in advance as DVD-Video can be played. The level setting for the parental control is not supported.

4-14

Starts or pauses play

Stops play 

Advances to the next track, chapter or data

Returns to the previous track, chapter or data

Operating

Basics.

®

Media Player, selecting Next

User's Manual

[Table of Contents](#)

[Previous Page](#)
[Next Page](#)

1
...
73
74
75
76
77
78
79
80

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[Tecra A3 Express Media Player](#)

Toshiba Tecra A3

[Satellite M40 Express Media Player](#)

Toshiba Satellite M40

[Satellite P100 Series Creating An Express Media Player Recovery Cd](#)

Toshiba Satellite P100 Series

[PSAAKC-VA104C Express Media Player](#)

Toshiba PSAAKC-VA104C

[Satellite M40X-119 Express Media Player](#)

Toshiba Satellite M40X-119

[Satellite M40 Express Media Player](#)

Toshiba Satellite M40

[Satellite A80-127 Express Media Player](#)

Toshiba Satellite A80-127

[M70 Express Media Player](#)

Toshiba M70

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)