

Media Care; Diskettes - Toshiba PSPA3C-SD402E User Manual

User manual

1
2
3
4
5
6
7
8
9
10
11
12
13
14
Table Of Contents
15
16
17

18
19
20
21
22
23
24
25
26
27
28
29
30
31
32
33
34
35
36
37
38
39
40
41
42
43
44
45
46
47
48
49
50
51
52
53
54
55
56
57
58
59
60
61
62
63
64
65
66
67

68
69
70
71
72
73
74
75
76
77
78
79
80
81
82
83
84
85
86
87
88
89
90
91
92
93
94
95
96
97
98
99
100
101
102
103
104
105
106
107
108
109
110
111
112
113
114
115
116
117

118
119
120
121
122
123
124
125
126
127
128
129
130
131
132
133
134
135
136
137
138
139
140
141
142
143
144
145
146
147
148
149
150
151
152
153
154
155
156
157
158
159
160
161
162
163
164
165
166
167

168
169
170
171
172



•

Table of Contents

-

Troubleshooting

•

Bookmarks



Operating Basics



Make sure writing or rewriting is completed before going into standby/ hibernation. Writing is completed if you can open the drive tray.



Set the computer on a level surface and avoid places subject to vibration such as airplanes, trains or cars. Do not use an unstable surface such as a stand.



Keep mobile phones and other wireless communication devices away

from the computer.



Always copy data from the hard disk drive to the DVD-RAM media. Do not use cut-and-paste as the original data will be lost if there is a write error.

Media Care

This section provides tips on protecting data stored on your discs and diskettes.

Handles your media with care. The following simple precautions will increase the lifetime of your media and protect the data stored on them:

1. Store your discs in the container they came in to protect them and keep them clean.

2. Do not bend the disc.

3. Do not write on, apply a sticker to, or otherwise mar the surface of the disc that contains data.

4. Hold the disc by its outside edge or the edge on the center hole.

Fingerprints on the surface can prevent the drive from properly reading data.

5. Do not expose to direct sunlight, extreme heat or cold. Do not place heavy objects on your discs.

6. If your discs become dusty or dirty, wipe them with a clean dry cloth.

Wipe from the center out, do not wipe in a circular direction around the disc. If necessary, use a cloth dampened in water or a neutral cleaner.

Do not use benzine, thinner or similar cleaner.

Diskettes

1. Store your diskettes in the container they came in to protect them and keep them clean. If a diskette is dirty, do not use cleaning fluid. Clean it with a soft damp cloth.

2. Do not slide back the diskette's protective metal covering or touch the diskette's magnetic surface. Fingerprints may prevent the diskette drive from reading data from the diskette.

3. Data may be lost if the diskette is twisted; bent; or exposed to direct

sunlight, extreme heat or cold.

4. Do not place heavy objects on your diskettes.

5. Do not eat, smoke, or use erasers near your diskettes. Foreign particles inside the diskette's jacket can damage the magnetic surface.

4-24

User's Manual

[Table of Contents](#)

[Previous Page](#)

[Next Page](#)

1
...
83
84
85
86
87
88
89
90

Related Manuals for Toshiba PSPA3C-SD402E

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

Pc (314 pages)

[Laptop Toshiba Satellite P100 Series Maintenance Manual](#)

(311 pages)

[Laptop Toshiba P105 S6197 - Satellite - Core 2 Duo 1.6 GHz User Manual](#)

Toshiba online users guide for satellite p105 (280 pages)

[Laptop Toshiba P100/P105 User Manual](#)

Toshiba satellite p100/p105 series user's guide (280 pages)

[Laptop Toshiba P100-ST9732 User Manual](#)

P100-st9732 user's guide (278 pages)

[Laptop Toshiba P105-S9337 User Manual](#)

P105-s9337 user's guide (278 pages)

[Laptop Toshiba P100-ST7211 User Manual](#)

P100-st7211 user's guide (275 pages)

[Laptop Toshiba P100-ST1072 User Manual](#)

P100-st1072 user's guide (237 pages)

[Laptop Toshiba Satellite P100 Series User Manual](#)

(196 pages)

[Camcorder Toshiba PA3943U-1CAM Camileo P100 User Manual](#)

Pa3943u-1cam camileo p100 user's guide (146 pages)

[Laptop Toshiba Satellite P100/P105Series Resource Manual](#)

Toshiba laptop pc user's guide (72 pages)

[Laptop Toshiba Satellite P100 Specifications](#)

Toshiba satellite p100: specifications (2 pages)

[Laptop Toshiba P25-S477 User Manual](#)

P25-s477 user's guide (232 pages)

[Laptop Toshiba P205-S6277 User Manual](#)

P205-s6277 user's guide (242 pages)

[Laptop Toshiba Satellite P20-8PW User Manual](#)

Toshiba satellite p20-8pw: user guide (142 pages)

[Laptop Toshiba PSPCDC-03H00C User Manual](#)

User manual (185 pages)

Related Content for Toshiba PSPA3C-SD402E

[Satellite C660 Series Media Care](#)

Toshiba Satellite C660 Series

[Satellite Pro L450 Series Media Care](#)

Toshiba Satellite Pro L450 Series

[Satellite L650D Series Media Care](#)

Toshiba Satellite L650D Series

[Satellite Pro A300D Series Media Care](#)

Toshiba Satellite Pro A300D Series

[Satellite Pro R50-B series Media Care](#)

Toshiba Satellite Pro R50-B series

[Tecra X40-D Media Care](#)

Toshiba Tecra X40-D

[AC100 Media Care](#)

Toshiba AC100

[portege z20t-b Media Care](#)

Toshiba portege z20t-b

This manual is also suitable for:

[PspaaU-01200sPspadc-ma605cPspagu-00j00xP100](#)